

COMPUTER INTERFACE

The Computer Interface connects to the serial port of your PC. When you run the ActiveHome software, timer events, macros and other functions are downloaded to the interface through the serial cable.

Batteries in the interface keep its clock running if the power fails, so when the power is restored any timed events are resumed automatically.

Install the interface as follows:



- 1. Connect one end of the interface cable to your computer.**



- 2. Plug the other end of the cable into the Computer Interface.**



- 3. Plug the Computer Interface into a convenient AC outlet**

Continued...

