

To turn All Lights and appliances Off

Press the BOTTOM of the All Lights On/All Units Off key to instantly turn off ALL Modules (which are set the same Housecode as the Mini Controller), including Appliance Modules.

The Finder Label is a convenient place to indicate the locations of lights and appliances controller by your system. There is one box for each unit key.

Problem Solving

If a particular Module won't go on or off from the buttons on the Mini Controller:

Check that you have power to the outlet controlling the Module and the switch on the light or appliance is ON.

Check that the Unit Code on the Module is set to the correct number. Check that the Housecode on the Module is set correctly. The Housecode on the Module and the Mini Controller must be set to the same letter.

Try plugging the Module and the Mini Controller into the same outlet. If the Module doesn't work in ANY outlet, not even with the Module and the Mini Controller in the same duplex receptacle (top and bottom) the Module may be damaged or faulty.

If you can't control ANY Modules from the Mini Controller

Check that you have power to the outlet for the Mini Controller.

Check that the Housecode on the Mini Controller is set correctly.

Try plugging the Module and the Mini Controller into the same outlet. If NONE of your Modules work in ANY outlet, not even with the Module and the Mini Controller in the same duplex receptacle (top and bottom) the Mini Controller may be damaged or faulty.

INTERCOM SYSTEMS

Intercom systems which send voice signals over existing electrical wiring may interfere with the operation of the Mini Controller when the intercom is in use. If the Intercom system has it's own separate wiring it will not cause a problem.

POWER INTERRUPTIONS

When the power is restored after an outage, Lamp Modules and Wall Switch Modules will normally be OFF. Appliance Modules will stay as they were before the interruption.

 
MANUAL CONTROL

Lights and appliance connected to plug-in Modules can be turned ON with their own power switch. Simply turn the switch OFF then ON again once or twice. For lamps with three-way bulbs, you will have to rotate the power switch up to 4 times before the light comes on.

The Wall Switch Module can be turned ON or OFF locally using it's push button. The power On-Off switch on the Wall Switch Module is used to completely turn off the power. For example, when changing a light bulb.



Maxi Controller Owner's Guide

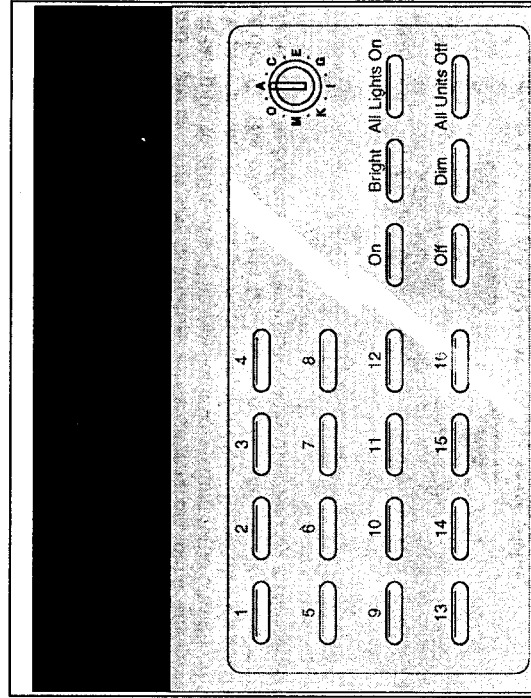

Introduction

 
The **X-10 PRO** Maxi Controller lets you remotely control lights and appliances from anywhere in your home. You can keep by the bedside and turn off the TV without getting out of bed. You can turn off your child's radio or night light from your bedroom. You can turn on ALL lights connected to Lamp Modules and Wall Switch Modules with the push of a button if you hear a suspicious noise at night. You can even turn off everything in the system with one button to save energy. How many times have you gone to bed and left the downstairs light on because you didn't want to get out of bed to turn it off? Now you don't have to.

Keeping in mind that your **X-10 PRO** Maxi Controller will always turn lamps and appliances on or off the instant you press the buttons. That's obvious - but there can be some unexpected consequences if not used with care. For example, an empty coffee pot can be remotely turn on. If that should happen, your coffee pot may be damaged from overheating. If an electric heater is turned on by remote control while clothing is draped over it, a fire could result. Do not use the system for the control of high power heating appliances such as portable heaters.

The **X-10 PRO** Maxi Controller activates lights and appliances throughout your home from any convenient location. The Maxi Controller transmits signals to the Modules over your existing house wiring. You plug lamps into Lamp Modules, plug appliances into Appliance Modules and replace wall light switches with Wall Switch Modules. You can then control virtually everything electrical in your home. You can also dim and brighten lamps.

How it works

The Maxi Controller tells the Modules what to do. Command signals are sent over your existing house wiring to the Module or Modules of your choice. The Modules respond to the command signals. The Lamp Module turns on and off, dims and brightens any incandescent lamp up to 300 watts. The Appliances Module turns on and off appliances such as a TV (not "instant on" TVs), window fan or stereo. It can also be used for a lamp - but cannot dim it. The Wall Switch Module turns on and off, dims and brightens and incandescent light up to 500 watts, which is normally operated by a wall switch.

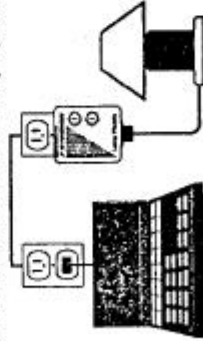


Command signals are sent over existing house wiring.

Setting up the Maxi Controller

- 1 To install your Maxi controller, simply plug the power cord into any functioning 120V outlet.
- 2 Using a small screwdriver, choose one the 16 letters on the Maxi Controller's Housecode dial. All **X-10 PRO** Modules have a similar red Housecode dial. Set the Maxi Controller and all the Modules to be controlled by it to the same Housecode letter.

 Using the Maxi Controller

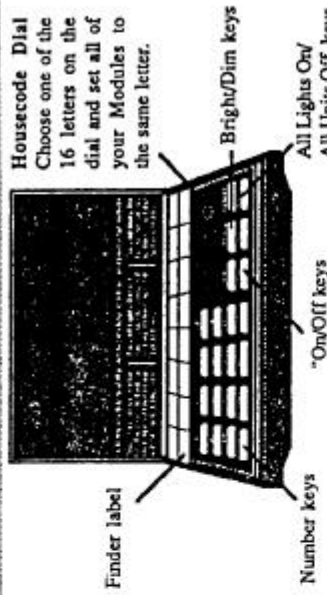

Having 16 choices for the Housecode enables you to set up several independent systems in one home without interaction among them. Also, you can avoid interference with, or from, a neighbour's system by choosing a different Housecode letter.

Install and set up the Modules (sold separately)

- 1 Install and set up all of your **X-10 PRO** Modules referring to the instructions included with them. Be sure to turn off the power at the circuit breaker panel when installing Wall Switch Modules
- 2 Set all of your Modules to the same Housecode as you set on the Mini Controller.
- 3 Set each Module to a Unit Code between 1 and 4 (or between 5 and 8 if you set the Selector Switch on the Mini Controller to 5-8).

To turn ON a light or appliance

Press and release the **BOTTOM** of one of the 4 number keys corresponding to the Unit Code set on the Module to be controlled.

To turn OFF a light of appliance

Press and release the **BOTTOM** of one of the 4 number keys corresponding to the Unit Code set on the Module to be controlled.

The "Selector Switch" selects whether keys 1 thru 4 control Modules set to 1 thru 4 or 5 thru 8.

To Dim or Bright lights

Press and release the **TOP** of the number key for the Lamp Module or Wall Switch Module you wish to Dim or Brighten (you can't Dim or Brighten Appliance Modules). Then press the **TOP** of the Dim/Bright key to Brighten or the **BOTTOM** of the Dim/Bright key to Dim the light. Hold the key pressed until the desired brightness level is reached.

To Turn All Lights On

Press the **TOP** of the All Lights On/ALL Units Off key to instantly turn on ALL lights connected to Lamp Modules and Wall Switch Modules (which are set to the same Housecode as the Mini Controller). This key does not affect Appliance Modules.