

AUDIO, CONT.

PHILIPS	0755	0814
0823	0824	0825
PIIONEER	0837	0866
0867	0878	0893
RADIO SHACK	0706	0754 0793
0806	0865	0866 0867
0868	0875	0878 0879
0827	0845	0866 0867 0870 0871
0872	0875	0878 0879 0449 0895
REALISTIC	0822	
RIO	0405	
SABA	0894	
SAMSUNG	0454	
0705		
SCOTT	0768	
SHARP	0671	0684 0809
SHERWOOD	0706	0806 0858 0859
SKYTT	0725	
0725		
0785	0797	0798 0799 0833
0834	0835	0836 0843 0909
TAO	0725	
TEAC	0710	0807 0855 0856 0857
TECHNICS	0791	0810 0815
0823	0863	0864
TEVION	0448	
VENTURER	0408	
XM RADIO	0708	0725
YAMAHA	0801	0802 0838 0840
0841	0846	0847 0848 0849
ZENITH	0676	0730 0749
0759	0765	0766 0784
0814	0787	0850 0405

CABLE

ABC	0461	0463	0464	0465	0466
ADELPHIA	0512	0511			
ALLLEGRO	0524	0525			
AMERICAST	0527				
ANTROXIX	0468	0469			
ARCHER	0468	0469	0470	0471	
AT&T	0511				
BELL SOUTH	0527				
CABLETENNA	0468				
CABLEVISION	0468				
0506					
CENTURY	0471				
CITIZEN	0471				
COGECO	0511				
COLOR VOICE	0472	0473			
COMCAST	0511				
COMTRONICS	0474	0475			
CONTEC	0476				
DIGITAL MUSIC EXPRESS	0514				
EASTERN	0477				
EVERQUEST	0474				
GARRARD	0471				
GC ELECTRONICS	0469				
GEMINI	0536	0479			
GE	0549				

GENERAL INSTRUMENT (GI)	0509
0461	0465 0511 0513 0518
0530	0531 0514 0464 0463
HAMLIN	0461 0480 0481 0482
HITACHI	0463
ILLICO	0506
JASCO	0471
JERROLD	0509 0461 0465 0518
BELL EXPRESSVU	0463 0464 0520 0526
MAGNAVOX	0485
MEMOREX	0486
MOTOROLA	0509 0465 0513 0518
0530	0531 0464 0511 0526 0463
CHEYENNE	0578 0579
NSC	0487
OAK	0476 0489
PACE	0532
PANASONIC	0460 0508
PARAGON	0486 0488
PHILIPS	0471 0479 0485
0490	0491 0492
PHILIPS-MAGNAVOX	0505 0534
PIONEER	0478 0506 0493 0494
PULSAR	0486
RADIO SHACK	0505 0504 0525
RCA	0460 0471 0507
REALISTIC	0469
REGAL	0482
REGENCY	0477
REMBRANDT	0463
ROGERS	0506
RUNCO	0486
SAMSUNG	0474 0494
SCIENTIFIC ATLANTA	0498 0497
0506	0535 0512 0466 0496
SHAW	0511
SIGNAL	0474
SIGNATURE	0463
GLOBECAST	0554
GO VIDEO	0610
SPRUCER	0460
STANDARD	0499
STARCOM	0461 0518
STARGATE	0474
STAR SIGHT	0507
STAR TRAK	0516
TANDY	0500
TELEVIEW	0474
TEXSCAN	0499
TIME WARNER	0506
TOCOM	0464 0501 0513 0520
TOSHIBA	0486
MITSUBISHI	0641 0632 0638
0629	0630 0607
MOTOROLA	0648 0618
NORSTAT	0601
UNIVERSAL	0468 0469 0470
0471	0502 0524
VIDEOWAY	0504
VIEWSTAR	0475 0485 0487 0500
VIDEO TECH	0550
VIDEOTRON	0506
ZENITH	0503 0525 0471
0486	0521 0522 0523
ZENITH NETWORK	0527

SAT/DTV/WebTV

Where codes are shown like this [###] each one can be used if you have 2 or more of the SAME device.

AMPICA	0575
BELL EXPRESSVU	0654 0476
0655	0628
CHANNEL MASTER	0577
STIS	0568 0570 0571
STAR CHOICE	0640 0645 0627
STAR SIGHT	0633
STAR TRAK	0608
SYLVANIA	0581
STIS	0568 0570 0571
STAR GUIDE	0609
SYLVANIA	0581
TOSHIBA	0641 0632 0638 0629
0630	0607 0572 0624 0625 0631
ULTIMATE TV	0653 0659
UNIDEN	0633 0573 0611
UNITED	0597
VIDEO CIPHER II	0574
WEB TV	0612 0585
ZENITH	0617 0634 0656 0595
0646	0562 0574 0587 0635
ADVENT	0922
AFREY	0417
AIWA	0414
AKAI	0395 0435
AMES	0431
AMW	0917 0918
ANABA	0961
APEX	0386 0390 0391 0392
0424	0430 0436 0439 0445
ASPIRE	0933
A-TREND	0393
AUDIOVOX	0921
AXION	0921
B & K	0978
BLAUPUNKT	0430
BODYSONIC	0417
BOSE	0672
BOSS	0911
BROKSONIC	0932 0967 0394
CENTRIOS	0951 1067 1068 0921
0105	1054 1055 1059 1060
CHANGHONG	0401
CINEVISION	0405
CITECH	1073
CITIZEN	1073
CLASSIC	0431 1051 0401
COBY	0926 0946 0947
0916	0445 0928 0894
CONCEPT	0430
CRITERION	0448
CURTIS INTERNATIONAL	0929
0928	
CYBERHOME	0393 0985 0939
CYTRON	0446 0388
DAEWOO	0440 0441
0444	0971 0965
DENON	0400 0421
DENZEL	0428
DESAY	0958
0636	0649 0637 0622 0658
0653	0650 0651 0652 0698

REALISTIC	0567	0603
SAMSUNG	0594	0583
0613	0616	0619
SHARP	0604	
SKY NETWORK	0614	0615 0646
SIERRA 11111	0561	
SONY	0623	0657 0659 0585 0602
DURABRAND	0449	0405 0446
DVD 2000	0402	
ELTA	0434	0435
EMERSON	0405	0940
0899	0456	0458
ESA	0956	
FARENHEIT	0960	
FISHER	0416	
FUNAI	0456	0458
GE	0409	0430
GOLDSTAR	0405	
GO-VIDEO	0431	0937 0971
0454	0902 0901 0407	0426 0455
GPX	0936	0944
GRADIENTE	0415	
GREENHILL	0430	
HAAZ	0451	0452
HAIER	0935	
HARMAN KARDON	0427	
HITACHI	0404	0407 0428 0419
HITEK	0445	
HUMAX	0912	
ILO	0959	1070
INFINITY	0417	
INSIGNIA	0405	0456
0921	0430	1070
INITIAL	0451	
INTEGRA	0422	
JBL	0427	
JVC	0406	0964 0900
1072	0418	0923
JWIN	0919	
KAWASAKI	0945	0449
KENWOOD	0400	0429
KISS	0428	
KLH	0430	0906 0386
KONKA	0410	0411
0412	0413	0905
KOSS	0415	0388
0894		
LASONIC	0451	0948
LENNOX	0931	0435
0405	0972	0907
LINN	0443	
LITEON	0982 0902 0898 0959	1069
LIQUIDVIDEO	0921	
MAGNAVOX	0398 0408 0979 0981	
0980	0456 0915 0914 0969	
MARANTZ	0398	0405
0408	0423 0981	
MAXENT	0923	
MEDION	0911	0446
0903	0896 0959	
MEMOREX	0446	1050
MERIDIAN	0398	
MICROSOFT	0409	
MINTEC	0430	
MITSUBISHI	0402	
MUSTEK	0431	
MYRON & DAVIS	0962	
NAD	0405	0433
NAKAMICHI	0432	

DIAMOND VISION	0948	
NEXSTECH	0952 0954 0955	
0956	0934 1052 1054 1055	
1056	1057 1063 1064 0449 0949	
DISNEY	0458	
NORCENT	0926 0982	
0927	0925 0928	
DURABRAND	0449	
ONKYO	0422 0975	
OPTIMUS	0404	
ORITRON	0394	
ORITRON	0415 1060	
PANASONIC	0396 0409 0974	
0970	0437 0950 0387	
PACIFIC	0446	
PHILIPS	0398 0408 0423 0755	
0979	0981 0980 0456 0458 0969	
PHILIPS-MAGNAVOX	0398 0408	
0423	0979 0980	
PIONEER	0403 0404 0976	
0977	0968 0909 1084	
PIVA	1075	
POLAROID	0385 0957 0949	
POLAROID	0398 0408 0981	
PORTLAND	0435	
PROLINE	0415	
HARMAN KARDON	0409 0890	
PROSCAN	0431	
PROSONIC	0926	
PYLE	0910	
RADIO SHACK	0449 0453	
RCA	0409 0430 0449	
0453	0920 0890	
REGENT	0931	
REOC	0385	
RIO	0405	
RJ TECHNOLOGY	0373	
ROSEN	0930	
ROTEL	0406	
SABA	0390 0893 0895	
SAMSUNG	0407 0454 0942	
0963	0891 0455	
SAMPO	0417	
SANSUI	0394 0967	
SANSUI	0904 0416	
SEARS	0394 0456	
SEG	0428	
SELECTRON	1077 1078 1079	
1080	1081 1082 1083	
SHARP	0397 0897 0908	
SHERWOOD	0425	
SHINCO	0430	
SHINSONIC	0430	
SONIC BLUE	0937	
SONY	0987 0988 0989	
0399	0986 0389	
0910	0913	
SUNGALE	0456	
SUPERSCAN	0448	
SUPERSONIC	0944	
SV2000	0456	
SYLVANIA	0456 0458	
SYMPHONIC	0456 0458 0899	
TEAC	0404 0449	
TECHNICS	0400	
TECHWOOD	0433 1071	
TERAPIN	0943	
0388	0446 0447	
0448	0450 0451 0452	
0404		

NESA	0430	0962
0952	0954 0955	
0956	0934 1052 1054 1055	
1056	1057 1063 1064 0449 0949	
DISNEY	0458	
NORCENT	0926 0982	
0927	0925 0928	
DURABRAND	0449	
ONKYO	0422 0975	
OPTIMUS	0404	
ORITRON	0394	
ORITRON	0415 1060	
PANASONIC	0396 0409 0974	
0970	0437 0950 0387	
PACIFIC	0446	
PHILIPS	0398 0408 0423 0755	
0979	0981 0980 0456 0458 0969	
PHILIPS-MAGNAVOX	0398 0408	
0423	0979 0980	
PIONEER	0403 0404 0976	
0977	0968 0909 1084	
PIVA	1075	
POLAROID	0385 0957 0949	
POLAROID	0398 0408 0981	
PORTLAND	0435	
PROLINE	0415	
HARMAN KARDON	0409 0890	
PROSCAN	0431	
PROSONIC	0926	
PYLE	0910	
RADIO SHACK	0449 0453	
RCA	0409 0430 0449	
0453	0920 0890	
REGENT	0931	
REOC	0385	
RIO	0405	
RJ TECHNOLOGY	0373	
ROSEN	0930	
ROTEL	0406	
SABA	0390 0893 0895	
SAMSUNG	0407 0454 0942	
0963	0891 0455	
SAMPO	0417	
SANSUI	0394 0967	
SANSUI	0904 0416	
SEARS	0394 0456	
SEG	0428	
SELECTRON	1077 1078 1079	
1080	1081 1082 1083	
SHARP	0397 0897 0908	
SHERWOOD	0425	
SHINCO	0430	
SHINSONIC	0430	
SONIC BLUE	0937	
SONY	0987 0988 0989	
0399	0986 0389	
0910	0913	
SUNGALE	0456	
SUPERSCAN	0448	
SUPERSONIC	0944	
SV2000	0456	
SYLVANIA	0456 0458	
SYMPHONIC	0456 0458 0899	
TEAC	0404 0449	
TECHNICS	0400	
TECHWOOD	0433 1071	
TERAPIN	0943	
0388	0446 0447	
0448	0450 0451 0452	
0404		

TIVO	0912	0909
TOSHIBA	0394 0398 0973 0924 0983	
0941		
TRUTECH	1053	
UNITED	0449	
VENTURER	0449	
WHARFEDALE	0442	0417
WHITE WESTINGHOUSE	0458	
X-BOX	0409	
XENIUS	0388	
YAMAHA	0400	0420
0979	0980 0408	
0438	04	