

StyleSwitch™ Gold (Model SS15A) Installation and operating instructions

The SS15A works with the RR501 (part of the RC5000) and the TM751 (part of the RC6500). It lets you turn on and off three individually coded X10 Modules and brighten and dim lights connected to Lamp Modules and Wall Switch Modules. In the default state (after first fitting the battery) the SS15A is set to Housecode A. The top three ON-OFF rocker keys control modules set to Unit Codes 1, 2, 3. The bottom rocker key brightens and dims lights connected to Lamp and Wall Switch Modules.

1. Plug in an X10 Transceiver (RR501 or TM751, sold separately).
2. To turn on or off X10 Modules set to Unit Codes 1, 2, or 3 (on Housecode A) press the left or right side of the first, second or third rocker key. To brighten or dim Lamp Modules or Wall Switch Modules press the number button first, then press and hold the left or right side of the bottom rocker key. Attach the SS15A to a wall using double sided tape or Velcro.™ If you want to control Modules 1, 2 and 3 on Housecode A, that's it. You don't need to read any further.

To change the Housecode

- Press and hold the first (top) **ON** rocker key. The **green** LED flickers. 3 seconds later, the **green** LED blinks the current setting: 1 blink for Housecode A, 2 blinks for B..... 16 blinks for P.
- Release the first (top) **ON** rocker key.
- Press and release the first (top) **ON** rocker key the appropriate number of times for the House Code you want to set. Once for A, twice for B, etc. The **green** LED blinks for each press. **IMPORTANT:** Hold the button on your last press. 3 seconds later, the **green** LED blinks back the new setting, e.g. 3 blinks for Housecode C. If you do not follow this programming sequence, the LED will stay on for 1 second and your existing setting will not be changed.

To change the Unit Code for the first (top) rocker key (the second and third rockers are always one # higher than the first). i.e. if you set the first rocker key to 6, the second rocker key controls 7, and the third control 8, etc..

- Press and hold the top **OFF** rocker key . The **red** LED flickers. 3 seconds later, the **red** LED blinks the current setting: 1 blink for Unit Code 1, 2 blinks for 2, 16 blinks for 16.
- Release the top **OFF** rocker key.
- Press and release the top **OFF** rocker key the appropriate number of times for the Unit Code you want. **IMPORTANT:** Hold the key on your last press. 3 seconds later the new code blinks back. If you do not follow this programming sequence, the LED will stay on for 1 second and your existing setting will not be changed.

To change battery: open battery holder and fit a CR2032 Lithium 3V battery. Observe polarity.

F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION. NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



LED, green when you press On or Bright, red when you press Off or Dim.

Press left side to turn on, right side to turn off modules set to Unit Codes 1, 2, and 3 on Housecode A (the default setting).

Then press and hold left side to brighten or right side to dim.

Replace battery with CR2032, 3V lithium type.

X10 Wireless Technology, Inc. LIMITED 1-YEAR WARRANTY

X10.com, a division of X10 Wireless Technology, Inc. (X10) warrants X10 products to be free from defective material and workmanship for a period of one (1) year from the original date of purchase at retail. X10 agrees to repair or replace, at its sole discretion, a defective X10 product if returned to X10 within the warranty period and with proof of purchase.

If service is required under this warranty:

1. Call 1-800-675-3044 or visit www.x10.com, or e-mail sales@x10.com to obtain a Return Merchandise Authorization (RMA) number.
2. Return the defective unit postage prepaid to X10 (see address on back).
3. Enclose a check for \$4.00 to cover postage and handling.
4. Enclose a dated proof of purchase.
5. X10 is not responsible for shipping damage. Units to be returned should be packed carefully.

Please visit www.x10.com/warranty

to complete your on-line warranty registration. Thank you.

For help or more information on setup, please visit: www.x10.com/support

SS15A-9/01