 


Ninja™ System Quick Setup Guide


Before you read the owner's manual for the Ninja system it is recommended that you follow the steps below to give the system a quick try. Later you can read the owner's manual to see how to connect the camera's cord inside the top of the Ninja so you only need one power supply.

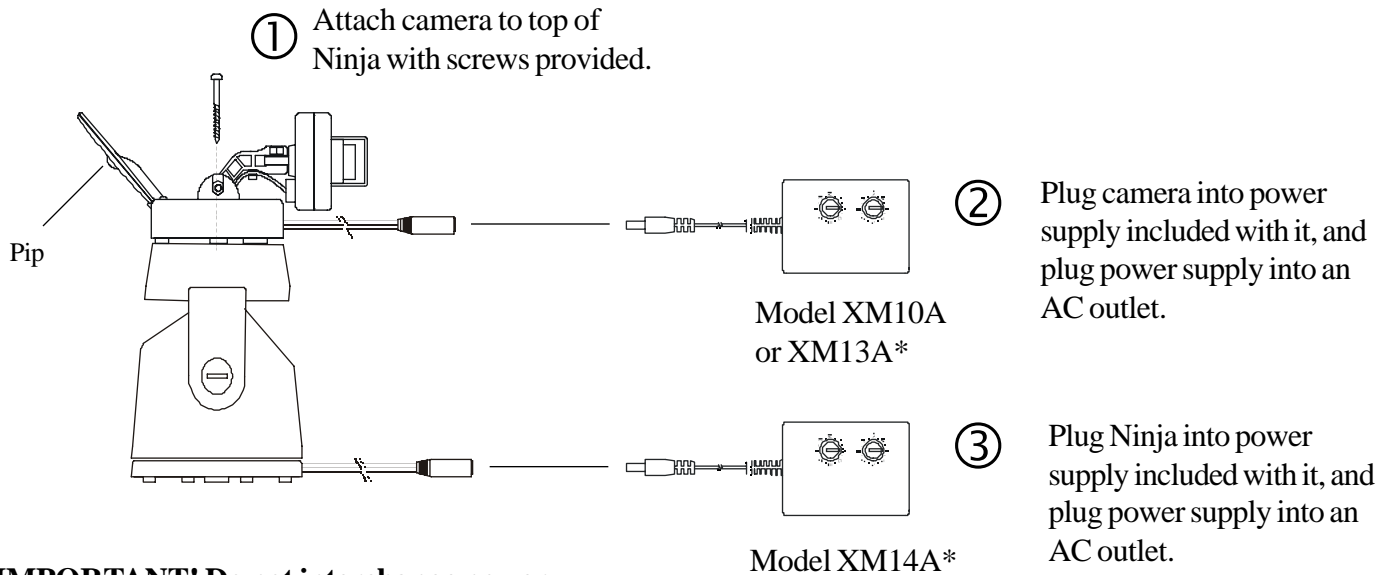

*** IMPORTANT! Do not interchange power supplies. Model XM14A must be used only for the Ninja Pan 'n Tilt base.**

 
Now connect the Receiver to your TV

- Connect the Video Receiver to its power supply and plug the power supply into an AC outlet near your TV.
- Connect the Receiver to your TV using the RCA cable supplied.
- Set the switch on the side of the Video Receiver to ON.
- Turn your TV on and select Video mode. The Ninja's power supply powers up in the on state when you first plug it in, so you will now see a picture on your TV.
- Point the "pip" on the Camera's antenna and the "squares" on the Receiver's antenna towards each other for the best reception.
- If you experience interference, try setting the Camera and Receiver to a different letter channel (A, B, C, or D) - use the same letter on each (see instructions included with them for more information).

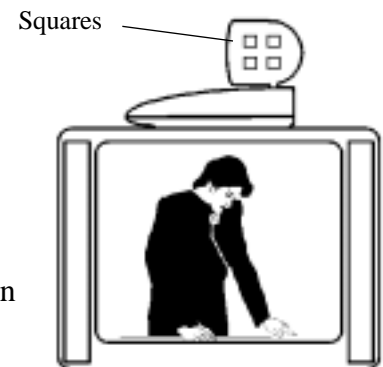

Now try it out!

 - Insert 4 AAA alkaline batteries (not included) in the Remote Control.
- Press the blue buttons at the top of the remote to pan the camera left and right, and tilt it up and down.

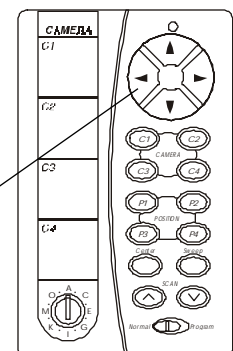

For more information or help setting up your system, please visit www.x10.com/support

