## XCam2™InstantON Low Light B/W Camera

- Extremely small size.
- Built-in 2.4 GHz Video Sender.

- Model XX20A
- Can be turned on and off remotely (remote controlled power supply included).
- Use it outdoors to monitor your front door, back yard, etc.
- Gives clear pictures even in extremely low light conditions (Use it to monitor a child's bedroom).

The XX20A includes the XC22A camera and XM16A remote controlled power supply. The XC22A is a very small and compact black & white video camera with built-in 2.4 GHz transmitter. You can attach it to a wall anywhere you want to monitor. The XC22A transmits video and sound to the VR31A, or video only to the VR36A receiver which is connected to your TV located anywhere in your home (up to 100 ft. away). The XM16A power supply lets you turn the camera on and off remotely, from X10 remote controls (sold separately). The XC22A camera works great even in extremely low light conditions.


- 1. Refer to the setup and operating instructions that came with the 2.4 GHz Video Receiver, Model VR31A or VR36A (sold separately) to set up the Receiver.
- Mount the camera in a suitable location with the antenna on top so the camera is the right way up. If you install it outdoors, run the small cable adapter through a hole in the wall so you can plug the power supply into an AC outlet indoors.
- 3. Plug the power supply's jack into the adapter cable on the camera.
- 4. Set the Housecode and Unit Code. (See instructions included with X10 remote controls).
- 5. Plug the power supply into any 120V AC outlet.
- 6. Set the channel switch on the camera to the same setting as the one on the VR31A or VR36A Video Receiver.
- 7. Adjust the antenna on the camera if necessary to aim it in the direction of the VR31A/VR36A Receiver that you have connected to your TV.

## LIMITED1-YEARWARRANTY

X10.com, a division of X10 Wireless Technology, Inc. (X10) warrants X10 products to be free from defective material and workmanship for a period of one (1) year from the original date of purchase at retail. X10 agrees to repair or replace, at it's sole discretion, a defective X10 product if returned to X10 within the warranty period and with proof of purchase.

If service is required under this warranty: Call 1-800-675-3044 or visit www.x10.com, ore-mail sales@x10.com to obtain a Return Merchandise Authorization (RMA) number. Please do not return any products without an RMA number.

Please visit www.x10.com/warranty to complete your on-line warranty registration. Thank you.

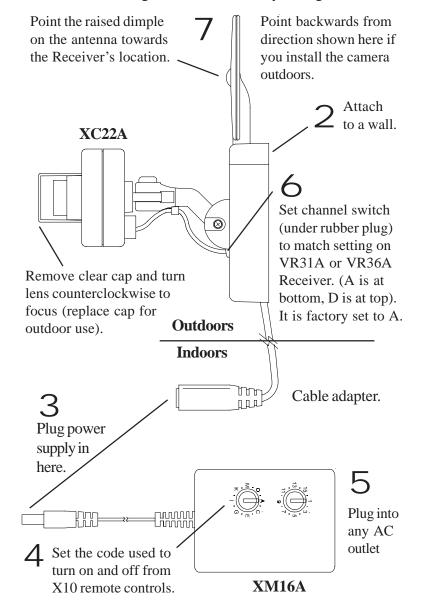

F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION. NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

