



Flashlight 8 in 1

WITH


Weather Radio and Emergency Solar LED

USER MANUAL

2600
POWERBANK

LED
BRIGHT LED

EO
AM/FM/WB
RADIO

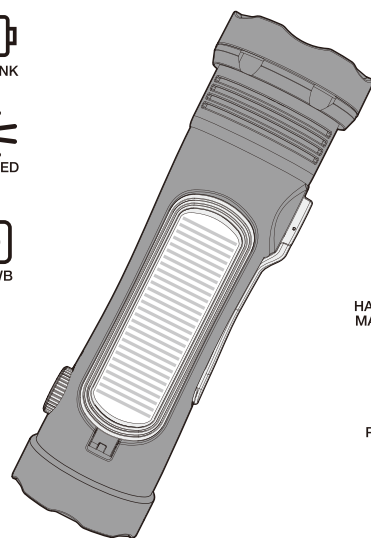


**HAND CRANKING
MANUAL POWER**

PANIC ALARM

**POWER
OUTAGE**

DESCRIPTION

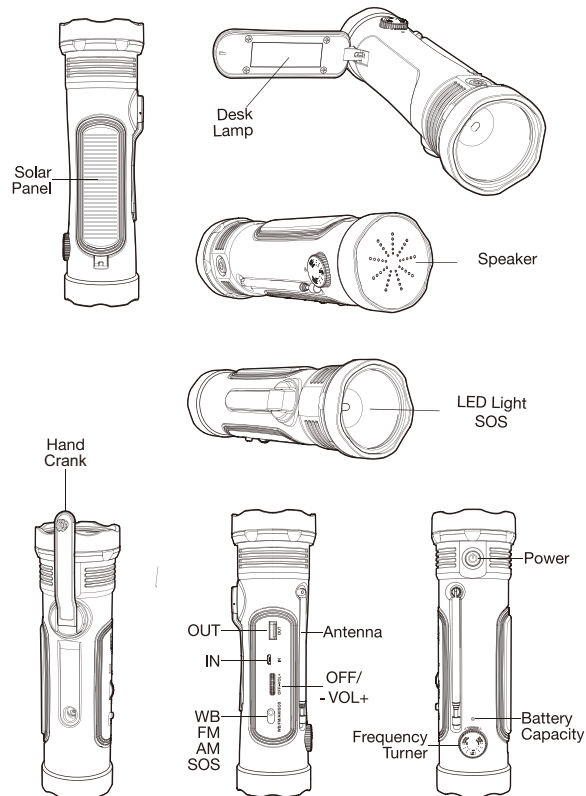

▲ SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not heat the device or use near a fire, water or other liquids.
- Do not place the device in a highly humid, dusty environment, this is not a waterproof product.
- Do not disassemble the device by yourself.
- Place this product out of reach of children.
- In order to avoid interference, please keep away from TV, radio and other devices when charging.
- If the device has not been used for a long period of time, you may need to charge it for several hours before using it. Do not leave the device on the charger for an extended period of time without using it.

▲ ABOUT THIS PRODUCT

It has a solar, hand crank and USB power cord for charging. It also has AM/FM and weather band frequencies. Contains a 2600mAh power bank, and SOS alarm. Please read this user manual carefully before using and keep it for reference.

▲ PRODUCT SPECIFICATIONS

Battery Cell	Li-ion (18650)
Capacity	2600mAh / 3.7V / 9.62Wh
Input Port	Micro USB
Output port	USB-A 5V 1A x 1
LED Light	Lamp Light : 10 pcs White LED Flashlight : 1 pc 1W White LED
Radio Frequency	AM : 520KHz-1710KHz FM : 87MHZ-108MHZ ; Weather Band
Dynamo	AC Motor
Solar Panel	5V-30mA / Size: 3.31" x 0.75"
Speaker Output Power	0.5W
Package List	Flashlight x 1, Micro USB cable x 1, User Manual x 1

▲ OPERATION INSTRUCTIONS

Power Button :

Turn on / off key for lighting functions

Flashlight :

- 1) Press the power button to turn on / turn off the flashlight lighting functions.
- 2) Press the power button once to turn on the flashlight, press the power button a second time to activate the desk lamp function. Please note the desk lamp can be opened and folded out (see above). Press the power button a third time to turn off the unit.

WB/FM/AM/SOS :

Select FM/AM/WB/SOS on the switch provided. When SOS is selected, The solar flashlight will emit a loud siren and the flashlight will flash continuously.

OFF/-VOL+ :

- 1) Turn the volume knob clockwise to turn on the radio function and continue rotating to increase the volume;
- 2) Turn the volume knob counterclockwise to decrease the volume. Turn the volume knob counterclockwise to the end to turn off the radio function;

Frequency Turner :

Rotate the frequency tuner to choose the frequency

Antenna :

Extend the antenna fully to enhance the signal

▲ CHARGING THE FLASHLIGHT

IN Micro USB Charging Port:

USB Port Charging

Connect the supplied USB power cable into the micro USB charging port. The battery capacity indicator flashes during charging and will show a solid green LED light when fully charged. Fully charged the flashlight needs 4 hours.

OUT Micro USB 2.0 Power Port:

Plug in the USB power cable from the out micro USB power port and into your other devices to charge.

Hand Crank Generator: When the battery runs out you can pull the hand crank out and turn the Hand Crank continuously in a clockwise or counterclockwise motion to recharge it.

Solar Panel: When the battery runs out you can recharge it by exposing the solar panel to direct sunlight.

Battery Capacity: Indicates the amount of battery power status

▲ BATTERY CAPACITY DISPLAY

LED Light Indicator Guide

Charging status

Electricity	Indicator
100% Charged	Solid green light is on
71 ~ 99% Charged	Green light flashing
31 ~ 70% Charged	Yellow light flashing
0 - 30% Charged	Red light flashing

▲ AZPEN PRODUCT LIMITED WARRANTY

180 Day Limited Warranty

Azpen offers a limited manufacturer warranty from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship under normal use for the period of 90 days from the date of the original retail purchase, Azpen will, at its sole option, repair or replace the product with a similar product. Replacement Product or parts may include remanufactured or refurbished parts or components. The replacement unit will be covered by the balance of the time remaining on the customer's original limited warranty

This warranty is valid only for the original purchaser and must show proof of purchase.

The warranty does not cover damage, deterioration or malfunction resulting from:

- Accident, misuse, neglect, fire, water, lightning, and deep scratches or signs of impact, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
- Repair or attempted repair by anyone not authorized by Azpen.
- Any damage of the product due to shipment.
- Causes external to the product, such as electric power fluctuations or failure.
- Use of supplies or parts not meeting Azpen's specifications.
- Normal wear and tear and any other cause that does not relate to a product defect.



For more information or to Register online, visit us at:
www.azpenpc.com

For customer service, please contact: (855)297-3672
Support@azpenpc.com
Monday-Friday
9:00 am – 5:30 pm (CST)

DESIGNED IN USA, MADE IN CHINA

Black

Die-Cut