

K749 Wonder Tablet

Quick Start Guide

Power on the tablet

Press on hold the Power Button for 3-5 seconds

Touch and slide the lock icon to the top to unlock the screen

Kids Mode Home Screen

Touch the kid icon in the middle of the home screen to get into the kids applications.



Kids Applications



*Swipe left to view more apps or touch the icon in the lower Right-hand corner to display more apps.

*Swipe up at the bottom of the screen to display the status bar icons.

*Touch the Kid icon in the top Left-hand corner to exit to the home screen.

Parent Controls

Touch the icon in the lower Left-hand corner, enter the password, and click on the check mark.



Parent Control Home Screen



Click on Account to setup password



Click on Websites to select or uncheck



Click on Applications to select or uncheck




Click on Time Limit

Set for whole week, single day, restricted, unlimited, or prohibited



Click on Exit

This will exit out of the Kids Mode and get into the Android Mode

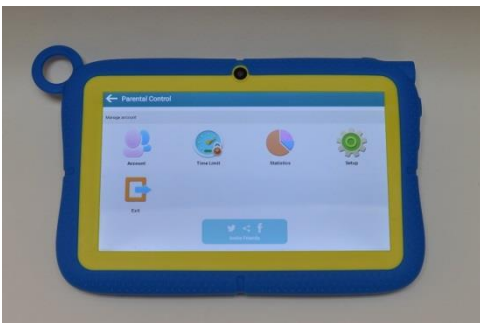

Exit Kids Mode

From the Kids home screen, touch on the icon in the lower Right-hand corner, enter password, and click on the check mark.



Android Home Screen

Touch the 6 dots on the Right to get into the settings. It may be hard to see if tablet is in horizontally position so may need to hold vertically.



Android Tablet Features

Setup WiFi, date and time, display, browse the internet, Google Play, and other features.



***Refer to the Android 6.0 User Manual on our website or additional settings.**

Exit Tablet Mode

Touch on the iWawa icon on the Right.



To use the SD Card:

Need to remove the rubber case from the tablet.