

Master Reset Instructions for G1058H (HSN model)

- Press and hold both the Volume + (volume UP) and Power button at the same time until you see white letters on the screen. There will be a small arrow on the screen.
- Press the Volume UP button to move the small arrow until it points to "Recovery".
- Press Volume - (volume DOWN) once to select "Recovery"
- You will see the word Android appear on the screen and within a few seconds you will see yellow and blue letters on the screen (Android recovery).
- Using the Volume - (volume DOWN) button move the blue line to the "Wipe data/factory reset option", then press Power once to select it.
- On the next screen use the Volume - (volume DOWN) button to move the blue line to highlight "Yes-- delete all user data" option and press Power once to select it.
- The tablet will show that it's erasing data, and once finished, will take you back to the "Reboot system now" screen with that option already highlighted for you. Press Power once to select it.
- The tablet will then reboot and you will see Android on the screen for between 2 to 3 minutes. Proceed to set up the tablet the same way you did the first time you powered it up.