

**BAUMANN**

2-speed  
**blender**

Blend and puree in seconds

2-geschwindigkeiten  
**mixer**

Mixen und Pürieren in Sekunden



**BM-BL1085**

# **INSTRUCTIONS MANUAL/ GEBRAUCHSANWEISUNG**

[www.baumannliving.com](http://www.baumannliving.com)



# TABLE OF CONTENTS

IMPORTANT SAFEGUARDS .....	2
PARTS AND FEATURES.....	4
BEFORE FIRST USE.....	5
USING YOUR BLENDER .....	5
BLENDING TIPS.....	7
CLEANING AND MAINTENANCE.....	8

## IMPORTANT SAFEGUARDS

When using this appliance, basic safety precautions should always be followed, including the following:


1. Read all instructions.
2. To protect against risk of electrical shock, do not put cord, plug, base, or motor in water or other liquid.
3. Children must be supervised to ensure that they do not play with the appliance.
4. Unplug cord from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner.
7. If the supply cord is damaged, it must be replaced by the manufacture or its service agent or a similarly quality person in order to avoid a hazard.
8. The use of attachments, including canning jars, not recommended or sold by the appliance manufacturer may cause a risk of injury to persons.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces, including stove.

11. Keep hands and utensils out of jar while blending to reduce the risk of severe personal injury and/or damage to blender. A rubber spatula may be used but must be used only when blender is not running.
12. Blades are sharp; handle carefully – especially when assembling, disassembling, or cleaning inside blender jar.
13. Do not use a broken, chipped, or cracked blender jar.
14. Do not use broken, cracked, or loose blade assembly.
15. To reduce the risk of injury, never place blade assembly on base without jar properly attached.
16. Always operate blender with lid in place.
17. Be careful if hot liquid is poured into the jar as it can be ejected out of the appliance due to a sudden steaming.
18. Do not leave blender unattended while it is operating.
19. To disconnect cord, turn the control to OFF. Then remove plug from wall outlet.
20. Do not use appliance for other than intended purpose.
21. This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction.

**SAVE THESE INSTRUCTIONS.**

**FOR HOUSEHOLD USE ONLY.**

# PARTS AND FEATURES

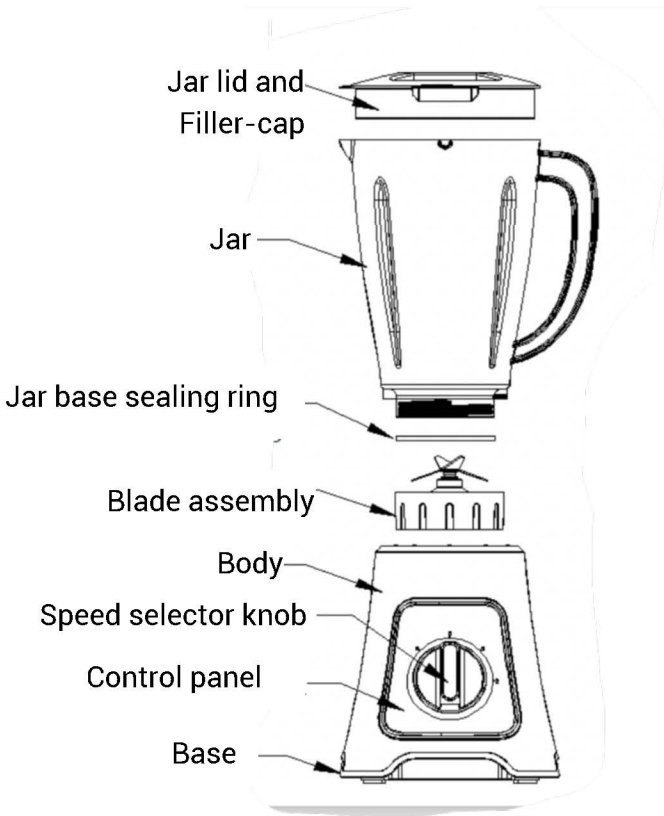

## BEFORE FIRST USE

After unpacking the blender, follow the instructions in "Cleaning and Maintenance."

**WARNING!** The blade is extremely sharp. Handle with great care and ensure that the appliance is unplugged from outlet before assembling and removing parts.

## USING YOUR BLENDER

1. Make sure blender is unplugged. Place blender base on clean, dry flat surface.
2. If necessary, assemble blade assembly and jar base sealing ring onto jar. Then set jar into place on blender base, making sure it is securely seated.

**NOTE:** *There is a safety interlock device at the bottom of jar. If the jar is not assembled in place, the blender will not operate.*

3. Put ingredients in jar and place lid on jar. The amount of ingredients should not exceed the 'max' level indicated on the jar, nor sit lower the 'min' level.

4. Make sure that the speed selector knob is at the '0' position. Plug cord into outlet. Turn knob to select a speed, or select the Pulse setting.

**NOTE:** *Before processing food or beverages, ensure that blender lid is secured onto jar and jar is secured onto blender base. Always place one hand on blender lid during operation.*

5. **CAUTION:** When blending hot liquids, remove filler-cap and close any lid openings along the edge intended for pouring. Hot liquids may push lid off jar during blending. To prevent possible burns: Do not fill blender jar beyond the 750 ml level. With the protection of an oven mitt or thick towel, place one hand on top of lid. Keep exposed skin away from lid. Start blending at lowest speed.

**NOTE:** *The filler-cap also serves as measuring cup for your ingredients.*

6. Turn speed selector knob back to '0' position to turn blender off after blending is complete. Wait until blades have stopped rotating before removing jar.

7. To remove jar, turn it counterclockwise and lift jar straight up. Never replace jar onto unit while motor is running.

**NOTE:** *Do not run the appliance for more than 2 minutes per cycle, and only wait until the unit has cooled to room temperature before performing next operation cycle.*



## BLENDING TIPS

- To add foods when blender is operating, remove filler-cap from blender lid or and add ingredients through the opening.
- For best performance, the minimum amount of liquid needed per recipe is 250 ml. Add more liquid if food is not blending properly.
- If blending action stops during blending or ingredients stick to sides of the jar, there may not be enough liquid in the jar to blend efficiently
- Do not try to mash potatoes, mix stiff dough, whip egg whites, grind raw meat, or extract juices from fruits and vegetables.
- Do not store food or liquids in the blender jar.
- When blending at maximum jar capacity or tougher ingredients, set the speed selector to highest setting. If the speed used is too low, the motor may be damaged due to insufficient torque. When the blending speed is too low, immediately use a higher speed setting or turn the speed selector to '0' to stop operation.

## CLEANING AND MAINTENANCE

**WARNING! Electrical Shock Hazard.** To protect against risk of electrical shock, do not put cord, plug, base, or motor in water or other liquid.

### **Auto Clean (Optional)**

Pour a little warm soapy water into the jar and turn the speed selection knob to '1' blender for a few seconds.

1. Unplug blender from electrical outlet.
2. Remove jar from blender base.
3. Wipe blender base, control panel, and cord with a damp cloth or sponge. To remove stubborn spots, use a mild, nonabrasive cleanser.
4. Carefully wash jar, filler-cap, lid, sealing ring and blade assembly in hot, soapy water. Care should be taken when handling the blade assembly as it is very sharp. Rinse and dry thoroughly. Do not soak.
5. Dry all parts thoroughly before reassembling.
6. Store blender with lid ajar to prevent container odor.