



# accutemp electric kettle

Precision water heating on demand



**BM-KE1402**

## **INSTRUCTIONS MANUAL**

[www.baumannliving.com](http://www.baumannliving.com)



## Table of Contents

IMPORTANT SAFEGUARDS .....	2
PARTS AND FEATURES.....	5
BEFORE FIRST USE.....	6
USING YOUR ELECTRIC KETTLE.....	7
Boiling Water/ Heating Water to Selected Temperature .....	7
Keeping Water Warm at Selected Temperature.....	8
Boil-dry protection .....	10
CLEANING AND MAINTENANCE .....	10
Removal of mineral deposits.....	11
Cleaning the filter .....	11

## IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed, including the following:

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
3. The attached base cannot be used for other than intended use.
4. Do not operate the appliance without load to avoid damaging the heat elements.
5. Unplug from the outlet when not in use.
6. Do not let the cord hang over edge of table counter or touch hot surface.
7. Do not place on or near a hot gas or electric burner or in a heated oven.
8. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this occurs, allow the kettle to cool before filling with water and re-boiling.
9. Ensure that kettle is used on a firm and flat surface where the children cannot reach as this can prevent from overturning the kettle to cause damage or injury.
10. To protect against fire, electric shock or personal injury, do


not immerse cord, electric plugs or kettle in water or other liquid.

11. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
12. Be careful when opening the lid for refilling when the kettle is hot.
13. Do not touch the hot surface. Use the handle or the button.
14. Extreme caution must be used when moving an appliance containing hot water.
15. The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
16. While boiling water, avoid contact with steam from the spout when water is boiling or just after it has been switched off.
17. Unplug from outlet when not in use and before cleaning; allow it to cool before putting on or taking off parts and before cleaning the appliance.
18. Always ensure the lid is closed and do not lift while the water is boiling. Scalding may occur if the lid is removed during boiling.
19. Use the kettle only with the supplied base. Do not use the base for other purposes.
20. Avoid spillage on the connector.
21. The heating element surface is subject to residual heat after use. Heating element may remain hot after the kettle is turned off.

22. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
23. This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction.
24. Children must be supervised to ensure that they do not play with the appliance.
25. Do not use this unit other than its intended function. Misuse may lead to injury.
26. This appliance is intended to be used in households and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments

**SAVE THESE INSTRUCTIONS. HOUSEHOLD USE ONLY.**

# PARTS AND FEATURES

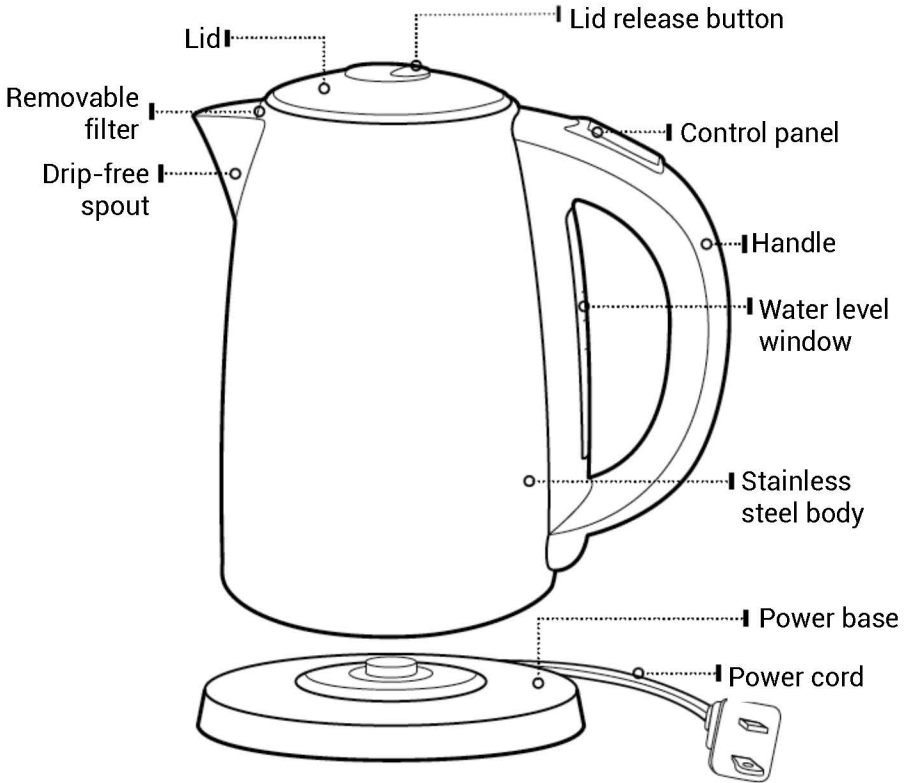

## Controls/Functions

### On/Off

Press this button to begin boiling, or after selecting preset temperature to begin heating. Hold for 3 seconds to keep warm.

### Temperature selection

Use this button to set the desired temperature:

### Heating indicator lights

Indicator lights illuminate according to the selected temperature setting: 70°C/80°C /90°C /100°C.

## BEFORE FIRST USE

1. Read all instructions and important safeguards.
2. Remove all packaging materials.
3. Fill kettle with water up to the maximum water level. Run the kettle through one boiling cycle, then discard water.

**Note:** *The maximum capacity of the kettle is 1.7 liters.*



## USING YOUR ELECTRIC KETTLE

### **Bolting Water/ Heating Water to Selected Temperature**

1. Place power base on a sturdy, level and dry surface.
2. Remove kettle from the power base and open the lid by pressing down on the lid release button. Fill the kettle with the desired amount of water. Always fill the kettle between the minimum (0.8L) and maximum (1.7L) marks. Too little water will result in the kettle switching off before the water has boiled.

***Note:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Make sure the lid is firmly in place before connecting the power cord to the outlet.*

3. Close the lid, ensuring it locks into place.
4. Connect the plug into a power outlet and place the kettle onto the power base. The kettle will beep once and all four indicator lights will momentarily illuminate.

***Note:** Power base can be rotated 360° to facilitate connection of the plug to the power outlet.*

5. Press the temperature selection button to desired temperature (70°C /80°C /90°C /100°C); the corresponding indicator will illuminate.
6. Press the **On/Off** button start heating water. Once the water reaches the set temperature, the kettle will beep twice and the indicator will go off.
7. Lift the kettle off the power base then pour water to serve.

**Note:** *Be extra careful when pouring the water from the kettle as boiling water may result in scalding.*

**Note:** *The kettle will not re-boil until the switch is lifted. Allow to cool for 15-20 seconds before reopening to boil water. The kettle may be stored on the base when not in use.*

## **Keeping Water Warm at Selected Temperature**

1. Place power base on a sturdy, level and dry surface.
2. Remove kettle from the power base and open the lid by pressing down on the lid release button. Fill the kettle with the desired amount of water. Always fill the kettle between the minimum (0.8L) and maximum (1.7L) marks. Too little water will result in the kettle switching off before the water has boiled.

**Note:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Make sure the lid is firmly in place before connecting the power cord to the outlet.

3. Close the lid, ensuring it locks into place.
4. Connect the plug into a power outlet and place the kettle onto the power base. The kettle will beep once and all four indicator lights will momentarily illuminate.

**Note:** Power base can be rotated 360° to facilitate connection of the plug to the power outlet.

5. Press the **temperature selection** button to desired temperature (70°C /80°C /90°C); the corresponding indicator will illuminate.
6. Hold and press the **On/Off** button for 3 seconds start heating water. Once the water reaches the set temperature, the kettle will beep twice and the water temperature will be maintained for 30 minutes. At this point, the light indicator will flash steadily.
7. After 30 minutes of keeping warm, the kettle will automatically shut off and all indicator lights will go off.

**Caution:** To avoid boiling dry, never leave unattended while using the Keep Warm function.

**Note:** Once the kettle is lifted away from the power base, the keep warm function will be cancelled.

### **Boil-dry protection**

Should you accidentally allow the kettle to operate without enough water in it, the boil-dry protection will automatically switch the kettle off. If this occurs, allow the kettle to cool before filling with water and reheating.

## **CLEANING AND MAINTENANCE**

Always disconnect the appliance from the power outlet and leave it to cool down completely before cleaning. Never immerse the kettle or cord in water, or allow moisture to come into contact with these parts.

1. Wipe the exterior of the kettle with a damp cloth, taking care to avoid the electrical components. Do not use chemical, steel, wooden or abrasive cleaners.
2. Clean the interior of the kettle with warm, soapy water. You may also swish warm, soapy water inside the kettle with the lid closed.
3. Rinse any remaining soapy water from the kettle and drain.

## **Removal of mineral deposits**

Mineral deposits in tap water may cause the kettle interior to discolor. To remove this build-up, you may use a commercially available non-toxic liquid descaler.

Alternatively:

1. Fill the kettle to the maximum level with 3 cups of white vinegar and the water. Allow to stand overnight. Do not boil.
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth. Fill the kettle with clean water, bring to boil and then discard the water. Repeat twice.

## **Cleaning the filter**

1. Open the lid and press in each of the two tabs on the front of the spout to release the filter. From inside the kettle, grasp the angled tab on the filter and pull upward. The filter should slide out easily.
2. Wash and rinse the filter, then replace.
3. Grasping the angled tab, insert the bottom tab followed by the top tabs on the filter. Slide the filter into the slots on the inside of the spout until filter sits securely into place.