



INSTRUCTIONS MANUAL

TYL-EC3009

STEAM IRON

Fast, fuss-free, freshly pressed clothes every time



www.tylrhome.com

Table of Contents

IMPORTANT SAFETY INSTRUCTIONS	2
PARTS AND FEATURES	5
BEFORE FIRST USE.....	7
USING THE STEAM IRON.....	7
Dry Ironing.....	8
Burst of Steam	8
Vertical Steam.....	9
Spray.....	9
Anti-Drip Function.....	9
Temperature and Steam Setting Guide	10
CLEANING AND MAINTENANCE.....	11
Self-Clean Function	11
Storage.....	12
WARRANTY TERMS AND CONDITIONS.....	13

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions.
2. To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
3. Before using, check that the voltage of wall outlet corresponds to the one shown on the rating label.
4. Do not use the appliance if the main cord, plug, light or the appliance itself shows visible damage, or the appliance has been dropped or is leaking. Take it to the nearest authorized service facility or a qualified serviceman for examination and repair in order to avoid a hazard.
5. Do not allow the cord to come into contact with the soleplate when it is hot.
6. Burns may occur from touching hot metal parts, hot water, or steam.
7. Do not let cord hang over edge of table or touch hot surfaces.
8. Keep the appliance out of the reach of children.
9. Do not leave iron unattended while connected to a power supply.
10. Always place or use the appliance on a flat, stable, heat-resistant surface.

11. The use of accessory not recommended by manufacturer may cause injury to persons or damage to appliance.
12. The water inlet must not be opened during use.
13. Never fill the water tank with hot water, perfume, vinegar, descaler, fabric softener or other chemical agents.
14. Always turn the iron OFF before plugging or unplugging the iron from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
15. Always unplug from outlet when not in use, before filling with water or emptying, or before cleaning.
16. After each use, press down the Burst steam button to drain all residual water in the iron after switching off or unplugging.
17. Do not use the appliance for other than its intended use.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children must be supervised to ensure that they do not play with the appliance.
19. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

20. Do not use outdoors.

**SAVE THESE INSTRUCTIONS. FOR HOUSEHOLD USE
ONLY. NOT FOR COMMERCIAL USE.**

PARTS AND FEATURES




- 1 Burst of Steam Button
- 2 Spray Button
- 3 Steam Setting/Self-Clean Switch
- 4 Water Inlet Lid
- 5 Nozzle
- 6 Soleplate
- 7 Base
- 8 Water Tank
- 9 Temperature Control Dial
- 10 Thermostat Indicator Light
- 11 Rear Cover
- 12 Power Cord

Burst of Steam button – Instantly provides a powerful shot of steam to eliminate stubborn wrinkles.

Spray button – Moistens the fabric to be ironed, to help remove stubborn creases.

Steam Setting/Self-Clean Switch – Move the switch to OFF (for dry ironing) or to Low Steam Output, High Steam Output, or Self-Clean function.

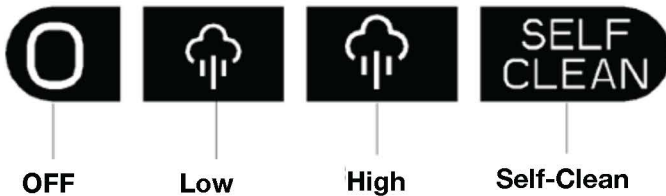

Temperature Control Dial



BEFORE FIRST USE

1. Remove any sticker, protective foil or soleplate cover.
2. Plug in the iron.
3. Set temperature control dial to the MAX setting. The thermostat indicator light comes on while the iron is heating.
4. Once the thermostat indicator light goes off, the iron is ready to be used.
5. Run the iron over a piece of cloth for several minutes to remove any residue on the soleplate.

NOTE: *During the first few uses, a harmless odor and a small amount of smoke may be given off. This has no effect on the use of the iron and will disappear quickly.*

USING THE STEAM IRON

1. Before filling water tank with water, make sure the steam iron is unplugged and the steam setting switch is at the OFF position.
2. Open the water inlet lid.
3. Tilt iron backwards at a 45° angle, then fill with water up to the MAX mark on the steam iron. (see **Fig. 1**)
4. Close the water inlet lid.

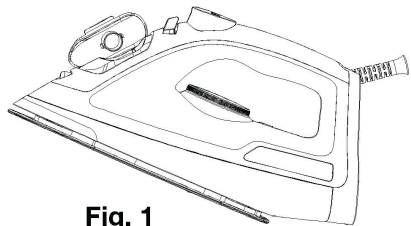


Fig. 1

NOTES:

- *Do not overfill.*
 - *Do not put the perfume, vinegar, descaling agents, or other chemicals in the water tank.*
 - *If the tap water in your area is very hard, mix it with an equal amount of distilled water, or use distilled water only.*
5. Plug in the iron.
 6. Set temperature control dial to the desired setting. The thermostat indicator light comes on while the iron is heating.
 7. Once the thermostat indicator light goes off, the iron is ready and steam can be activated.

Dry Ironing

1. Make sure steam setting switch is at the OFF position.
2. Set temperature control dial to desired setting.

Burst of Steam

1. Set temperature control dial to MAX setting.
2. Set steam setting switch to desired steam output level.
3. Press burst of steam button for 1 second. For best results, use burst of steam at 5-second intervals.

Vertical Steam

For removing wrinkles from hanging clothes or drapes.

1. Set temperature control dial to MAX setting.
2. Set steam setting switch to desired steam output level.
3. Hold the iron vertically and close to, but not touching the fabric to be steamed. Pull the fabric tight with your free hand and press the burst of steam button as you move the iron over the fabric.

Spray

1. Make sure water tank is filled with water.
2. Press the spray button several times to moisten fabric to be ironed.

Anti-Drip Function

The iron will automatically stop steaming at too low temperatures to prevent water from dripping out of the soleplate.

Temperature and Steam Setting Guide

Fabric Type	Temperature Setting	Steam Setting	Burst of Steam	Spray
Synthetic/Silk	0	No	No	No
Nylon	●	No	No	No
Wool	● ●	Yes	No	Yes
Cotton	● ● ●	Yes	Yes	Yes
Linen	● ● ● MAX	Yes	Yes	Yes

CLEANING AND MAINTENANCE

1. Set the steam setting switch to OFF position, then unplug the iron and let it cool down.
2. Empty remaining water in the water tank.
3. Wipe flakes and any other deposits on the soleplate with a damp cloth and a non-abrasive liquid cleaner or detergent.

NOTE: *To keep the soleplate smooth, avoid hard contact with metal objects. Never use a scouring pad, vinegar, or other chemicals to clean the soleplate.*

Self-Clean Function

The self-clean function helps keep the steam vents free of any scale build up. Use the self-clean function every 2 weeks, or according to hardness of water and using frequency. If the water in your area is very hard (i.e. flakes come out of the soleplate during ironing), the self-clean function should be used more frequently.

1. Set the steam setting switch to OFF position.
2. Fill the water tank to MAX level.
3. Plug in the steam iron and set the temperature control dial to MAX.
4. The thermostat indicator light comes on while the iron is heating. Once the thermostat indicator light goes off, hold the iron over the sink and set the steam setting switch to Self-Clean.

5. Gently shake the iron until all water in the water tank has been used up.

6. Set the steam setting switch to OFF.

NOTE: *After the self-clean process, let the iron heat up to let the soleplate dry. Unplug the iron when the thermostat indicator light goes off. Move the iron gently over a piece of cloth to remove any water stains on the soleplate. Let the iron cool down before you store it.*

Storage

1. Unplug the iron and set the steam setting switch to OFF position.
2. Wind the power cord round the backplate of the iron and store the iron on its heel.

WARRANTY TERMS AND CONDITIONS

ONE-YEAR LIMITED WARRANTY ON PARTS AND LABOR

TYLR provides a warranty to the original purchaser of this product against defects in materials and workmanship for one year. If a product covered by this warranty is determined to be defective within the warranty period, **TYLR** will repair or replace the defective part with a new or remanufactured part free of charge subject to terms and conditions stated herein.

To obtain warranty service, proof of purchase in the form of a sales invoice or copy thereof is required to show that a product is within the warranty period. If any one of the documents cannot be produced, corresponding fees for labor and replacement parts will be charged.

Parts and Labor

There will be no charge for parts and labor during the warranty period. Replacement parts or units may be new or recertified and are upon **TYLR's** option and sole discretion. Replacement parts and units are warranted for the remaining portion of the original warranty. Our decision on all questions relating to complaints as a result of defects, either workmanship or materials, shall be conclusive and you shall agree to abide by such decision. Any unit or defective part that have been replaced shall become **TYLR's** property. After the lapse of this warranty, a charge will be made on all labor and replacement of parts.

Types of Services

Defective Products must be sent to any **TYLR** service center to obtain warranty service. **TYLR** is neither responsible for transportation costs to the service center nor **TYLR** will cover return shipping to the customer. Product returns to **TYLR** service centers must utilize either the original carton box and shipping material or packaging that affords an equal degree of protection.

For home service, the transportation fee of **TYLR** service personnel will be charged to the customer, depending on the location. Our service personnel reserve all rights to refuse to attend to any equipment installed in an inaccessible location or any other hazardous situation.

LIMITATIONS AND EXCLUSIONS

TYLR one-year limited warranty only covers defects in materials and workmanship; however, this warranty does not cover the following:

1. Damage resulting from accidents, transport, misuse, abuse, alteration, tampering, or failure of the purchaser to follow normal operating procedures outlined in the user's manual.
2. Damage caused by negligence and poor maintenance.
3. Defects or damage due to spillage of food/liquids or improper usage of electrical supply or electrical circuit, major fluctuations in voltage, exposure to rain or moisture, wrong fuel or oil used.
4. Damage, losses, and defects as a result of fire, flood, or other Acts of God.
5. Normal wear-and-tear, corrosion, rusting, or stains.

6. Defects & damage arising from improper testing, operation, usage of the wrong component, demonstration, maintenance, installation, adjustment, or any alteration or modification of any kind.
7. Scratches & damage to the outer surface areas and externally exposed parts that are due to normal customer use.
8. General maintenance & routine servicing.
9. Claims for damaged/missing parts after 7 days from the date of purchase.
10. If any part or parts of the unit are replaced with a part or parts not supplied or approved by us, or if the unit has been dismantled or repaired by any person other than a **TYLR** authorized technician.
11. Any equipment/product which has its serial number removed or made illegible/tampered with.
12. If the warranty card is altered, defaced, or erased in any manner whatsoever.
13. If the unit is used for purposes other than household use, such as commercial use.

The one (1) year warranty covers the mainboard and control PCB, heater and power supply. However, this warranty does not cover parts (i.e. accessories, front and rear cover, water tank, soleplate, silicon gasket, hose, fuse, spray, buttons, heating plate, plastic cover, interior and exterior casing) that are subject to wear and tear, rust, stains, or corrosion.

This one-year limited warranty does not cover Products sold **“AS IS”**, **“FACTORY RECTIFIED”**, or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. **TYLR'S** TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING **TYLR'S** NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT. **TYLR** SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

IMPORTANT: Please present sales invoice as proof of purchase whenever you require our service during the warranty period.

www.tylrhome.com