



# INSTRUCTIONS MANUAL

Effortless Water Bottle Loading • Zero Water Spill • Super Easy to Use  
Equipped with Advance Digital Temperature Sensor and Indicator

# Water Dispenser



## TYL-809BLD







# Water **Dispenser**

---

Effortless Water Bottle Loading • Zero Water Spill • Super Easy to Use  
Equipped with Advance Digital Temperature Sensor and Indicator





# Key Features



Precision  
Electronic Thermostat



COLD



WARM



HOT



LCD  
Display Screen



**ENERGY SAVING**  
on/off Switch for  
HOT and COLD Tanks



Digital  
Temperature Indicator



Water Level  
Indicator



Push Down Control  
with Child Lock

**3-5  
Gallons**

Can be used for  
3 to 5 GL Water Bottle  
\*Bottle Not Included



Removable and Easy  
to Clean Drip Tray



 
Flashing Light  
will Alert you  
when Bottle is Empty





STAINLESS STEEL  
WATER TANK

**BOTTOM  
LOADING**  
TECHNOLOGY

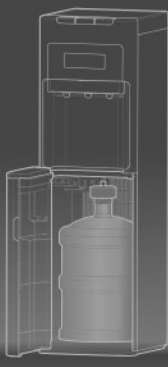



## FEATURES AND SPECIFICATIONS

### Specifications

- Model: TYL-809BLD
- Rated Voltage: 220V - 240V~
- Rated Frequency: 60Hz
- Heating Power: 500W
- Cooling Power/Current: 85W/0.8A
- Hot Water:  $\geq 90^{\circ}\text{C}$  5L/h
- Cold Water:  $\leq 10^{\circ}\text{C}$  2L/h
- Environmental Temp.: T
- Coolant: R134a, 35g
- Relative Humidity:  $\leq 90\%$



 
 
## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property. Read all instructions before using any appliance.

1. Do not let hot water touch bare skin. Keep combustible material such as furniture, bedding, pillows, clothes, and/or papers away from the back of the unit.
2. Do not operate this, or any other appliance, with a damaged power cord. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the outlet.
3. Do not run the power cord over carpeting or other heat insulators. Do not cover the cord. Keep cord away from high traffic areas, and do not submerge in water.
4. We do not recommend the use of extension cord as it may overheat and cause a risk of fire.
5. Exercise caution and use reasonable supervision when the appliance is used by or near children.
6. Do not use your water dispenser outdoors. Place the water dispenser away from direct sunlight and make sure that there is at least 4 inches (10cm) of space between the back of your unit and wall. Keep a minimum of 2 inches (5cm) on each side of your unit free.
7. Do not use this product to dispense anything other than water.
8. To avoid a hazard due to instability of the appliance, it must be placed on an even and flat surface.
9. If the supply cord is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.
10. This water dispenser must be positioned so that the plug is accessible.
11. Disconnect the plug from the outlet when not in use.
12. Remove power plug or disconnect from the main power source before serving the appliance.



## PRODUCT DIAGRAM

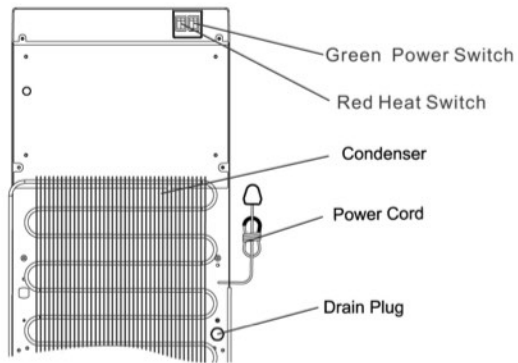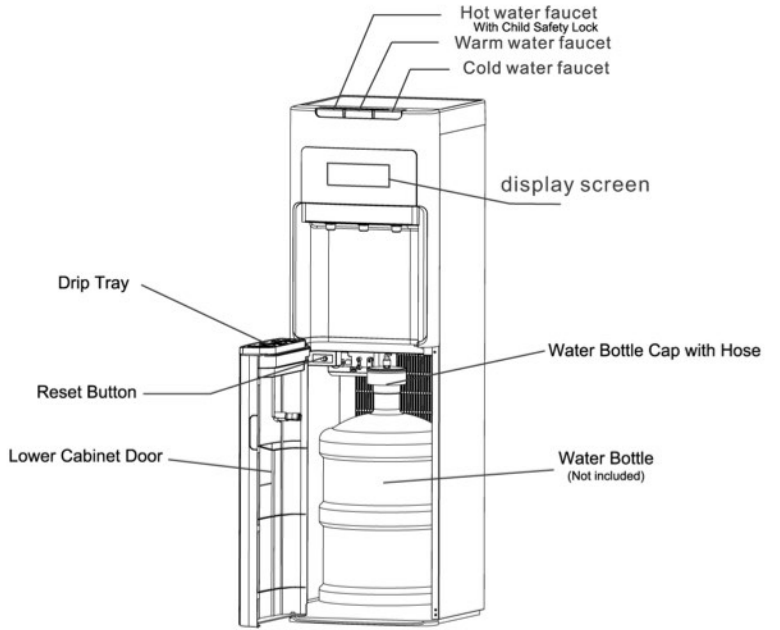





## UNPACKING THE WATER DISPENSER

1. Cut and remove the straps from the box. **DO NOT** turn the box upside down, or lay it on its side. The bottom of the box is separate from the top section. Lift straight up the top box section to remove it. Remove the Styrofoam packaging and plastic bag. Lift the water dispenser off the bottom the of the box. Wipe it clean if necessary.
2. Place the machine on a hard, flat surface. Make certain the unit is level. The unit should not be exposed to direct sunlight or placed near other source of heat.
3. It is best to place the water dispenser in an area with good air circulation. Make sure there is at least 4 inches (10cm) of space between the back of your water dispenser and the wall. Keep a minimum distance of 2 inches (5cm) on each side of your water dispenser.

**WARNING:** The drain cap on the back of the unit may become loose during shipping. Fasten the drain cap tightly before you start to operate the unit. If the drain cap is loose, the unit may leak and cause floor damage.

## PREPARING THE WATER DISPENSER FOR USE

 
This model is different form a traditional water dispenser. The water bottle does not need to be placed up-side down on the top of the unit. The water bottle is placed in the lower cabinet of the unit, and then a pump draws the water up to the dispenser.

Much like a new refrigerator with an ice maker or water dispenser, it is recommended to run 1 or 2 water bottles of full water through the system before use.





1. Make sure the water dispenser is not plugged into an electrical outlet.
2. Open the door of the lower cabinet.
3. Place full water bottle on floor. Remove the plastic cover over the mouth of the water bottle.
4. Place the stainless tube inside the bottle and place the water bottle cap firmly over the mouth of the water bottle.
5. Attach the hose to the top of the cap using the quick connect system shown below.
6. Slide the bottle inside the cabinet and close the lower cabinet door.
7. Plug the water dispenser into a grounded power outlet and turn on the power switch located at the back.
8. The unit will start to operate, but you should wait at least half an hour before using the water dispenser.
9. This unit is equipped with a red switch that turns the heating feature on and off. If you are not going to use hot water, turn the heating switch to "OFF" to conserve energy.

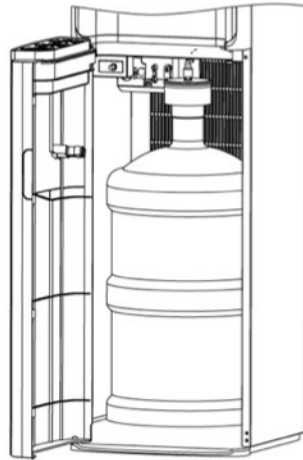

**NOTE:** If there is no secure connection between the hose cap and the connector on the water dispenser, the water pump will operate but the water dispenser will not dispense water. Make sure the hose is connected to the water dispenser correctly.


**NOTE:** Please wait until the water pump stops running before using the unit. If the water tank is not full, no water will dispense from the cold water faucet and the hot water faucet.

1. Your new water dispenser features an adjustable quick connect system. For proper operation, make sure the connector is sealed tight. (Fig. 1)
2. The connector can be removed easily for cleaning with warm soapy water.
3. The stainless steel tube can be adjusted up and down to accommodate both gallon and 5 gallon water bottles. (Fig. 3)





## OPERATION

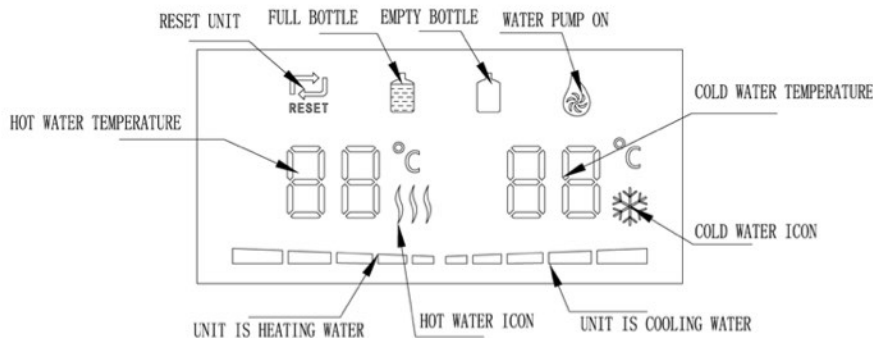 

### Using the Water Dispenser

- To dispense **HOT** water, slide Hot Water Handle to the left side and then press the button all the way in.
- To dispense **WARM** water, press the middle water button all the way in.
- To dispense **COLD** water, press the cold water button all the way in.

### CLEANING & MAINTENANCE

1. To avoid accidents, turn off and unplug the water dispenser from the outlet before cleaning.
2. A soft damp cloth may be used to clean the surface of the water dispenser. When necessary, a mild detergent may be used. **DO NOT** use erosive chemical solvents to clean the unit, as this may damage the surface of the water dispenser.
3. **DO NOT** pour water on the exterior of the unit to avoid getting the internal electrical system damp. **DO NOT** immerse the unit in water when cleaning.
4. The water bottle cap, hose, and drip tray may be washed in a dishwasher (top rack only)
5. Keep the water dispenser 6 inches (15cm) away from the wall so it can work properly. Make certain all ventilation openings are clear of obstruction.
6. Do not damage the heating or cooling system, paying particular attention to the condenser or heat radiator at the back of the water dispenser.
7. If you will not use the water dispenser for a long period of time, please unplug the power cord and drain the water dispenser. Drain the water from all faucets, then





## TROUBLESHOOTING

Please check the troubleshooting chart below. It includes several common problems, which you can connect at home, making a customer service call unnecessary.

PROBLEM	POSSIBLE CAUSE	REMEDY
Unit does not dispense hot and cold water	Unit is unplugged.	Plug the power cord into an outlet.
	Main power supply is off.	Reestablish main power supply.
	Damaged water dispenser.	Replace the dispenser or send for service
	The water bottle cap is not attached properly to the connector on the water dispenser.	Connect properly.
Unit does not dispense cold water.	Over consumption of cold water in a short time.	Wait a moment for the water to cool.
	System Malfunction	Contact dealer
	The ventilation around the unit is insufficient.	Space the unit from the wall by more than 15cm.
	The temperature of water in the water bottle is too high. (When the bottle is exposed to direct sunlight for a long time)	Place the water bottle in a cool location out of direct sunlight.
Unit does not dispense hot water	Over consumption of hot water in a short time.	Wait a moment for the water to heat.
	System Malfunction	Contact dealer
Water leaks form the faucet	The appliance is not level.	Tighten the top threaded portion of the faucet.
	Unit is touching other objects.	Call the customer service telephone number to have the faucet repaired.





Water is dripping out of the water dispenser and onto the floor	The Hose Connector is not connected properly or the inside hot or cold water tank is leaking.	Make sure the hose connector is properly connected. Contact dealer if a water tank is leaking.
	The drain cap at the back is not fastened properly.	Tighten the drain cap. If the seating silicon material inside the drain cap is torn or damaged, then replace it with a new one.
The water being dispensed has a strange taste	This is not uncommon with new water dispensers. Do not worry, this is not dangerous to your health. This water dispenser is FDA approved.	Clean the hose in the dishwasher (top rack only) or let it soak in dishwashing soap. The strange taste usually goes away after the first bottle has been used up.







[www.tylrhome.com](http://www.tylrhome.com)

