



INSTRUCTIONS MANUAL

TYL-BS238

PORTABLE

BOOMBOX

Hi-fidelity audio on the go



www.tylrhome.com

Table of Contents

- IMPORTANT SAFETY INSTRUCTIONS..... 2**
- PARTS AND FUNCTIONS 4**
 - Control Panel 5
- OPERATING YOUR PORTABLE BOOMBOX 7**
 - Powering On/Off 7
 - Wireless Connection 7
 - USB Connection 8
 - AUX Connection 9
 - Volume Control 9
 - Music Control..... 9
 - Light Effects Control 10
 - EQ Presets 10
 - TWS (True Wireless Stereo) Function..... 10
 - Hands-Free Calling 11
 - Resetting The Boombox 12
 - Charging the Boombox..... 12
- CLEANING AND MAINTENANCE..... 13**

IMPORTANT SAFETY INSTRUCTIONS

When using your appliance, basic precautions should always be followed, including the following:



1. This appliance is for domestic use only. Do not use outdoors or on wet surfaces.
2. Do not handle the plug or appliance with wet hands.
3. Do not immerse the unit in water.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
5. Children must not play with the appliance.
6. Keep the appliance and its cord out of reach of children less than 8 years.
7. This product is not a toy.
8. Do not use the appliance if any parts appear to be faulty, missing or damaged.
9. Always unplug the unit before carrying out any cleaning, performing user maintenance or changing accessories.
10. Do not use the appliance if it has been dropped or damaged in any way.
11. Check to ensure that the electricity supply matches that shown on the rating plate.
12. If the supply cord is damaged, it must be replaced by a qualified

service agent in order to avoid a hazard.


13. Only use this appliance for its intended domestic use.
14. Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
15. Keep the power supply cord away from any parts of the appliance that may become hot during use.
16. Do not disconnect the appliance from the electric outlet by pulling the cord; switch it off and remove the plug by hand.
17. Do not move the appliance when it is in use.
18. Use of an extension cord with the appliance is not recommended.
19. This appliance should not be operated by means of an external timer or separate remote control system.
20. Keep the appliance away from flammable materials.

**SAVE THESE INSTRUCTIONS.
HOUSEHOLD USE ONLY.**

PARTS AND FUNCTIONS

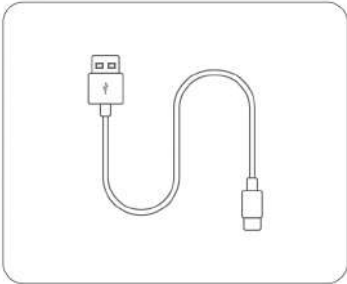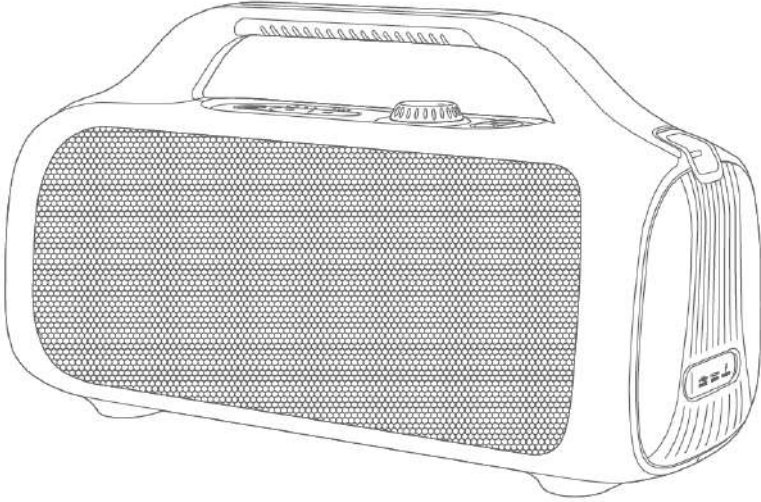 




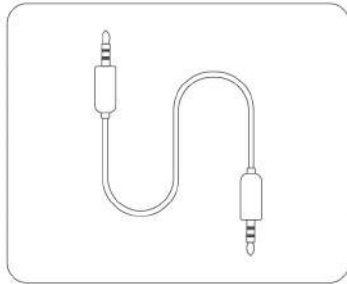





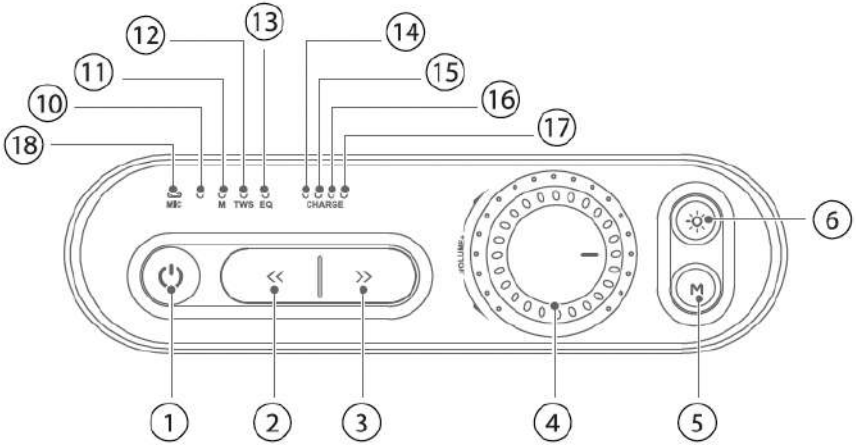









USB-C charging
cable



AUX audio cable


Control Panel




- ①  **POWER** button
- Press and hold for 2 seconds: Power ON/OFF
 - Press once: Play/Pause
 - Press twice: Switch playing mode
 - Press thrice: Restore to factory settings
- ②  Press once to go to the previous track
- ③  Press once skip to the next track
- ④  **VOLUME** dial
- Turn clockwise: + volume
 - Turn counterclockwise: - volume
- ⑤  **MODE** button
- Press once to enable EQ
 - Press twice to enable/disable TWS function
 - Press thrice to disconnect wireless connection
 - Press and hold to switch to privacy call
- ⑥  **LIGHT EFFECT** button
- Press to select light effect
 - Press and hold to turn off light effect
- ⑦  **USB-A** Connect to a USB storage device; charge a mobile device
- ⑧  **USB TYPE-C** Charging port
- ⑨  **AUX** 3.5 audio input
- ⑩  **MODE** indicator light
- Blue (Wireless)
 - Green (AUX)
 - White (USB)
- ⑪  Light effects indicator light (Blue)
- ⑫  TWS indicator light (White)
- ⑬  **EQ** indicator light
- Balance (No light)
 - Bass (White)
 - Pure (Yellow)
- ⑭  25% battery indicator light
- ⑮  50% battery indicator light
- ⑯  75% battery indicator light
- ⑰  100% battery indicator light
- ⑱  **MIC**

OPERATING YOUR PORTABLE BOOMBOX

Powering On/Off

1. Press and hold the  button to turn the unit on. When turned on, the boombox automatically enters wireless playing mode and the mode button indicator blinks to indicate that the boombox is searching for a device to pair with.

To turn the unit off, press and hold the  button again.

NOTES:

- Fully charge the boombox before first-time use to prolong the lifespan of the built-in battery.
- The boombox automatically turns off after 10 minutes of inactivity when not connected to any device.


Wireless Connection

1. On the device that you would like to connect to your boombox, turn on wireless connectivity and ensure that it is 'discoverable.'
2. Search for available devices and select "TYLR." Once connected successfully, an alert will sound, and the mode indicator light will remain illuminated in blue.
3. The boombox will connect to the device when it is within range, which is about 10 meters or less from line of sight. Your device will


remain paired with the boombox unless you decide to disconnect or 'unpair' it.


4. Press the **M** button thrice to disconnect the wireless connection.

NOTE: *If your device should be come unpaired for any reason, follow the steps above to 'pair' it again.*

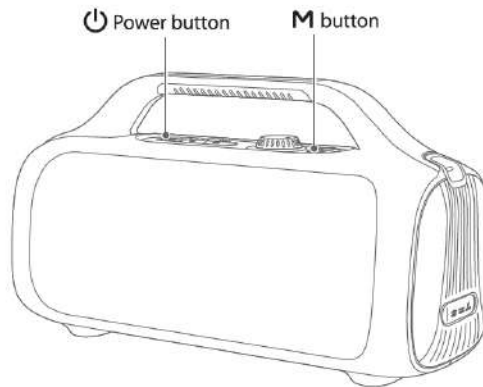


USB Connection

1. Plug the USB drive into the USB port. The audio files on the USB drive will start to play automatically.
2. Press the << or >> buttons on the boombox to restart a track, go back to a previous track, or skip to the next track.
3. Press the  button on the boombox once to play or pause the song.

NOTE: *Plugging the USB drive will automatically disconnect the wireless playing function and switch to USB mode. Press the  button twice to switch to wireless playing mode again.*

AUX Connection

1. Connect an external music player or sound source to the boombox. Plug the supplied 3.5mm audio cable into the AUX-IN port and connect the other end to your external audio source.
2. Use the controls on the external audio device to start playback, or adjust volume.



NOTE: *Connecting an external device will automatically disconnect the wireless playing mode and switch to USB mode. Press the  button twice to switch to wireless playing mode again.*

Volume Control

Rotate the volume control dial clockwise to turn up the volume.

Rotate counterclockwise to turn down the volume.



Music Control

1. Press the  or  buttons on the boombox (or on the device) to restart a track, go back to a previous track, or skip to a forward track.

2. Press the  button once to play or pause the song.

Light Effects Control

This boombox has 10 lighting effects. The lights come on when the boombox is powered on.

Press the  button to select a light effect, or press and hold the  button for 2 seconds to turn the light effect off.

EQ Presets

This boombox has 3 EQ presets:

BALANCED : no EQ indicator light
BASS : white EQ indicator light
PURE : yellow EQ indicator light


Press the **M** button to cycle through the presets. The default EQ preset is BALANCED.

TWS (True Wireless Stereo) Function

Connect two boomboxes to each other via TWS.

1. Press the **M** button twice on either boombox to pair with the other. Once paired successfully, an alert will sound and the TWS button will remain illuminated.

2. Connect your device wirelessly to the boombox.
3. Press the **M** button again twice to disable the TWS function.

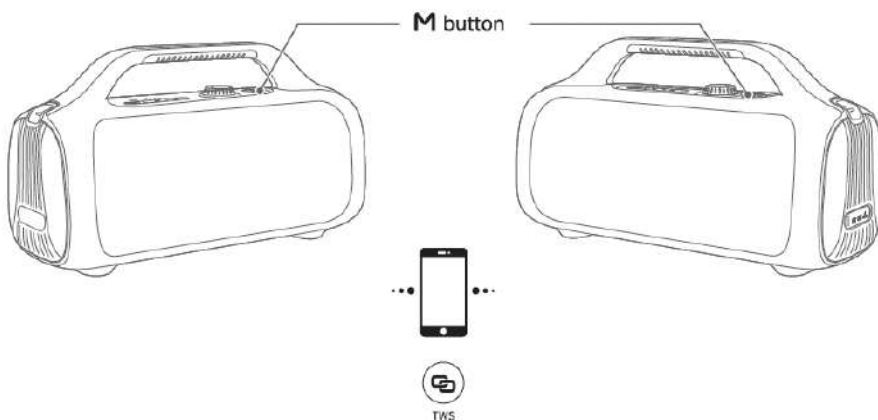

Hands-Free Calling

Once a mobile phone is connected wirelessly to the boombox and there is an incoming call, press the **⏻** button once to accept, or press twice to reject the call.

To answer the call on your phone, press and hold the **M** button for 2 seconds.


Resetting The Boombox

Press the **M** button 3 times to restore to factory settings.

Charging the Boombox

Make sure the unit is turned off. Plug the included charging cable into the charging port of the unit, then connect the other end to a 5V/2A USB charger.

- To protect battery lifespan, fully charge at least once every 3 months. Battery life will vary due to usage patterns and environmental conditions.
- Charge the unit as soon as you hear the “low power” prompt.
- While charging, the charging indicator lights blink. When the boombox is fully charged, the charging indicator lights remain steady.

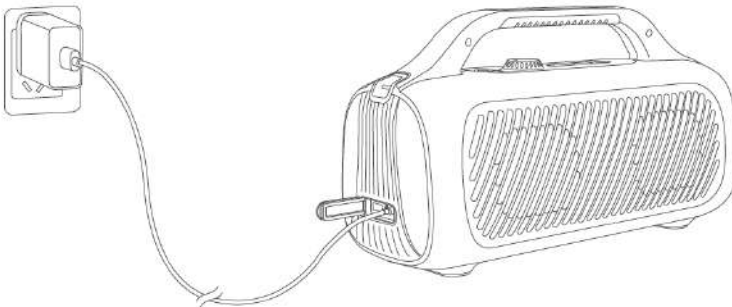

CLEANING AND MAINTENANCE

- Refrain from using the boombox in extreme temperatures.
- When not in use, store the boombox in a cool and dry area away from objects that generate heat such as radiators and stoves.
- Use a soft, dry cloth to wipe and clean the boombox. For more stubborn stains, use a soft cloth dampened with water.

WARRANTY TERMS AND CONDITIONS

ONE-YEAR LIMITED WARRANTY ON PARTS AND LABOR

TYLR provides a warranty to the original purchaser of this product against defects in materials and workmanship for one year. If a product covered by this warranty is determined to be defective within the warranty period, **TYLR** will repair or replace the defective part with a new or remanufactured part free of charge subject to terms and conditions stated herein.

To obtain warranty service, proof of purchase in the form of a sales invoice or copy thereof is required to show that a product is within the warranty period. If any one of the documents cannot be produced, corresponding fees for labor and replacement parts will be charged.

Parts and Labor

There will be no charge for parts and labor during the warranty period. Replacement parts or units may be new or recertified and are upon **TYLR's** option and sole discretion. Replacement parts and units are warranted for the remaining portion of the original warranty. Our decision on all questions relating to complaints as a result of defects, either workmanship or materials, shall be conclusive and you shall agree to abide by such decision. Any unit or defective part that have been replaced shall become **TYLR's** property. After the lapse of this warranty, a charge will be made on all labor and replacement of parts.

Types of Services

Defective Products must be sent to any **TYLR** service center to obtain warranty service. **TYLR** is neither responsible for transportation costs to the service center nor **TYLR** will cover return shipping to the customer. Product returns to **TYLR** service centers must utilize either the original carton box and shipping material or packaging that affords an equal degree of protection.

For home service, the transportation fee of **TYLR** service personnel will be charged to the customer, depending on the location. Our service personnel reserve all rights to refuse to attend to any equipment installed in an inaccessible location or any other hazardous situation.

LIMITATIONS AND EXCLUSIONS

TYLR one-year limited warranty only covers defects in materials and workmanship; however, this warranty does not cover the following:

1. Damage resulting from accidents, transport, misuse, abuse, alteration, tampering, or failure of the purchaser to follow normal operating procedures outlined in the user's manual.
2. Damage caused by negligence and poor maintenance.
3. Defects or damage due to spillage of food/liquids or improper usage of electrical supply or electrical circuit, major fluctuations in voltage, exposure to rain or moisture, wrong fuel or oil used.
4. Damage, losses, and defects as a result of fire, flood, or other Acts of God.
5. Normal wear-and-tear, corrosion, rusting, or stains.

6. Defects & damage arising from improper testing, operation, usage of the wrong component, demonstration, maintenance, installation, adjustment, or any alteration or modification of any kind.
7. Scratches & damage to the outer surface areas and externally exposed parts that are due to normal customer use.
8. General maintenance & routine servicing.
9. Claims for damaged/missing parts after 7 days from the date of purchase.
10. If any part or parts of the unit are replaced with a part or parts not supplied or approved by us, or if the unit has been dismantled or repaired by any person other than a **TYLR** authorized technician.
11. Any equipment/product which has its serial number removed or made illegible/tampered with.
12. If the warranty card is altered, defaced, or erased in any manner whatsoever.
13. If the unit is used for purposes other than household use, such as commercial use.

The (6) months warranty period covers the battery and one (1) year for the main PCB and power PCB. However, this warranty does not cover parts (i.e., speakers, accessories such as USB cable, AUX cable, controls and casing) that are subject to wear and tear, rust, stains, or corrosion.

This one-year limited warranty does not cover Products sold **“AS IS”**, **“FACTORY RECTIFIED”**, or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES,

INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. **TYLR'S** TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING **TYLR'S** NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT. **TYLR** SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

IMPORTANT: Please present sales invoice as proof of purchase whenever you require our service during the warranty period.

www.tylrhome.com