



USER MANUAL



20" BOX FAN

HIGH PERFORMANCE AIR FLOW

TYL-KYT20

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, follow basic safety precautions to reduce the risk of fire, electrical shock, personal injury and property damage. Read all safety precautions, and familiarize yourself with this manual prior to use.



WARNING: Use your fan only as described in this manual. Any other use is not recommended by the manufacturer, and can cause fire, electrical shock, personal injury and property damage.


SAFETY PRECAUTIONS

- Extreme caution is necessary when any fan is used near children, pets and invalids. To reduce the risk of personal injury and electric shock, keep fan out of the reach of children, pets and invalids.
- To disconnect the product from an electrical outlet, pull directly on the plug. DO NOT pull on the Power Cord.
- Unplug power cord when not in use, when changing locations, or prior to cleaning.
- DO NOT use this product with any solid-state speed control device.
- DO NOT immerse the product, power cord or plug in water or other liquids. DO NOT place the product in or near an open window as precipitation may enter the product and cause electrical short-circuiting.
- Never operate the product without the Front Guard / Grill in place.
- DO NOT insert fingers or any other object through the Fan Guards / Grill or into any opening of the product.
- Place your fan on a stable and level surface to avoid it from tipping or being knocked over.
- DO NOT operate the fan directly adjacent to curtains, plants, window covers, etc. to avoid accidental entanglement or create a fire hazard.
- Allow 12 inches of clearance around the fan to avoid obstructing the intake or exhaust. NEVER COVER THE FAN.
- Keep the cord away from heavy traffic areas. To avoid fire hazard, NEVER put the cord under rugs, radiators or stoves.
- DO NOT remove, place, repair or tamper with the originally supplied plug.
- If using an extension cord with this product, ensure that the extension is compatible with the fan plug.
- DO NOT operate the product if it has a damaged or cut Power Cord or Plug, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if it is dropped in water. This product has no user-serviceable parts. DO NOT attempt to examine or repair this product yourself as this will void your warranty.
- Connect the power plug to an easily accessible outlet so that the fan can be unplugged immediately in the event of an emergency.
- Where assembly is required, DO NOT use this unit until fully assembled.
- Keep unit away from heated surfaces and open flames.
- DO NOT operate in the presence of explosive and/or flammable fumes.
- For household use only and not for industrial or commercial applications.


OPERATION

PRE-OPERATION INSTRUCTIONS

1. Carefully remove your fan from its shipping container. (The shipping container can be reused for off-season storage)
2. Ensure that the fan's Power Control Switch is in the 'OFF' position [O].
3. Completely uncoil the power cord, and connect your fan directly into a 220 Volt, grounded AC electrical outlet.

 CAUTION: Ensure that the plug fits tightly into the electrical outlet. A loose fit can cause overheating and damage the plug.

NOTE: The power cord and the plug may feel warm during normal operation. The power cord has a polarized plug (with one blade wider than the other) that will only fit in a polarized outlet one way. If it does not insert easily, try reversing the plug. If it still does not fit, contact your electrician to replace your outlet. DO NOT defeat the safety purpose of the polarized plug.

 CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, AND FULLY INSERT

ASSEMBLY INSTRUCTIONS

For ease of assembly, lay the Fan Body (Part A) with the front facing down on a flat surface and attach each support base (Part B) to the Fan Body until the support base clicks securely in place.

OPERATING INSTRUCTIONS


Select the desired speed by turning the rotary dial.
"OFF" Position [O], Low [1], Med [2], High [3].


CLEANING AND MAINTENANCE

PRE-CLEANING INSTRUCTIONS

1. Turn the Power Control Switch to the 'OFF' position [O].
2. Disconnect the power cord from the electrical outlet.


CLEANING INSTRUCTIONS

 WARNING: Do not expose any electrical parts or switches to water, cleaning liquids or other chemicals, as fire, electrical shock, personal injury and property damage can occur.

 CAUTION: Do not use gasoline, benzene or thinner to clean your fan, as these chemicals can cause surface damage.

1. Use a vacuum cleaner with a crevice tool to remove dust from the interior or your fan.
2. Use a clean, soft and lightly damp cloth to gently wipe the surface of the enclosure.
3. Allow the enclosure to dry completely prior to operating you fan.

Fan Parts:
A. Fan Body
B. Support Base

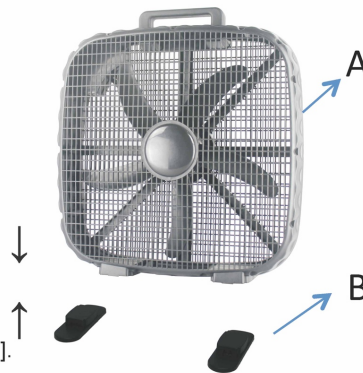

OFF-SEASON STORAGE INSTRUCTIONS

1. Secure the power cord, and place your fan in its original shipping container, or a similar container.
2. Store the container in a cool, dry location.

TROUBLESHOOTING

If your fan fails to operate, perform the following:

1. Review this manual to ensure that you understand the basic operations and features of your fan.
2. Turn the Power Control Switch to the 'OFF' position [O], disconnect the power cord from the electrical outlet and check that the electrical outlet is working properly.
3. Check your household circuit breaker or fuse.
4. Check for obstructions at the intake and exhaust vents.
5. Consult an authorized repair technician DO NOT attempt to do repairs yourself to avoid injury.