



# ECOLED RECHARGEABLE LANTERN

Ideal for camping, work-site, brownouts and night time.

## INSTRUCTIONS MANUAL

TYL-YCR1073A



[www.tylrhome.com](http://www.tylrhome.com)

Carefully read all instructions before use and save for future reference.

### **TO CHARGE BATTERY**

When the battery is fully discharged, it will take about 8-10 hours to fully recharge it.

To obtain maximum performance, charge for about 10 hours for the first three cycles. Always charge the battery immediately after use whenever possible.

Charge indoors using household source. On a full charge, the continuous run time is up to 6 hours on LOW and 3 hours on HIGH. Total run time will increase if the unit is turned on and off intermittently.

Do not leave the lantern turned on after the battery has been fully drained, as over-discharging the battery can cause problems in recharging the battery to a full charge. If this does occur, immediately switch the lantern off and recharge for 8-10 hours. After an extended period of storage (more than 6 months), recharge for the full 8-10 hours.

The lantern carries an initial factory charge of 75%, but for optimal results, charge the lantern for 7 hours before initial use.

**To Charge:** Connect the small end of the supplied charging cable to the hole in the lantern collar. Connect the other end of the cable to any USB charging port.

A small LED light located on the body, will glow when the charger is connected correctly. If the red light is on, the lantern is being recharged. If the green light is on, the lantern is fully charged already.

### **TO OPERATE YOUR LANTERN**

1. Your lantern is equipped with an On/Off switch and 3 built-in lighting modes (Low, High and Night Light).
2. Push the switch to choose the lighting option you prefer.  
ON > LOW > HIGH > NIGHT LIGHT > OFF
3. To hang lantern, lift recessed hook in handle.