



# INSTRUCTIONS MANUAL

TYL-EC815A15P

## WATER FILTRATION VACUUM CLEANER

Water-based bagless technology for an easy-to-clean experience



[www.tylrhome.com](http://www.tylrhome.com)



## Table of Contents

|  |           |
|--|-----------|
| <b>IMPORTANT SAFETY INSTRUCTIONS .....</b> | <b>2</b>  |
| <b>PARTS AND FEATURES .....</b>            | <b>4</b>  |
| <b>UNPACKING YOUR VACUUM CLEANER .....</b> | <b>5</b>  |
| <b>ASSEMBLY .....</b>                      | <b>5</b>  |
| <b>USING YOUR VACUUM CLEANER.....</b>      | <b>6</b>  |
| Using the Accessories .....                | 7         |
| Blowing Operation.....                     | 7         |
| <b>CLEANING AND MAINTENANCE .....</b>      | <b>8</b>  |
| Cleaning the filter .....                  | 8         |
| Replacing the filter .....                 | 9         |
| <b>STORAGE.....</b>                        | <b>9</b>  |
| Storing Accessories .....                  | 9         |
| <b>TROUBLESHOOTING.....</b>                | <b>10</b> |

## **IMPORTANT SAFETY INSTRUCTIONS**



When using any electrical appliance, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
4. Disconnect the power plug after use and before every cleaning. Pull the plug, not the cord, in order to disconnect the appliance from the power supply.
5. Disconnect the power plug from the power source before making adjustments, changing accessories or storing the tool.
6. Keep ventilation openings clear of dust, hair, paper or anything else that may restrict air flow.
7. Do not put objects into openings. Do not use when any opening is blocked. Keep free of dust, lint, hair and anything that may reduce air flow.
8. Keep hair, clothing, fingers and all parts of the body away from openings and moving parts.
9. To reduce the risk of fire or explosion, do not use near combustible liquids, gases, dusts, gasoline or other fuels, lighter

fluid, cleaners, oil-based paints, natural gas, coal dust, magnesium dust, grain dust, aluminum dust or gun powder.

10. Do not vacuum any sharp-edged, hot or incandescent materials.
11. Do not vacuum toxic materials.
12. Do not use without filters in place.
13. Do not use without water in the drum.
14. Do not vacuum any flour, cement and the like, in order to avoid overloading.
15. Do not expose vacuum to rain or wet conditions.
16. The powerhead should only be cleaned with a dry or damp cloth; it should never be immersed in water. Do not use any solvents for cleaning.
17. This appliance is intended for domestic use only and not for commercial applications.
18. Do not abuse the cord. Never use the cord to carry the tool or pull the plug from an outlet. Keep the cord away from heat, oil, sharp edges, or moving parts. Replace damaged cords immediately.

## PARTS AND FEATURES

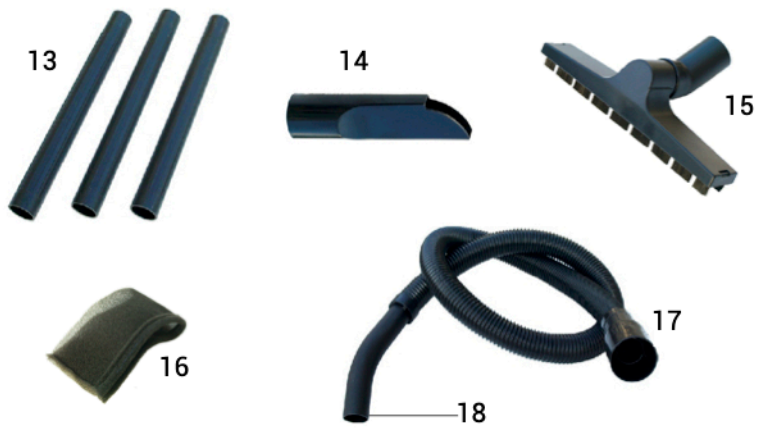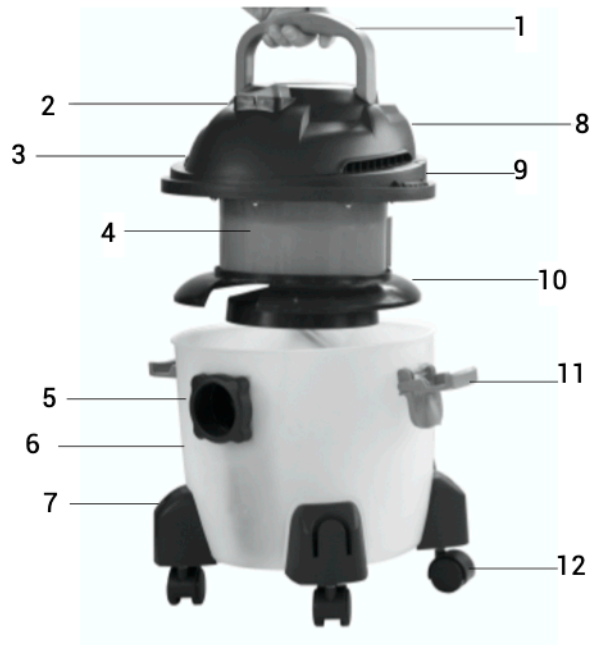

- |                   |                           |
|-------------------|---------------------------|
| 1 – Handle        | 11- Latches               |
| 2 – On/Off Switch | 12 – Casters (4)          |
| 3 – Powerhead     | 13 – Extension Tubes      |
| 4 – Filter Basket | 14 – Crevice Tool         |
| 5 – Vacuum Poert  | 15 – Floor Brush          |
| 6 – Water Drum    | 16 – Foam Filter          |
| 7 – Holder(s)     | 17- Flexible Hose         |
| 8 – Blow Port     | 18 – Flexible Hose Nozzle |
| 9 – Holder(s)     |                           |
| 10 – Wind Plate   |                           |

## **UNPACKING YOUR VACUUM CLEANER**

1. Remove the unit out of the package.
2. Unlock the latches and remove the powerhead.
3. Remove the contents from inside the drum and make sure all parts and accessories are complete.

## **ASSEMBLY**


1. Turn the drum upside down and snap and secure all 4 casters inside the 4 bottom holes. Lift and put the drum on its casters.
2. Make sure the drum is clean and free from dust and dirt.
3. Make sure foam filter is placed on the filter basket
4. Add water to the water drum.

**Note:**

- *Vacuuming without water can damage the motor.*
- *Make sure water level is within the 'MIN' and "MAX' on the water drum.*

5. Reinstall and securely latch the powerhead onto the water drum with the On/Off switch centered over the vacuum port on the side of the drum.

6. Line up the tab on the end of the flexible vacuum hose with the indentation in the vacuum port on the side of the drum. Insert the hose into the hose (clockwise) ¼ turn to lock securely in place.

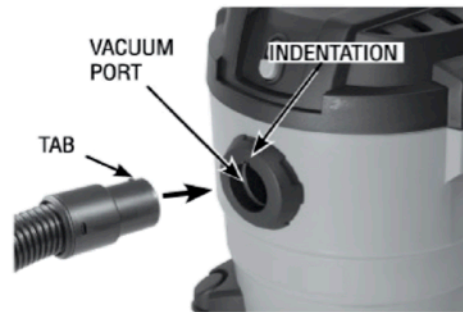

7. Choose the desired attachments (extensions tube/s, floor brush and crevice nozzle) and push it onto the hose nozzle.

## **USING YOUR VACUUM CLEANER**

1. Connect the vacuum to the power. Turn on the power switch on the vacuum powerhead and start vacuuming.

**Note:** *The water filtration vacuum cleaner can be used on dry and wet surfaces. To use as a wet pick-up vacuum, operate the unit on the wet surface as you would for a dry surface.*

2. Turn of the power switch when vacuuming is finished.



## Using the Accessories

- Floor brush - Use on hard floors and carpets.
- Crevice nozzle - Use to vacuum hard-to-reach places, such as heater gaps, wall ends and corners.

**Caution:** Never attach or detach tools while the vacuum cleaner is running. Turn off and unplug the vacuum before attaching accessories.

## Blowing Operation

To use the blower feature:

1. Verify that the power cord is disconnected from the outlet.
2. Make sure the drum is empty before using a blower.
3. Remove hose from the vacuum port.
4. Insert the large end of the hose into the blowing port on the back side of the powerhead and screw into position.
5. Fit the desired extension wand and/or nozzle to the vacuum hose.
6. Verify that the switch is on the "OFF" position (position 0) before plugging the power cord into the outlet.
7. Before turning on the vacuum, firmly hold loose end of the hose. Turn the motor on by flipping the switch to the "ON" position (position 0) and unplug from the power supply.

## **CLEANING AND MAINTENANCE**

1. Make sure the vacuum is unplugged from the power source.
2. Disconnect the hose from the drum.
3. Undo the latches and remove the powerhead from the drum.
4. Remove any dirt or debris from the drum and hose.
5. Pour dirty water into a bucket, then discard water,
6. Wash water drum with water and mild soap; rinse, and dry thoroughly with a dry cloth.
7. Clean exterior of the powerhead using a slightly damp cloth. Do not use any harsh chemicals.

### **Cleaning the filter**

1. Verify that the power cord is disconnected from the outlet.
2. Lift the powerhead and place in upside down position.
3. Remove the wind cover plate, then carefully remove the foam filter from the filter cage.
4. Rinse foam filter under clean running water, then let dry completely.
5. Put back foam filter onto filter cage.

#### **Notes:**

- *Do not wash the filter in the dishwasher or in the washing machine.*
- *Do not use a hair dryer to dry the filter.*
- *Always make sure the filter is in place before operating the appliance. Never use without the filter.*

## **Replacing the filter**

1. Verify that the power cord is disconnected from the outlet.
2. Lift the powerhead and place in upside down position.
3. Remove the wind cover plate, then carefully remove the foam filter from the filter cage and replace with a new one.

## **STORAGE**

Before storing the vacuum cleaner, empty and clean the water drum. Wrap the power cord around the unit. Keep accessories in the same area as the vacuum cleaner so that they are readily available. Store it indoors.

Wrap the power cord around the main body. Insert the end of the flexible hose over the hook located at the side of the main body. Then, insert the dust brush and crevice tool into the base (Fig. 19).

### **Storing Accessories**

Slide the extension tubes onto the holders over the casters. Insert the floor brush and crevice tool over the holders on the powerhead.



## TROUBLESHOOTING

| <b>Problem</b>  | <b>Possible reason</b>   | <b>Possible solution</b>  |
|---|--|---|
| Vacuum will not operate.  | <ul style="list-style-type: none"><li>• No power supply.</li><li>• Faulty power cable, switch or motor.</li><li>• The motor is overheated and thermal protection is activated.</li></ul> | <ul style="list-style-type: none"><li>• Check power supply.</li><li>• Check and repair or replace faulty item.</li><li>• Wait for the motor to cool down for an hour and then reset the vacuum On/Off power switch.</li></ul> |
| Suction efficiency is reduced efficiency; increased motor/speed or vibration. | <ul style="list-style-type: none"><li>• The hose or tube is clogged.</li><li>• Filter is clogged.</li><li>• Floor brush is clogged.</li></ul>  | <ul style="list-style-type: none"><li>• Clean the tube and/or hose.</li><li>• Clean the filter.</li><li>• Check floor brush and clean if necessary.</li></ul>   |