



INSTRUCTIONS

www.NFlightNomad.com

STEP 1

Locate auxiliary audio cable input for your headset.



STEP 2

Attach microphone mounting pad (3M Dual Lock) to earcup near the auxiliary audio cable input.

a. Clean earcup before attaching mounting pad.

b. Press and hold mounting pad to earcup for 30 seconds.



STEP 3

Press firmly to attach microphone to mounting pad. 3M Dual Lock will snap together with an audible "click."



STEP 4

Plug microphone cable into auxiliary audio cable input on headset.



STEP 5

When flying, the word "TALK" must be oriented facing toward your mouth in order to pick up your voice clearly.



Face "TALK"
toward mouth



*If using a TSO mic, the word "TALK" may be obscured by the muff.

REMOVAL

To remove microphone from headset, unplug 2.5mm cable from earcup. Peel microphone away from 3M Dual Lock pad, rather than pulling microphone straight away from headset.



STEP 6

A - Volume Control: Controls the volume with individual wheels for each ear. Does not affect the volume of auxiliary audio devices.

B - Power Button: Long press (~3s) Powers on/off Bluetooth control box. Does not power on headset ANR. A longer (~5s) press on this button will put the device in Bluetooth pairing mode.

C - Phone Button: Long press (~3s) Connects or disconnects Bluetooth to a previously paired device. A blinking blue LED indicates a successful connection.


- To pair a new device press the phone button twice and you will hear an audio annunciation stating "pairing." The LED will flash blue/red. Look for NFlightNomad on your mobile device's Bluetooth device list and select it. You will hear an audible "connected."
- A quick single press of the phone button will start playing music.
- To place a phone call on a paired device make sure the Audio Priority Switch (F) is set to mix and make a call on your mobile device. The call can be ended by pressing the phone button (C) or on your mobile device.

D - Volume UP Button:

Short press (~1s) will increase volume. Long press (~3s) will skip to the next song on your playlist.

E - Volume DOWN Button:

Short press (~1s) will decrease volume. Long press (~3s) will back-up to the previous song on your playlist.

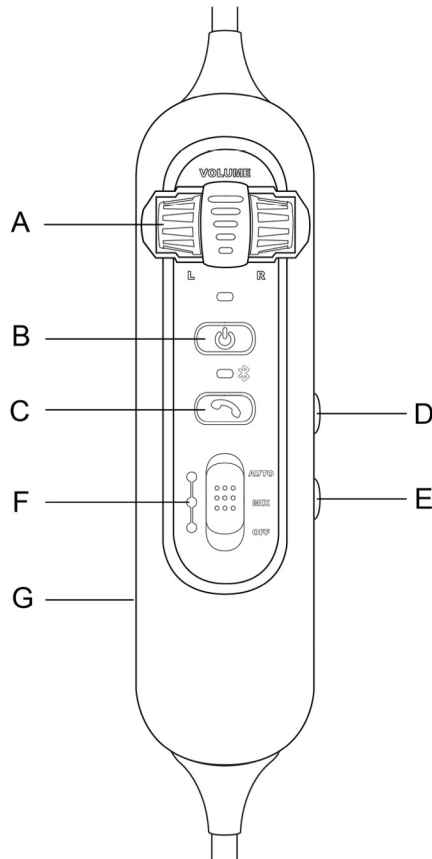


F - Audio Priority Switch:

- Auto - Will mute music when ATC or intercom audio is detected.
- Mix - Will allow both ATC and music to play at the same time.
- Off - Mutes all music and phone calls.

G - Auxiliary Audio Input: Accepts 3.5mm auxiliary audio input.

SUPPLEMENTAL

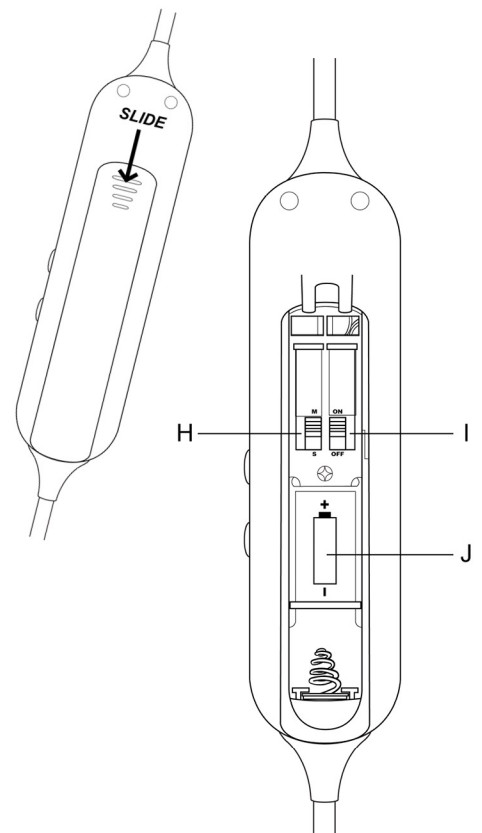

H - Mono/Stereo: Selector for mono or stereo intercom systems

I - Auto Power Off: When this is switched, on the unit will auto power down after 4-7 minutes of no activity.

J - Batteries: This unit requires 2 x AA batteries. Battery life may vary, but testing has shown that the unit will operate for over 40 hours under normal conditions.