



INSTRUCTIONS

www.NFlightNomad.com









When flying, the word "TALK" must be oriented facing toward your mouth in order to pick up your voice clearly. Face "TALK" toward mouth



REMOVAL

To remove microphone from headset, unplug 2.5mm cable from earcup. Peel microphone away from 3M Dual Lock pad, rather than pulling microphone straight away from headset.



The NFlight Nomad is covered by our lifetime warranty.

For questions or warranty support, please contact Support@NFlightNomad.com