


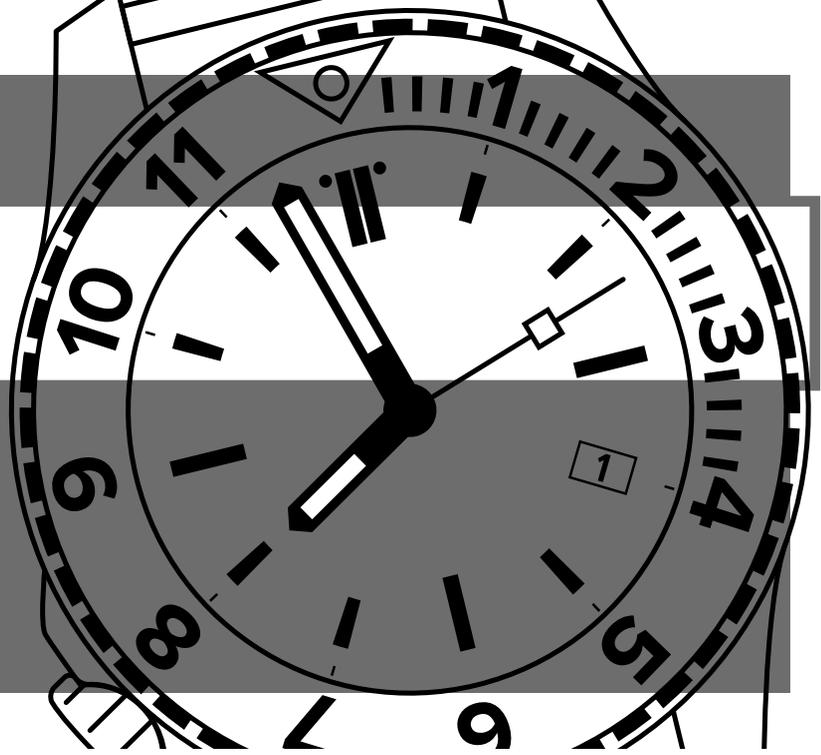

# SANGIN ATLAS OPERATOR'S MANUAL



## OPERATOR'S MANUAL

The Sangin Atlas is powered by the Seiko NE15 automatic movement.

### 1 - WINDING

Unscrew the crown counter-clockwise until the crown “pops” open. At this time the movement can be wound by rotating the crown clockwise.

Regular use of the Atlas will keep this movement wound, allowing for a 50 hour power reserve. If the Atlas sits for more than 50 hours without use, it can be wound 55 times to ensure it has a solid power reserve.

### 2 - DATE ADJUSTMENT

Slightly pull the crown out and rotate counter-clockwise to select the date. Twist the crown gently as to not cause misalignment to the gears.

**WARNING: Do not** adjust the date between **9 PM and 3 AM**. The gears in the movement are engaged during this time and external movement of the gears can cause them to misalign, resulting in the gears becoming mangled.


### 3 - TIME ADJUSTMENT

When the crown is pulled to the third position you will notice that the second hand will stop. At this time, rotate the hands clockwise until you have set the time.

**Warning: Do not** adjust the date between **9 PM and 3 AM** while the date gears are in motion. We recommend that you only turn the hands clockwise, not doing so will lead to early maintenance of the movement.

### SECURING THE CROWN

Apply pressure straight towards the watch case. Screw crown clockwise until the crown is completely flat against the case. Always ensure that the crown is secured to avoid possible exposure to dust and moisture.

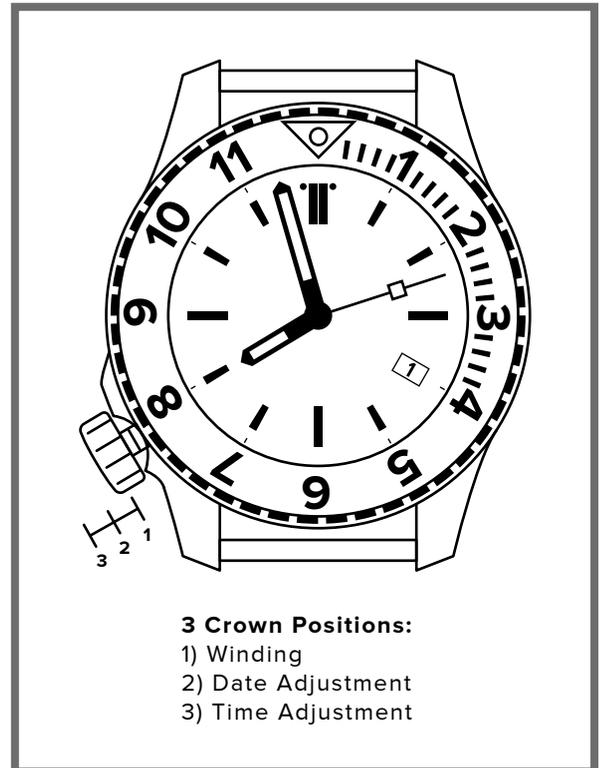

#### 3 Crown Positions:

- 1) Winding
- 2) Date Adjustment
- 3) Time Adjustment

#### Questions or Maintenance?

If you have any further inquiries or have a technical question about your watch, please contact us at:

[SALES@SANGININSTRUMENTS.COM](mailto:SALES@SANGININSTRUMENTS.COM)