


SHIMANO

CALCUTTA CONQUEST

S A-RB

CTCQ-200

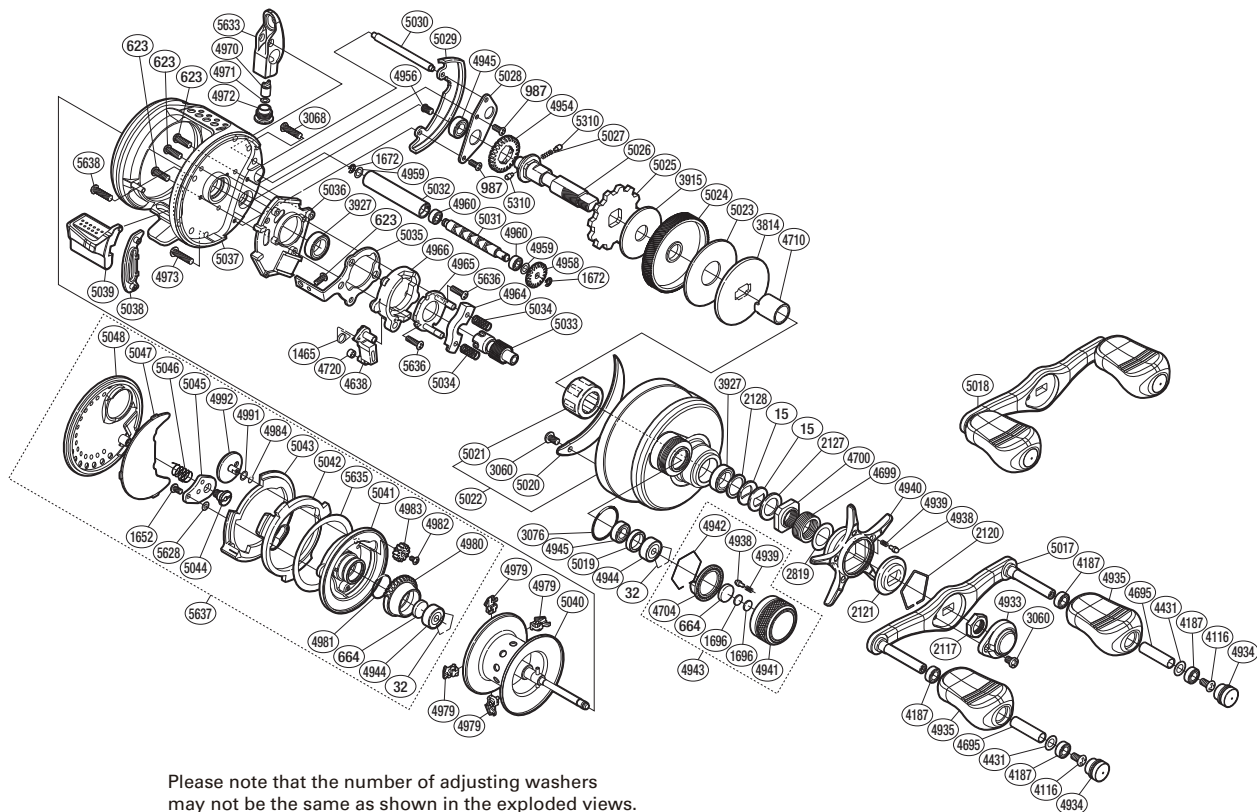

Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(51RH820200U) (Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0015	Drag Spring Washer	BNT4939	Click Spring	BNT5025	Anti-Reverse Ratchet
BNT0032	Bearing Retainer	BNT4940	Star Drag	BNT5026	Drive Shaft
BNT0623	Screw	BNT4941	Cast Control Cap	BNT5027	Idle Gear Spring
BNT0664	Spacer B	BNT4942	Cast Control Click Holder	BNT5028	Drive Shaft Retainer
BNT0987	Screw	BNT4943	Cast Control Cap Assembly	BNT5029	Frame Shield
BNT1465	Clutch Pawl Spring	BNT4944	Ball Bearing	BNT5030	Stabilizer Bar
BNT1652	Screw	BNT4945	Ball Bearing	BNT5031	Worm Shaft
BNT1672	E Lock	BNT4954	Idle Gear	BNT5032	Level Wind Guard
BNT1696	Cast Control Spacer	BNT4956	Screw	BNT5033	Pinion Gear
BNT2117	Handle Nut	BNT4958	Idle Gear	BNT5034	Yoke Spring
BNT2120	Click Plate Retainer	BNT4959	Washer	BNT5035	Clutch Plate
BNT2121	Star Drag Click	BNT4960	Ball Bearing	BNT5036	Clutch Guard
BNT2127	Star Drag Spacer	BNT4964	Yoke	BNT5037	One-Piece Frame
BNT2128	Bearing Washer	BNT4965	Clutch Cam Retainer	BNT5038	Clutch Bar Guide
BNT2819	Washer	BNT4966	Clutch Cam	BNT5039	Clutch Lever
BNT3060	Screw	BNT4970	Line Guide Pawl	BNT5040	Spool Assembly
BNT3068	Screw	BNT4971	Washer	BNT5041	Brake Case
BNT3076	O Ring	BNT4972	Pawl Cap	BNT5042	Brake Case Cam
BNT3814	Key Washer	BNT4973	Screw	BNT5043	Side Plate Cam Lever
BNT3915	Drag Washer	BNT4979	Brake Shoe M	BNT5044	B Side Plate Insert
BNT3927	Ball Bearing	BNT4980	Brake Pipe Gear	BNT5045	Damper Bush(A)
BNT4116	Screw	BNT4981	O Ring	BNT5046	Damper Spring
BNT4187	Ball Bearing	BNT4982	Screw	BNT5047	B Side Plate Seal
BNT4431	Washer	BNT4983	Br Dial Gear	BNT5048	Left Side Plate
BNT4638	Clutch Pawl	BNT4984	O Ring	BNT5310	Idle Gear Pin
BNT4695	Handle Knob Pipe	BNT4991	Washer	BNT5628	Washer
BNT4699	Star Drag Spring	BNT4992	Br Dial	BNT5633	Line Guide
BNT4700	Star Drag Nut	BNT5017	Handle Shank Assembly	BNT5635	Washer
BNT4704	Cast Control Click Plate	BNT5018	Handle Assembly	BNT5636	Screw
BNT4710	Roller Clutch Inner Tube	BNT5019	Bearing Spacer	BNT5637	Left Side Plate Assembly
BNT4720	Clutch Pawl Bushing	BNT5020	Set Plate Sticker	BNT5638	Screw
BNT4933	Handle Nut Plate	BNT5021	Roller Clutch Bearing		
BNT4934	Handle Knob Seal	BNT5022	Right Side Plate		
BNT4935	Handle Knob	BNT5023	Drag Washer		
BNT4938	Click Pin	BNT5024	Drive Gear	BNT4692	B-100 Oil (accessory)