




WATERPROOF MP3 PLAYER USER MANUAL

No. WPM10


Tayogo®

important

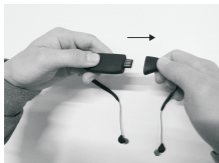

Picture 1

To connect the mp3 player to your computer, pull out the right headphone frame out. See picture 1.

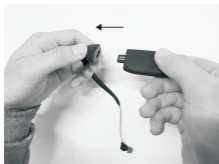

Picture 2

Pull out the left headphone frame out, see picture 2.



Picture 3

Don't bend the frame during pulling out as picture 3. The wrong operation will cause the permanent damage to the main host of MP3 player.

Wear and take off the MP3 player rightly

Right:hold the ends of headphone bone to wear or take off.See picture 1-2




Picture 1



Picture 2

Wrong:hold the headphone cables and pull strongly to wear or take off.See picture 3

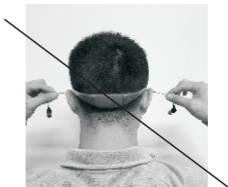

Picture 3

Note:The headphone cable is made by slim copper wires and it will be broken if you pull the cables strongly.This will cause the headphone no sound and this problem is out of warranty.

Read this manual carefully before using the MP3 player

Congratulations on purchasing your new waterproof MP3 player. We are convinced you will be satisfied with it. To always guarantee the great performance of this item, we would like to ask the following: Before using our product for the first time, carefully read the safety guide, warranty and operating instructions and adhere to the safety precautions. All activities done with this item may only be carried out as described in these operating instructions. Improper use of this device may cause the user to make mistakes or decisions that could lead to serious injury or death.

Safety guide

1. Don't use the MP3 player for purposes other than described in this manual. It can be potentially dangerous to use your MP3 player while engaging in other activities that require your full attention. You should exercise extreme caution or discontinue use in potentially hazardous situations.
2. Don't disassemble or modify the MP3 player in any way. Disassembly or modification will void the warranty.
3. Don't drop the MP3 player or apply excessive shock to the unit. Fire or electric shock may result due to using a damaged unit.
4. Don't place the MP3 player close to any heating device.
5. Don't use or store the MP3 player in places with high temperatures, fast temperature changes or strong magnetic fields.
6. To avoid accidents, Don't use the player while driving or operating other vehicles, this includes cars, motorcycles and bicycles. This is the law in some places. To avoid accidents, please don't listen to music at a high volume while walking, especially when crossing the street as well as in other potentially dangerous situations. Don't use the MP3 player in traffic areas doing activities such as driving, jogging, riding a bicycle or any area where an accident could occur. If the user utilizes this unit at or near the water surface, the user must maintain safety awareness of moving water crafts. Always follow the law of the country where you reside. Many countries have laws prohibiting such actions. Obey local laws, be alert

and listen carefully.

7. The manufacturer is not responsible for any data loss caused by the product defects, misuse or any other reason.

8. Don't listen to music too loud as it will damage your hearing and can cause permanent hearing loss, don't turn up the volume to block out noisy sounds around you. If you can't hear the sound of another person speaking when sitting opposite you 1 meter away then you are listening to the music too loud. Continuous use of earphone for many hours at high volumes may cause permanent hearing loss. In general the user must not listen to music too loud as this will also cause hearing loss. Listen to earphones at a comfortable level for reasonable periods of time. Hearing expert's advice against listening continuously loud and extended play. Always make sure that the MP3 player volume is turned down low before putting the earphones in your ears. If you put the earphones in your ears and then turn on the device, it may cause hearing loss due to a sudden burst of volume. Always set the volume level to a comfortable level for listening.

Caution: The ear buds insert directly into the ear are not to be used during scuba diving. Prolonged exposure to pressures at depths below 1 meter may result in permanent hearing loss. Discontinue use at first sign of pain or hearing loss.

9. Please plug or unplug the MP3 player and earphone frame carefully as instructed. Failure to do so will result in damage to MP3 player.

10. When you plug the USB jack into a computer, make sure you are plugging in the correct end. If the USB jack is plugged in the wrong way, the computer or the device might be damaged.

11. Don't connect the MP3 player to the computer if the MP3 player is wet. Doing so could result in permanent damage to the computer and the MP3 player, this could also result in the user receiving electric shocks or even dying. Don't leave the USB jack plugged into the computer while unattended.

- Maintain and keep the USB connection of the MP3 player free of dirt.
- When the MP3 player becomes dusty or dirty, wipe off with a soft cloth or clean towel.
- Keep out of reach of children, the parts included with this product can represent a choking hazard. This product is not for children under 6 years of age.
- Don't use chemicals or solvents to clean the device.

Specifications

Model No.: WPM10

IPX8 waterproof up to 3 meters (10feet) under water

Supported formats: MP3、WMA、DRM、WMA、OGG、APE、FLAC、WAV、AAC-LC、ACELP

Internal memory: 8GB

System OS: Windows ME/2000/XP/Vista, Windows7, Mac OS9.X or higher

PC interface: USB2.0

Power: built in 3.7V Li-Polymer rechargeable battery

Playback time: Up to 13hours

Dimensions (WxDxH) : 132x119x28MM

Weight: 41g including rechargeable battery and headphones

Operating Temperature Range: 0°C–80°C

Storage Temperature Range: 0°C–80°C

Accessories:

Extra ear buds, Instruction Manual, USB extension cable

Use the correct ear buds

The earphones use exceptionally high quality Japanese driver components in order to deliver such excellent sound. The earphones are delivered with five sets of ear buds for perfectly fitting all ear sizes. There are three sizes for land sports and two sizes for water sports. Make sure you use the correct type for water sport activities and fit them correctly to ensure that water doesn't enter the earphone channel.

Ear buds for normal usage



Small

Medium

Large

Ear buds for water sport activities



Medium

Large

Important read this

To ensure a watertight fit, make sure the water sport ear buds are fitted correctly onto the earphones. Be sure to push the bud all the way back over the Two redges (A) and (B) until reaching position (C). If water does enter the channel and covers the waterproof membranes the sound quality can be temporarily affected. Don't worry, allow the earphones to air dry and the sound quality will return to normal. For best results always insert the earphones snugly in your ears before entering the water and use the correct size ear bud. To ensure to get a snug fit in your ear, gently pull your ear backwards with one hand, while inserting the earphone with the other.



Operation

1 ►► Power/Play/Pause



Power: Press and hold 3 seconds, blue LED on and power on. After 3 seconds, MP3 player will play automatically with LED blue flashes.
 Power off: Press and hold 3 seconds to power off.
 Play/Pause: Press again to play.

- 2 **+** Volume+
Press to increase Volume.
- 3 **-** Volume-
Press to decrease Volume. In MP3 playing mode, Press and hold to switch from shuffle playing (default) to order playing.
- 4 **▶** Forward
Press to go next song, press and hold to go fast.
- 5 **◀** Backward
Press to go last song, press and hold to back fast.
- 6 ● LED indicator
Power on, LED is blue, playing music, LED flashes blue. In low battery, LED flashes red. During charging, LED flashed red. LED is full blue after charging finished.
- 7 Left headphone frame
- 8 Right headphone frame

Charging

Connect the main player to computer USB port or 5V 1A USB adapter to charge. It takes around 1.5 hour to be fully charged. The led is fully blue.


FM Playing

The Tayogo WPM10 has also FM playing function. During mp3 playing mode, press and hold volume + to go FM playing. Press and hold volume - to search working channels automatically. Press Next or Back button to find channels by hand.

Noted: This FM works not so well as it is not professional FM player. The FM channels and the channel quality is quite limited. We propose you can buy Tayogo professional FM player if you prefer good FM experience.

Step 1


The MP3 player is closed as picture 1 when you get the MP3 player, please take out the main player as the picture shows.

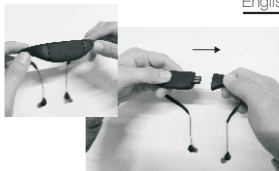

Picture 1

Step 2

Please take out the headphone bone as picture 2, Don't remove as picture 3 which will break the USB pins.

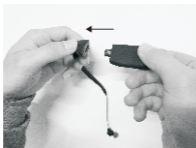

Picture 2



Picture 3

Step 3

Please plug into the MP3 player into the computer usb port. Please make sure it is the correct position as the picture 4 shows. If the wrong position, the MP3 player can't be found in your computer.

1. Connect the USB plug at the correct direction to your computer USB port.
2. Or you can use extending cable to connect with computer.
3. The MP3 player will be displayed as "Tayogo WPM10" on "My computer" in your PC.



Picture 4

Step 4

Download music files from your PC to your MP3 player


1. Connect the MP3 player to a USB port on your PC.
2. Click on "My Computer" and locate the MP3 tracks you want to download.
3. Select the desired tracks. Click once to select a single track. Shift-click or Ctrl-click to select multiple tracks and copy the files.
4. Paste the copied files to the MP3 player drive. The files will appear in the drive after you finish.

Caution : Don't disconnect the USB cable while the MP3 files are being download.

The MP3 files are being download. You can also use the MP3 player as a USB storage device, however you should always back up your music and data files.

Step 5


After downloading tracks and recharging the MP3 player, install the main player with the headphone frames.

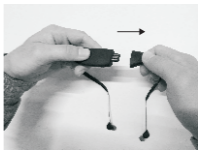

Step 5

Step 6

Make sure the mp3 player is well installed with frames (warning: be sure the contact points between the MP3 player and the USB socket are free of dirt, sand or any other debris otherwise it won't work properly)

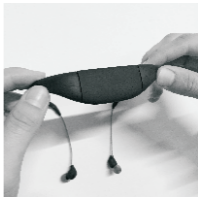

Step 6

Step 7

The earphone frame is made of special PP material and has been designed to be fully adjustable to fit all heads comfortably.



Step 8

The frame will fit close to your head and the Earphones fit snugly in the ears and lie flat against the ear. You can also wear on your neck as the picture.



Questions and Answers

1. Why I can't see the flash after plugging the computer port?

a : If plug to the computer port, please use the extending cable to plug the back usb port.

b : When you see "Tayogo WPM10 " disk in my computer, you can copy your songs into it.

2. How to switch from shuffle to order playing?

The default playing is shuffle. In the MP3 playing mode, press and hold Volume-, it can go to order playing. The rules for order playing is: play first the song name as Number from small to big, then for the songs name with letters from A-Z.

3. Why the songs playing sometimes stops suddenly?

Please make sure the music files are fine. When the songs have virus or damaged, it will stop suddenly.

4. Will the MP3 player sink down to water?

No. We use the super light and specialized material, it will float on the water.

5. Why the headset works well only in one side?

This is caused by the bad connection of the usb plug and the headphone frame. Please take out and plug again. If still not work, you need to change with the new headphone frame.

6. Can use it as the USB flash?

Sure, you can use it as the USB flash to store the files.

Note:

Please don't plug out the player during files copying.

For more question, please go to check our website: www.tayogo.com
or Email us: cs@tayogo.com

Welcome to register at our website and get more benefits.