 


## HEADPHONE COMPONENTS & BUTTON DESCRIPTIONS

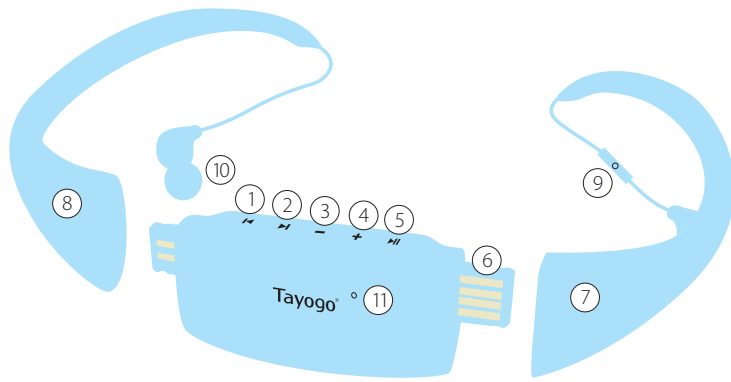

### 1 Prev

play previous song / (hold for 3 seconds to switch playing mode between: Bluetooth syncing, MP3 player, FM radio player)

### 2 Next

play next song

### 3 Volume-

Decrease Volume

### 4 Volume+

Increase Volume

### 5 Power on/off, Play/pause

hold for 3 seconds to turn the MP3 player on/off, tap to pause / resume playing the current song

### 6 4Pin USB Plug

Plug the device into a USB port of a computer or USB adapter to charge the device. The device will fully charge in approximately 1.5 hours and supports a 5v, 1A connection.

### 7 Right side earphone

Note: The Tayogo MP3 player is coated with a medical grade silicone that is anti-sweat and waterproof and skin friendly.

### 8 Left side earphone

### 9 Microphone

waterproof microphone used to talk when the player is Bluetooth paired with a smartphone during phone conversations


### 10 Ear buds

a variety of different sizes and styles are included with the Tayogo MP3 player. These are easily changed.

### 11 LED indicator

Power On Blue LED (flashes 3 times)  
Play or Standby Blue LED (flashes slowly)  
FM player Yellow LED (flashes slowly)  
Low Battery Red LED (flashes slowly)

While charging Red LED (solid)  
Charge complete Blue LED (solid)

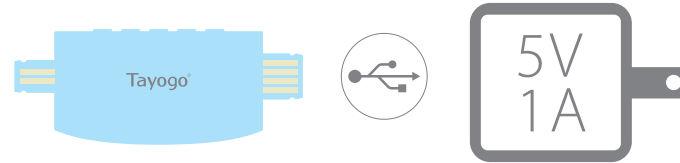

Plug to USB port of computer or USB adapter to charge, around 1.5 hours to be charged full. Support only 5V 1A power adapter.

## Tayogo AMP includes: Bluetooth headset, Mp3 Playing, FM Playing, Sports & APP

### Tayogo APP

Search "Tayogo" in iOS APP store or Google Play Store (for Android), download and run. Easily add or add your playlist, switch from different playing mode and check your sports record.



App Store



Google play



Tayogo®


Pair Tayogo AMP with your mobile phone, run the App and bind Tayogo W11. Register first with your mobile phone number (please select your country code) and you can log in the App to control the Tayogo AMP.

## MP3 Playing Mode

Press and hold the < (previous) button to switch between Bluetooth pairing / MP3 / FM radio modes


To Copy Music files onto the Tayogo MP3 player:

1. Remove the right side of the device to expose the 4-pin USB connector. Plug this end into the USB port of your computer.

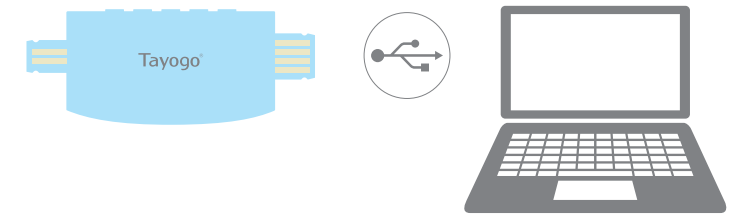

2. Go to "my computer" and locate the "W11" device. Drag and drop your favorite music files (in either .APE, .FLAC, .MP3, .WAV or .WMA file formats) onto the "W11" device. The music files can be stored in separate folders or all together at the root directory level. There is 8GB of storage space available on the Tayogo W11 MP3 player.

Note: The device can also be used as a USB thumb drive to store files.

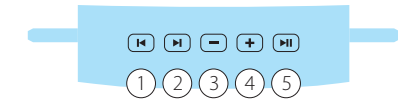


Button usage:

1. Previous Press to advance the previous song  
Press and hold for 3 seconds to change between Bluetooth pairing, Mp3 player and FM radio modes
2. Next Press to advance to the next song  
Press and hold for 3 seconds switch between play in order, shuffle or play single song (repeat) modes
3. Vol - Decrease the headphone volume
4. Vol + Increase the headphone volume
5. Play/Pause Toggle between playing / pausing the current song

## FM Radio Mode

Press and hold the < (previous) button to switch between Bluetooth pairing / MP3 / FM radio modes

NOTE: This is not a professional FM radio. The number of stations that the device is able to tune and receive will vary by location. Only local stations broadcasting with a strong signal can be received.

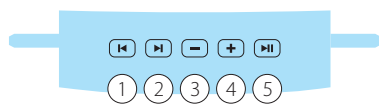


Button usage:

1. Previous Press to advance the previous FM frequency  
Press and hold for 3 seconds to change between Bluetooth pairing, Mp3 player and FM radio modes
2. Next Press to advance to the next FM frequency  
press and hold for 3 seconds to search the local effective channels
3. Vol - Decrease the headphone volume
4. Vol + Increase the headphone volume
5. Play/Pause Toggle between playing / pausing the current channels

Note: Phone calls from your Bluetooth paired smart phone take priority and will override both the MP3 player and FM radio mode functionality.

## My Sports

Tayogo W11 will start recording steps once power on. You can see your steps at APP after synchronisation. Also can be shared at WeChat groups.

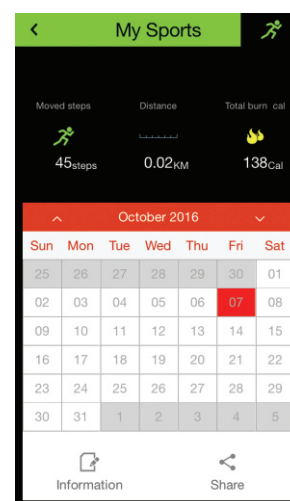

## Using the Device as a "Hands Free" Headset

Press > (play/pause) button once to accept an in-coming phone call.  
Press > (play/pause) button twice to reject an in-coming call or to re-dial the last number.  
Press > (play/pause) button to end a call (while talking)

Note: If the Tayogo experiences a connection issue or stops playing MP3 songs/FM radio, you can restart the headphones by pressing and holding the >|| button for 8 seconds.

Note: If the device is not Bluetooth connected to a smartphone, it will automatically power itself off after no movement is detected for a period of 5 minutes.

# Smart Waterproof Headphone Instruction Manual

Model:W11

Thank you for purchasing the Tayogo W11 Waterproof Bluetooth enabled All-In-One FM Radio / MP3 Player. Please read this manual carefully before attempting to use the device.

1. Do not use the MP3 player for purposes other than what is described in this manual. It can be potentially dangerous to use your MP3 player while engaging in activities that require your full attention. You should exercise extreme caution or discontinue the use of the player while in potentially hazardous situations and/or conditions.
  2. Do not disassemble or attempt to modify the MP3 player in any way. Disassembly or modification will void your warranty.
  3. Do not drop or apply excessive force to the MP3 player. Using a damaged unit may result in fire or an electric shock.
  4. Do not place the MP3 player close to an open flame or in close proximity to heating devices.
  5. Do not use or store the MP3 in player in places with high temperatures, areas subject to excessive temperature changes and/or strong magnetic fields.
  6. To avoid accidents, Do not use the player while driving or operating other vehicles. This includes automobiles, motorcycles and/or bicycles as directed by law. To avoid accidents, Do not listen to music at excessive volume levels. Do not use the MP3 player in areas subject to high volumes of traffic while performing activities such as driving, running, jogging, riding a bicycle or any areas where an accident could occur. If the user utilizes the MP3 player in or near the water, please maintain safety awareness of moving water craft and always obey the applicable laws. Many countries have laws prohibiting such actions, so be sure to obey local laws.
  7. The manufacturer is not responsible for any data loss caused by product failure, defects, misuse or other reason.
  8. Do not use the MP3 at an excessively loud volume level. Loud music can damage your hearing and cause permanent hearing loss. Do not turn up the volume to the point where it blocks out the sounds around you. Continuous use of earphones for many hours at high volume levels can cause permanent hearing loss. In general, you should not listen to loud music as this can also cause hearing loss. Listen to music at a comfortable level for reasonable periods of time. Always make that the volume is turned down low prior to putting the earphones in your ears.
- CAUTION: the ear buds that insert directly into the ear should not be used while scuba diving.


- Prolonged exposure to pressures at depths below 1 meter can result in permanent hearing loss. Discontinue use at the first sign of pain or hearing loss.
9. Please plug and/or unplug the MP3 player and earphone frame carefully as instructed within manual. Failure to do so may result in damage to the MP3 player.
  10. When plugging the USB jack in a compatible computer, make sure you are plugging it in correctly. Inserting the USB jack into a computer the wrong way can damage the computer and/or the MP3 player.
  11. Do not connect the MP3 player to a computer while the MP3 player is wet. Doing so could result in permanent damage to the computer and/or MP3 player, the user receiving an electrical shock or death.
  12. Keep the USB connection free of dirt.
  13. When the MP3 player becomes dirty or dusty, use a soft cloth or lint-free towel to wipe it clean.
  14. Keep the MP3 player out of reach from children. The part included with this product can represent a choking hazard. This product is not recommended for children under the age of 6.
  15. Do not use chemicals to clean this device.

## Specifications


Name: Smart Waterproof Sport Headphone Tayogo AMP  
 Features: Stereo headphones with microphone, voice reminder, iOS battery indicator  
 Waterproof: IPX8, 3 meters under water  
 Bluetooth: Version 4.2  
 Bluetooth device name: W11  
 Distance: up to 10 meters

Battery: Li-ion 150mAh  
 Playing Time: Up to 7 hours  
 Memory: 8GB  
 Music File Types Supported: APE, FLAC, MP3, WAV, WMA  
 Charging: 5V, 1A

## Package contents

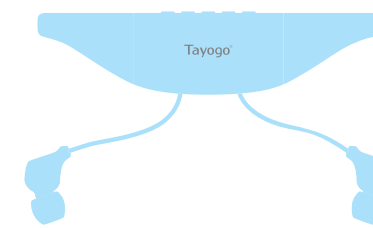

Smart Headphones – 1 pc

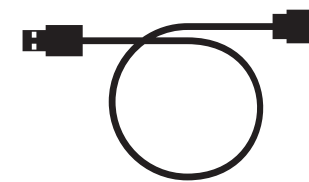

USB extension cable – 1 pc



Big



Small

In-Ear buds – 2 sets



Big




Middle



Small

Sport Buds – 2 sets

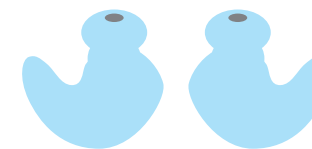

Swimming buds – 1 set


## Please use the right ear buds

Note: the swimming buds are recommended for swimming. There is L (for left) and R (for right) for swimming buds. Swimming buds can attach tightly to the ear to make sure headphone not fall off and also can prevent water going into ears.

## Disassembling the Headphones to Charge Copy Song Files


### Correct method to removing the headphone end(s)

Separate the headphone end(s) from the player by pulling horizontally. The [main] portion of the Tayogo W11 player can be separated from both the left and right headphone sections by pulling the sections apart. Make sure to pull them straight apart without twisting or bending the headphone pieces to avoid damaging the USB connectors inside.

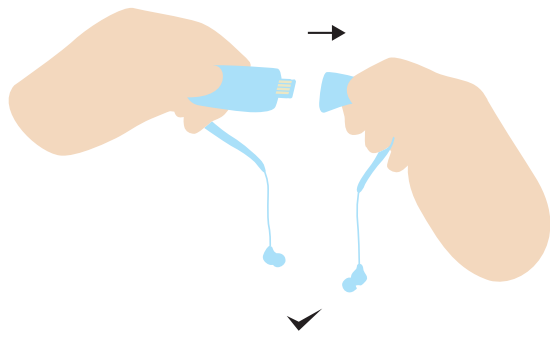

### Incorrect method

Do not twist or bend the earphone sections. Doing so may result in damage to the USB connectors inside. Do not pull on the headphone cables. Doing so can damage or break the wires within. Damage to the headphone cables is not covered by the limited warranty.

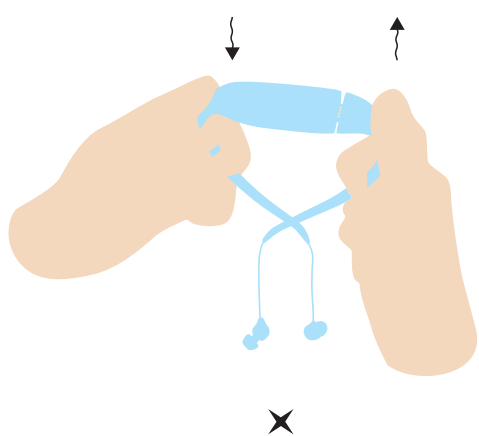


## Wearing the Tayogo W11 player

The Tayogo W11 player can be worn over the back of your head (by spreading the headphone "ears" slightly) and allowing them to close back around your head or by wearing it around your neck.



When securing the Tayogo W11 player, DO NOT pull directly on the headphone cords. Doing so can damage the wires inside and result in partial or no sound being produced by the headphone speakers. Damage to the headphone cables is not covered by the limited warranty.

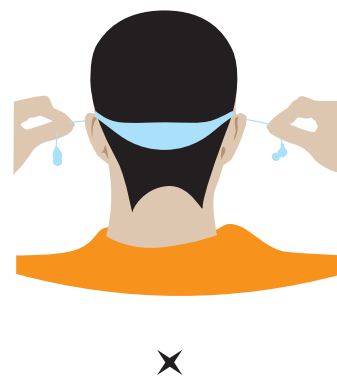

## Questions and Answers

1. The Tayogo W11 player does not appear after connecting it to my computer's USB port on some computers, the built-in USB connector (right headphone side) does not make a proper connection. If this occurs, please use the provided extension cable between the Tayogo W11 player and your computer's USB port

When the "Tayogo W11" device appears, you can navigate to the device and copy your songs to it (just like you would with any removable device).

2. Why do songs abruptly stop playing?  
 Please check to make sure that the music files are not corrupt or otherwise damaged. If the song files are damaged, it can affect how they play.

3. Will the Tayogo W11 player sink in water?  
 No. The Tayogo W11 player has been manufactured using buoyant material which will allow it to float on the water's surface instead of sinking.

4. Why can I only hear music from one of the headphones?  
 This can occur when the connection between the USB plug of the headphone sections is not secure. In most cases, removing and re-connecting the headphone to the main section will correct this issue. If re-connecting the headphone section still does not produce any sound, it is possible that the internal speaker wires or the USB connector has been damaged.

5. Can the Tayogo W11 player be used as a flash drive to store files other than music?  
 Yes. Plugging the Tayogo W11 player into your computer, it will display just a like any other removable media and you can copy, delete or access files from the available flash storage.

NOTE: Only music files in the following formats (.ape, .mp3, .flac, .wav and .wma) are recognized by the Tayogo W11 player.

### Contact us:

Tayogo Technology Manufactory  
[www.tayogo.com](http://www.tayogo.com)  
 E-mail: [cs@tayogo.com](mailto:cs@tayogo.com)  
[www.facebook.com/Tayogo8](https://www.facebook.com/Tayogo8)

