

Waterproof Smart Headset Instruction Manual

Model: W12

Thank you for purchasing the Tayogo W12 Waterproof Bluetooth enabled All-In-One FM Radio / MP3 Player. Please read this manual carefully before attempting to use the device.

1. Don't use the MP3 player for purposes other than what is described in this manual. It can be potentially dangerous to use your MP3 player while engaging in activities that require your full attention. You should exercise extreme caution or discontinue the use of the player while in potentially hazardous situations and/or conditions.
2. Don't disassemble or attempt to modify the MP3 player in any way. Disassembly or modification will void your warranty.
3. Don't drop or apply excessive force to the MP3 player. Using a damaged unit may result in fire or an electric shock.
4. Don't place the MP3 player close to an open flame or in close proximity to heating devices.
5. Don't use or store the MP3 in player in places with high temperatures, areas subject to excessive temperature changes and/or strong magnetic fields.
6. To avoid accidents, Don't use the player while driving or operating other vehicles. This includes automobiles, motorcycles and/or bicycles as directed by law. To avoid accidents, Don't listen to music at excessive volume levels. Don't use the MP3 player in areas subject to high volumes of traffic while performing activities such as driving, running, jogging, riding a bicycle or any areas where an accident could occur. If the user utilizes the MP3 player in or near the water, please maintain safety awareness of moving water craft and always obey the applicable laws. Many countries have laws prohibiting such actions, so be sure to obey local laws.
7. The manufacturer is not responsible for any data loss caused by product failure, defects, misuse or other reason.
8. Don't use the MP3 at an excessively loud volume level. Loud music can damage your hearing and cause permanent hearing loss. Don't turn up the volume to the point where it blocks out the sounds around you. Continuous use of earphones for many hours at high volume levels

1

can cause permanent hearing loss. In general, you should not listen to loud music as this can also cause hearing loss. Listen to music at a comfortable level for reasonable periods of time. Always make that the volume is turned down low prior to putting the earphones in your ears.

Caution: the ear bugs that insert directly into the ear should not be used while scuba diving. Prolonged exposure to pressures at depths below 2 meter can result in permanent hearing loss. Discontinue use at the first sign of pain or hearing loss.

9. Please plug and/or unplug the MP3 player and earphone frame carefully as instructed within manual. Failure to do so may result in damage to the MP3 player.
10. When plugging the USB jack in a compatible computer, make sure you are plugging it in correctly. Inserting the USB jack into a computer the wrong way can damage the computer and/or the MP3 player.
11. Don't connect the MP3 player to a computer while the MP3 player is wet. Doing so could result in permanent damage to the computer and/or MP3 player, the user receiving an electrical shock or death.
12. Keep the USB connection free of dirt.
13. When the MP3 player becomes dirty or dusty, use a soft cloth or lint-free towel to wipe it clean.
14. Keep the MP3 player out of reach from children. The part included with this product can represent a choking hazard. This product is not recommended for children under the age of 6.
15. Don't use chemicals to clean this device.

About Water Resistance

 
1. This product has water resistance of IPX68, which can be used up to 5 meters under water for up to 3 hours.
2. Don't use it over 3 meters deep, Don't use it when deep diving.
3. Please wash the product with clean water after swimming, open the cover and make it dry indoor.
4. Please charge or connect to PC after the product is totally dry. If you charge while the USB plug is wet, it will be dangerous and manufactory is not responsible.

Specifications


Name: Tayogo Smart Waterproof Sport Headphone
 Features: Stereo headphones with microphone, voice reminder, iOS battery indicator
 Bluetooth: Version 4.2
 Bluetooth device name: Tayogo W12
 Distance: up to 10 meters
 FM Frequency: 60-108MHZ
 Battery: Li-ion 120mAh
 Playing Time: Up to 5 hours (Varies with mp3/Bluetooth/FM mode)
 Memory: 8GB
 Music File Types Supported: APE, FLAC, MP3, WAV, WMA
 Charging: 5V, 1A

2


Package includes

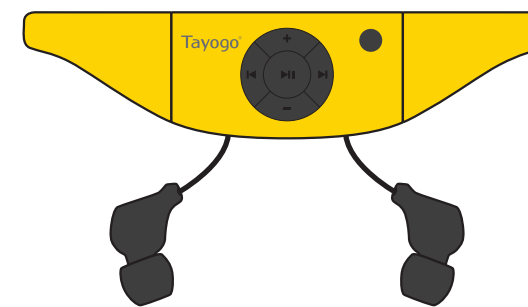


Smart Headphones 1 pc

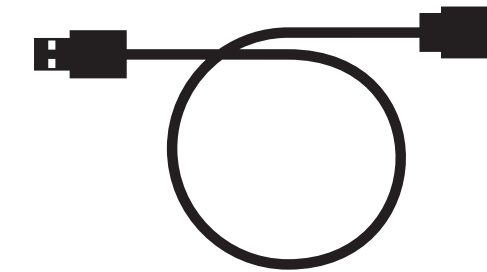 

USB extension cable 1 pc

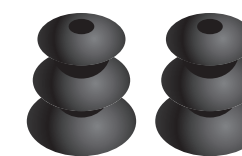 


L

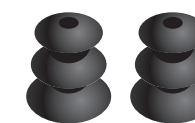 

S

 In-Ear buds 2 sets

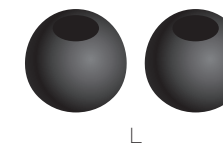

L



M



S

Sport Buds 3 sets

3

Questions and Answers

1. The Tayogo W12 player does not appear after connecting it to my computer's USB port?
 on some computers, the built-in USB connector does not make a proper connection. If this occurs, please use the provided extension cable between the Tayogo W12 player and your computer's USB port. When the "Tayogo W12" device appears, you can navigate to the device and copy your songs to it (just like you would with any removable device).
2. Why do songs abruptly stop playing?
 Please check to make sure that the music files are not corrupt or otherwise damaged. If the song files are damaged, it can affect how they play.
3. Will the Tayogo W12 player sink in water?
 No. The Tayogo W12 player has been manufactured using buoyant material which will allow it to flow on the water's surface instead of sinking.
4. Why can I only hear music from one of the headphones?
 This can occur when the connection between the USB plug of the headphone sections is not secure. In most cases, removing and re-connecting the headphone to the main section will correct this issue.
 If re-connecting the headphone section still does not produce any sound, it is possible that the internal speaker wires or the USB connector has been damaged.
5. Can the Tayogo W12 player be used as a flash drive to store files other than music?
 Yes. Plugging the Tayogo W12 player into your computer, it will display just a like any other removable media and you can copy, delete or access files from the available flash storage.

Note: Only music files in the following formats (ape, mp3, flac, wav and wma) are recognized by the Tayogo W12 player.

Contact us:

Tayogo Technology Manufactory
www.tayogo.com
cs@tayogo.com
facebook.com/tayogo



Parts




- | | |
|---|--|
| 1 Previous
Play previous song / (hold for 3 seconds to switch playing mode between: Bluetooth syncing, MP3 player, FM radio player) | 3 Vol -
Decrease Volume |
| 2 Next
play next song | 5 Power/play-pause
Hold for 3 seconds to turn the MP3 player on/off, tap to pause / resume playing the current song |
| 4 Vol +
Increase Volume | 6 Reset
Press to default resetting |
| 6 LED indicator
Power On Blue LED (flashes 3 times)
Play or Standby Blue LED (flashes slowly)
FM player Yellow LED (flashes slowly)
Low Battery Red LED (flashes slowly)
While charging Red LED (solid)
Charge complete Blue LED (solid) | 7 |
| 8 4-pin USB connector
Plug the device into a USB port of a computer or USB adapter to charge the device. The device will fully charge in approximately 1.5 hours and supports a 5v, 1A connection. | 9 Earphone Bone
A variety of different sizes and styles are included with the Tayogo MP3 player. These are easily changed |
| 10 Microphone
Waterproof microphone used to talk when the player is Bluetooth paired with a smartphone during phone conversations | 11 Ear buds |


4

Before Usage

 Disassembling/Assembling the USB Main Player
Correct method to remove the headphone end(s). Bend the two ends of the headphone bone at inside direction, the USB main player will pop out. Then pull out slightly the USB main player.

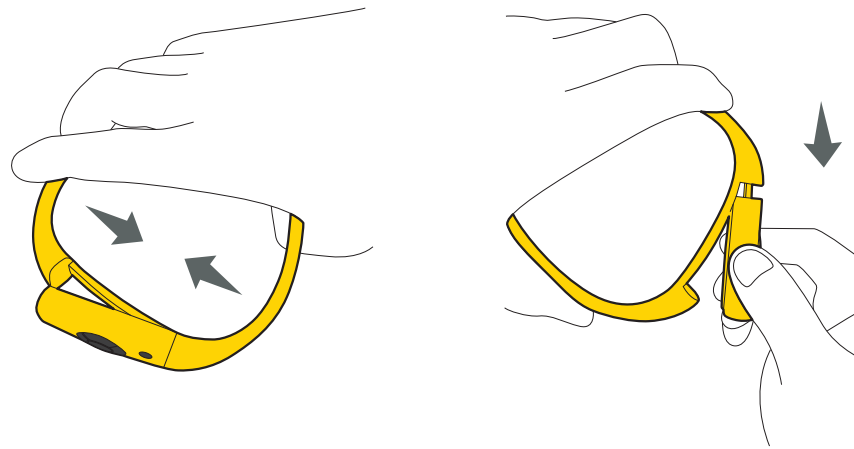


 Don't bend the headphone bone out strongly, which will break the USB pins of the main player and this is not warrantied.

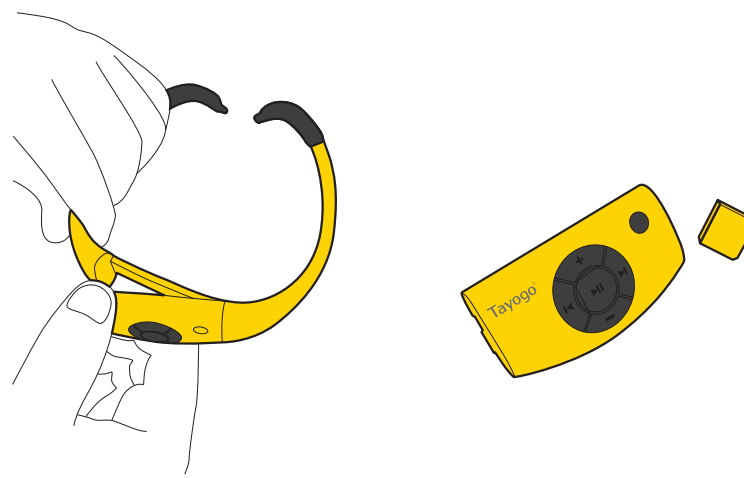

- To Copy Music files onto the Tayogo MP3 player:
1. Remove the right side of the device to expose the 4-pin USB connector. Plug this end into the USB port of your computer.
 2. Go to "my computer" and locate the "W12" device. Drag and drop your favorite music files (in either APE, FLAC, Mp3, WAV or WMA file formats) onto the "W12" device. The music files can be stored in separate folders or all together at the root directory level. There is 8GB of storage space available on the Tayogo W12 MP3 player.

 5

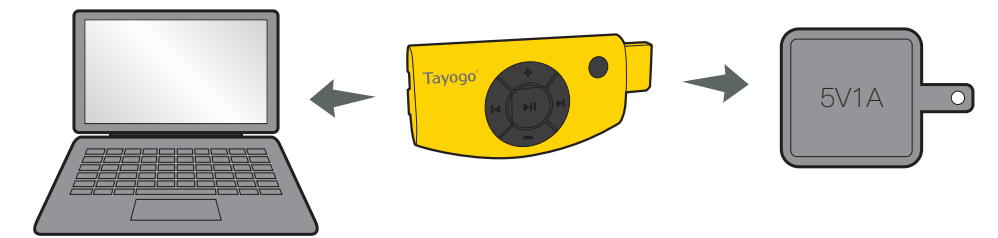

Note:

1. Please use the extending cable to connect to PC or charge.
2. The device can also be used as a USB thumb drive to store files.
3. The charging time is around 2 hours.

Wearing the Tayogo W12 player

The Tayogo W12 player can be worn over the back of your head (by spreading the headphone "ears" slightly) and allowing them to close back around your head.



When securing the Tayogo W12 player, Don't pull directly on the headphone cords. Doing so can damage the wires inside and result in partial or no sound being produced by the headphone speakers. Damage to the headphone cables is not covered by the limited warranty.



6

Tayogo W12 includes: Bluetooth headset, MP3 Playing, FM Playing, Sports & APP

Operation

Tayogo APP

Search "Tayogo" in iOS APP store or Google Play Store (for Android), download and run. Easily add or manage your playlist, switch from different playing mode and check your sports record.



App Store



 
Google play



Tayogo


Pair Tayogo W12 with your mobile phone, run the App and bind Tayogo W12. Register first with your mobile phone number (please select your country code) and you can log in the App to control the Tayogo headset.

FM Radio Mode

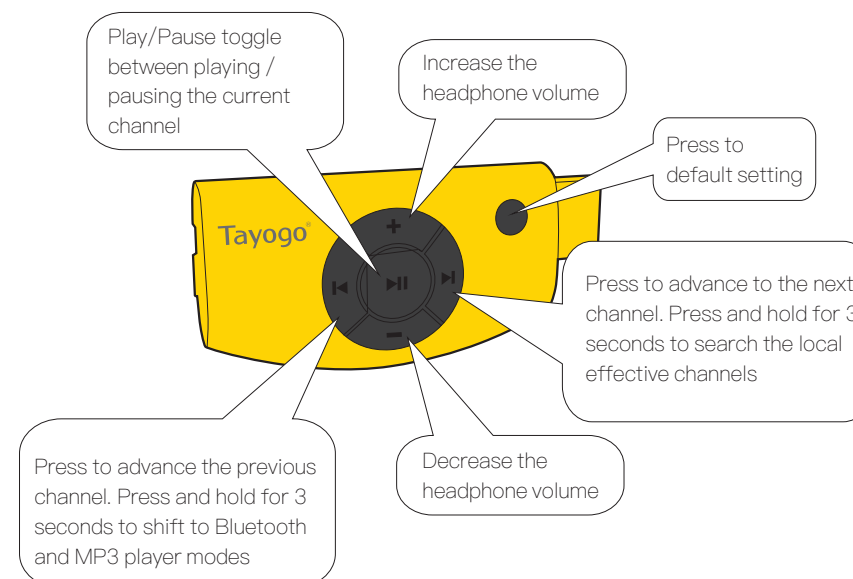

Note: This is not a professional FM radio. The number of stations that the device is able to tune and receive will vary by location. Only local stations broadcasting with a strong signal can be received.

 Bluetooth Headset Mode

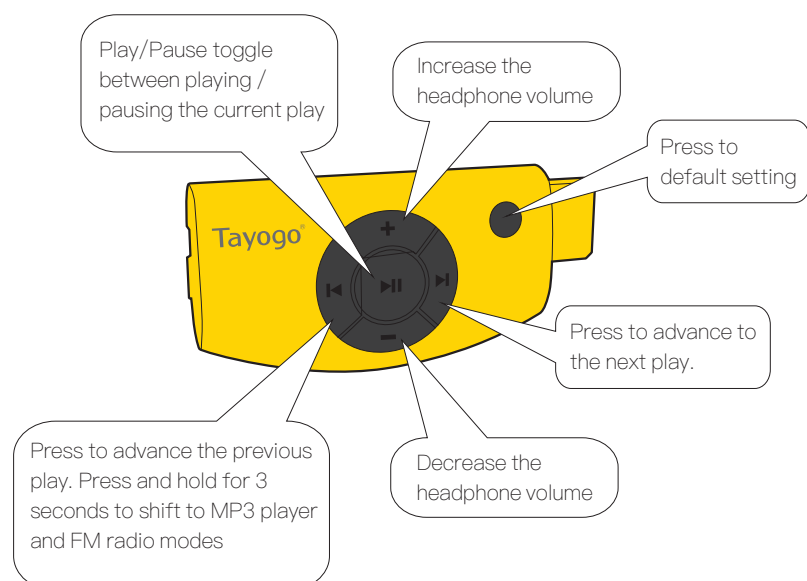

8

Using the Device as a "Hands Free" Headset

- Press button once to accept an in-coming phone call.
- Press button twice to reject an in-coming call or to re-dial the last number
- Press button to end a call (while talking)

 
Note: If the Tayogo experiences a connection issue or stops playing MP3 songs/FM radio, you can restart the headphones by pressing the reset button.

Note: If the device is not Bluetooth connected to a smartphone, it will automatically power itself off after no movement is detected for a period of 5 minutes.

Note: Phone calls from your Bluetooth paired smart phone take priority and will override both the MP3 player and FM radio mode functionality.


My Sports

Tayogo W12 will start recording steps once power on. You can see your steps at APP after synchronisation. Also can be shared at WeChat groups.

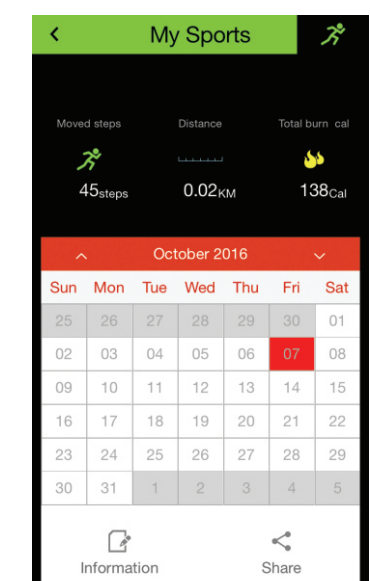

9

 MP3 Playing Mode

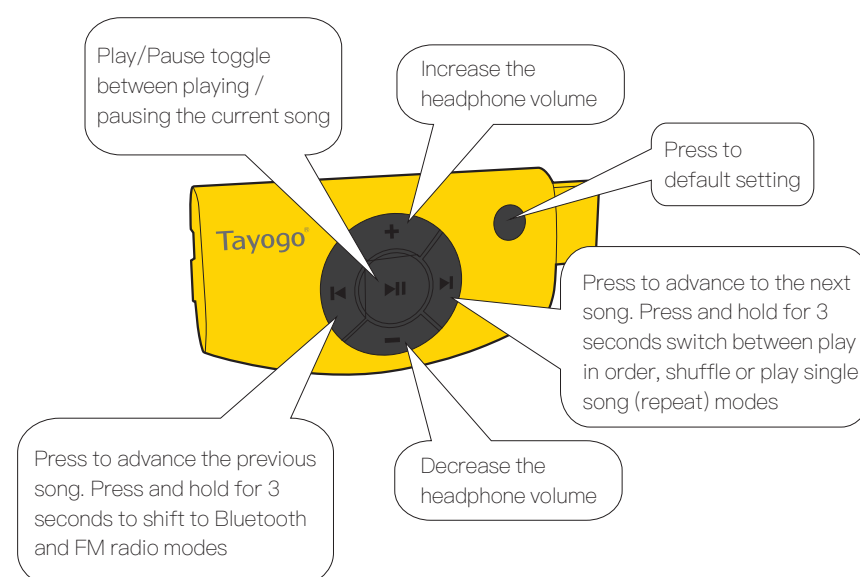

7