

Tayogo®

Instruction Manual Model: W18




Waterproof Bluetooth Mp3 player

Model: W18


IMPORTANT INFORMATION BEFORE USE

Important : Wear and take off the MP3 player correctly

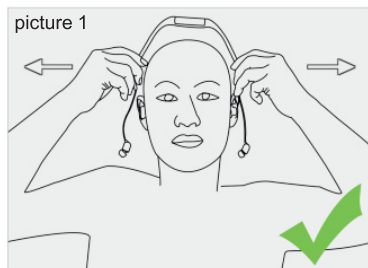

Correct way: Hold the ends of the headphone band to put on and take off, Gently pull onto your head. Do not pull headphone wide. see picture 1

Wrong way: Hold the headphone cables and pull strongly to put on or take off, see picture 2

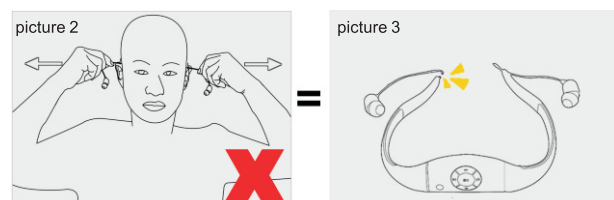

Because the cable wires are fragile, pulling on the headphone cables can break them. This results in no sound in the headphone, see picture3

Note: This damage is not covered by the warranty. The headphone cable is made by slim copper wires and it will be broken if you pull the cables strongly. This will cause the headphone to lose sound and this problem is out of warranty.



Congratulations on purchasing your new waterproof mp3 player. We are convinced you will be satisfied with it. Please carefully read the instructions before using.

SPECIFICATIONS:

Waterproof IPX68 level
Supported Formats: MP3, WMA, APE, FLAC, WAV, AAC-LC, m4a
Memory: 8GB
Bluetooth version: 5.3
FM frequency: 65-108MHz
Battery: Lion 200MAH Rechargeable
Play Time: Up to 20 hours -6-8 hours
Dimensions (WxDxH): 12.5 x 12 x 3 CM
Weight: 32g
Accessories: Extra ear buds, Instruction Manual, Magnetic Cable

EN

Button Instruction:

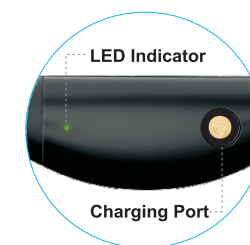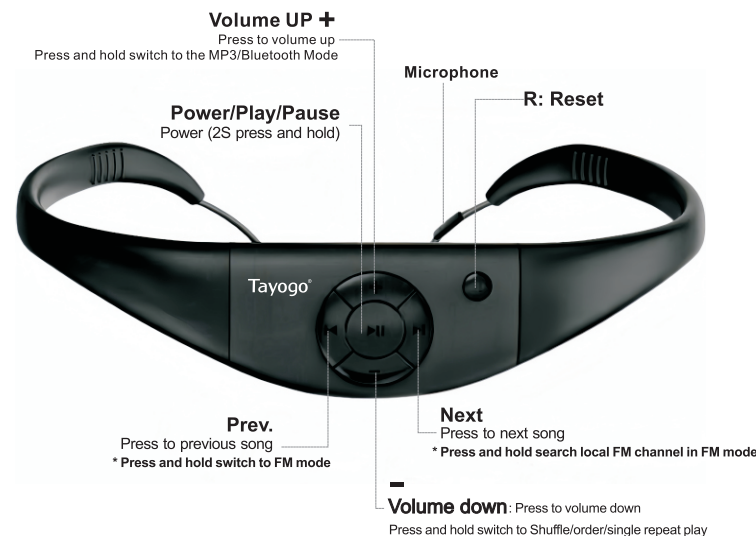

Operation:

Tayogo W18 includes 3 play modes:

- Bluetoothmode
- MP3 Play mode
- FM Play mode

Switch Between MP3 mode/ Bluetooth Mode :

When the Tayogo W18 is turned on, it is MP3 mode. To cycle through the modes, press and hold the Volume+ to switch. The order of cycling is: MP3 mode → Bluetooth Mode

Press and hold the "Prev" button to switch to FM mode

Charging

To charge the headset, use a PC USB port or USB adapter (5V/1A) with the attached Magnetic cable and attach it to the back of headphone's charging tray. See picture below:



While charging, the LED flashes red. When charging completes, the LED will turn blue.

Connect to a PC or Mac

To connect to a PC or Mac computer and transfer files:

1. Plug the magnetic cable into the PC or Mac and then connect the cable to the Tayogo W18. When the headset connects to the computer, a flash disk named W18 will display on the computer.
2. To copy files to the W18, drag or copy the files to W18.

Bluetooth Model

To pair the W18 with your device:

1. After powering on, press and hold the Volume+ to switch Bluetooth mode, waiting to be paired. Turn on the Bluetooth for your device (phone, PC, Laptop)
2. Search for new Bluetooth devices.
3. Click "Tayogo W18," to connect. If a pairing code is required, input the value "0000".

Note: The Bluetooth function does not operate underwater. If the primary USB host is submerged, there won't be any available Bluetooth signal.

Answering or Making a Phone Call

To use the call functions while in Bluetooth mode:

- For an incoming call:
 - Click the headset "PAUSE" button to answer the call ,
 - Double-click the headset "PAUSE" button to reject the call.
- During a call:
 - Click the headset "PAUSE" button to hang up the call.
 - Double-click the "PAUSE" button to redial the last dialed phone number.

MP3 Play

- Press the play button to power on the W18.

The default playing mode is Mp3 . W18 will play from your last played song.

- Press the volume + and – buttons to increase or decrease the volume.
- Press the next or prev. button to go the next or previous song.

Shuffle/Order/Single Play:

- Press and hold Volume- to switch between the 3 playing modes:
 - Shuffle play: play randomly from all the play lists
 - Order play: The order play is based on the time when the song was downloaded.
 - Single play: repeat a single song

Tips: If you want to quickly rewind the current song, press and hold the next and prev. buttons. Release to button at the chosen location in the music and it will play again from your chosen place.

FM Play

To begin FM play mode, Press and hold the "Prev" button to switch to FM mode.

Searching for FM channels


To search for FM channels:

1. Switch to FM mode: Press and hold volume + button.
2. Press and hold the NEXT button to search all the FM channel in your area. The W18 will store all the channels automatically.
3. Press the next or prev. button to change the FM channel up or down.
4. Press the volume+ or volume – button to adjust the volume.

Reset

To reset the headphones, press and hold the "R" button

Wear and remove the headphone :

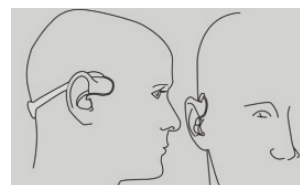

Questions and Answers :

1. Is this swimming headphone easy to charge?

It is easy to charge, requiring only 1.5 hours for quick charge, and you can use it for up to 20 hours. The creative magnetic design makes charging/data copying super easy. You can use the included cable to plug it into any 5V/1A USB adapter or computer USB port to charge.

2. How do you download songs/podcasts to the Tayogo swimming mp3 player?

Connect the Tayogo W18 player to a computer and copy the music files, then paste them onto the Tayogo W18. It supports MP3, WMA, APE, FLAC, WAV, AAC-LC, m4a.

3. How do I switch from shuffle to order playing in MP3 mode?

- a. The default setting is order playing.
- b. Press the volume down button for 3 seconds and then release: switch the shuffle/order/single playback mode.
- c. The rules for order playing are: The order of play is based on the time when the song was downloaded.

4. Can I listen to FM channels underwater?

Yes, you can listen to your favorite FM channels even underwater with the Tayogo W18. Please be reminded that some FM channels may be affected if you swim in an indoor pool due to signal blockage by the buildings.

5. Can I hear the music clearly during my swimming? I had some similar products before, and the sound was not so clear, and the volume was low.

Tayogo has been focusing on swimming mp3 players/headphones for over 10 years. We use ergonomic earbuds to attach to your ear tightly. You can hear the music clearly without worrying about water getting into your ears when swimming.

6. Why no sound even the phone showed Bluetooth connected.

The W18 will automatically reconnect to the latest Bluetooth device upon turning on. If there is no sound, please check whether the W18 is in Bluetooth mode.

Note: Please do not unplug the player while coping files.

For additional assistance please check our website: www.tayogo.com or email us at: cs@tayogo.com or follow us at facebook: Tayogo.

Company Information:

Dongguan Gaoyue Technologly Manufactory
Add: Unit 703 Block 13, No.1 Jingdong Road
Fenggang Town, Dongguan City, Guangdong China
E-mail : cs@tayogo.com
Website: www.tayogo.com

Tayogo Technology Manufactory

Add : 5F Block F, No. 8 East, Shangxue Tech. Park, Bantian, Shenzhen, China
Tel : +86 755 8939 5050 Fax : +86 755 8939 7785
E-mail : sales@tayogo.com
Website : www.tayogo.com

