



LG Vortex VS660

Screen Repair Guide



For more instructional repair guides for other makes or models, view our full catalog of [Repair Guides!](#)

This is the LG Vortex VS660 take apart repair guide. Following this guide will help you take apart the LG Vortex VS660 fairly easily in a step by step manner giving you a chance to replace faulty parts. Once you have replaced the parts you want, the guide can be used in reverse to put everything back together again.

This guide will help you to install the following LG Vortex VS660 parts:


- [LG Vortex VS660 Touch Screen Digitizer Replacement](#)
- [LG Vortex VS660 LCD Screen Replacement](#)

Tools Required:

- [Safe Open Pry Tool](#)
- [Small Phillips Screwdriver](#)
- [Adhesive Strips](#) (For Touch Screen Replacements)
- Heat Gun / Hair Dryer


LG Vortex VS660 Take Apart Repair Guide:

- To begin, make sure that the device is off and remove the back battery cover. Remove the battery, the memory card, and the sim card.
- Now, we have to remove six (6) screws using a small Phillips Screwdriver, as shown in Figure 1.

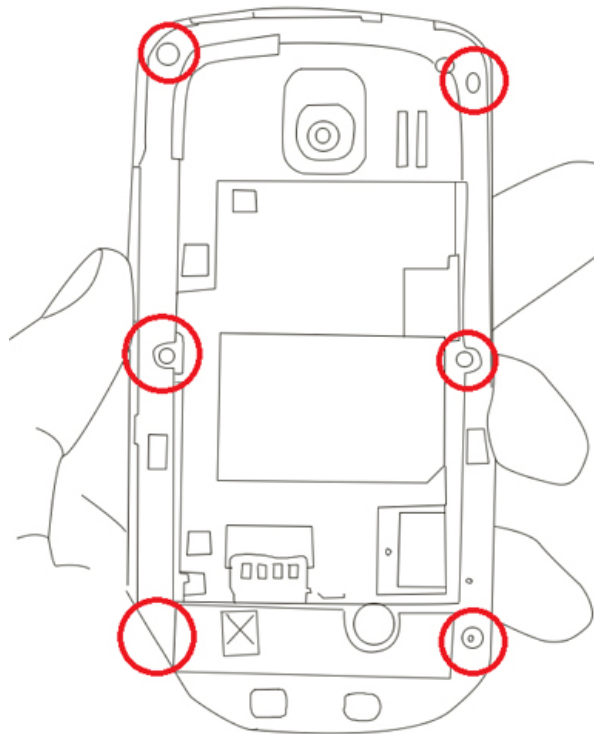


- With the screws released, turn the phone over and use a safe open pry tool between the screen assembly and back housing.
- Use a safe open pry tool to release the clips and remove the back housing as shown in Figure 2.




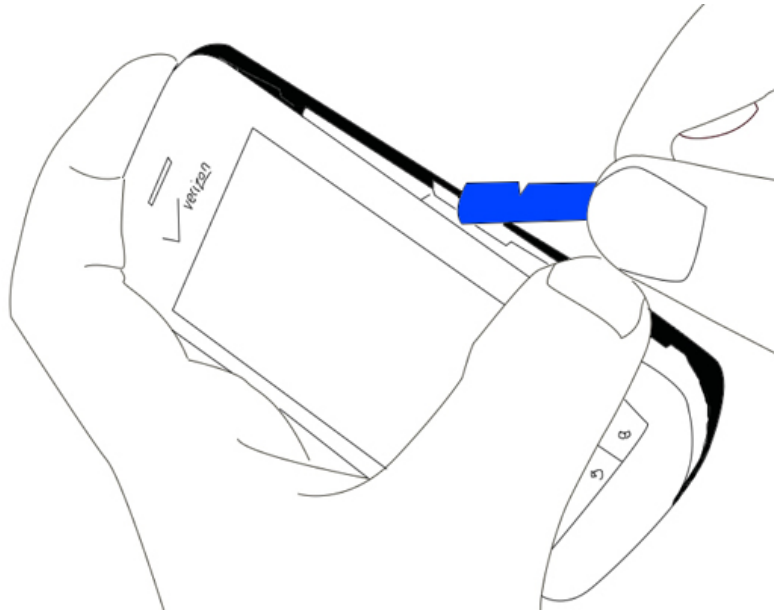

- Now remove the two (2) small Phillips screws that need to be removed using a small Phillips screwdriver as shown in red in Figure 3.
- You can now release the small metal clip.
- Use a safe open pry tool to release pop connectors and cables on the motherboard located in yellow in Figure 3.
- Carefully lift the power button flex and volume button flex cable away from the housing. These will be held in place with adhesive. Located in orange in Figure 3.
- Release the vibrator motor wire from the motherboard.
- Use a safe open pry tool to lift the black housing holding the vibrator motor and loud speaker. Swing this to the right to gain access to one more flex cable pop connector located in green which will need to be released.

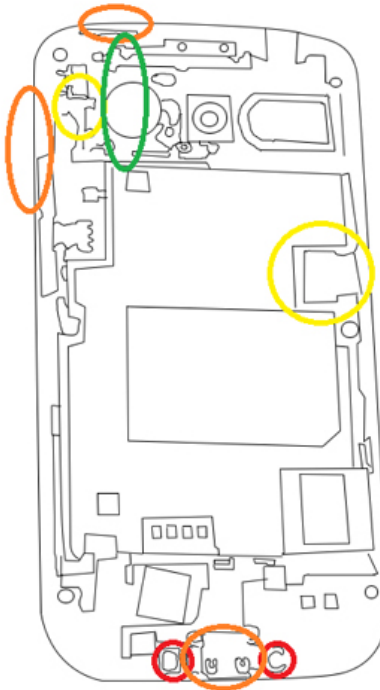

- You can now ease off the motherboard carefully, being sure not to rip any cables.
- Use a safe open pry tool to remove the LCD. Insert the safe open pry tool between the edges and carefully lift up the LCD.

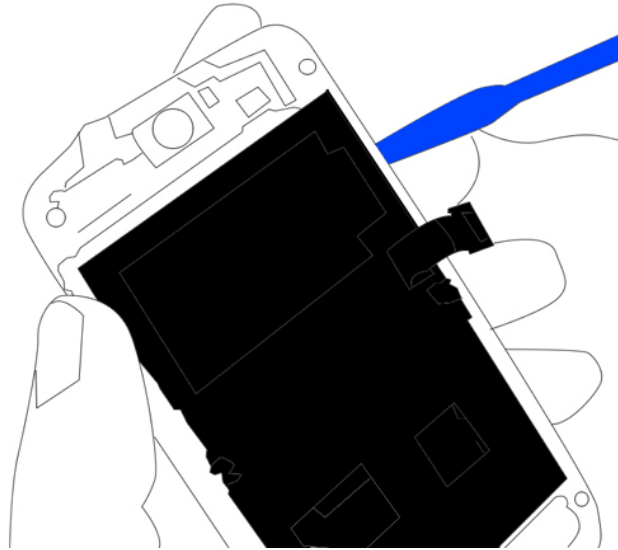

- The touch screen will still be attached to the front housing. You will need to heat the front of the screen using a hair dryer or heat gun on medium heat. Use quick movements around the edges of the touch screen to warm the adhesive.
- Once the adhesive has been warmed, use a safe open pry tool to lift the touch screen from the front housing.

Now you will be able to replace any parts on your LG Vortex VS660. Simply replace the damaged parts with the new ones and reverse these instructions to put your phone back together.

Notice:

Repairs Universe's guides are for **informational purposes only**. Please [click here for details](#).

Learn about [restrictions on reproduction and re-use](#) of Repairs Universe's repair/take-apart/installation guides, and about creating hyperlinks to our guides.

