



# Motorola Droid Bionic Screen Repair Guide

---

Touch Screen & LCD Screen Repair



For more instructional repair guides for other makes or models, view our full catalog of [Repair Guides!](#)

The RepairsUniverse team now offers this written repair guide to assist you in taking apart your Motorola Droid Bionic XT865 / XT875 as well as replacing damaged or broken parts on your phone. Follow each step as listed to be able to safely install new parts on your phone, such as a touch screen digitizer or LCD screen.

This guide will help you install the following Motorola Droid Bionic replacement part (s):

- [Motorola Droid Bionic XT865 Touch Screen Digitizer Replacement](#)
- [Motorola Droid Bionic XT865 LCD Screen Replacement](#)
- [Motorola Droid Bionic XT875 LCD Screen Replacement](#)

Tools Required:

- [Safe Open Pry Tool](#)
- [Torx T5 Screwdriver](#)
- [Adhesive Strips](#)

#### Motorola Droid Bionic take apart repair guide:

- Release the back battery cover to gain access to the back of the device. Remove the battery, sim card, and memory card.
- The next step will be to remove the battery adhesive tag. Use a safe open pry tool to carefully lift the sticker up and set aside.
- Remove the eleven (11) torx T5 screws around the perimeter of the back housing.

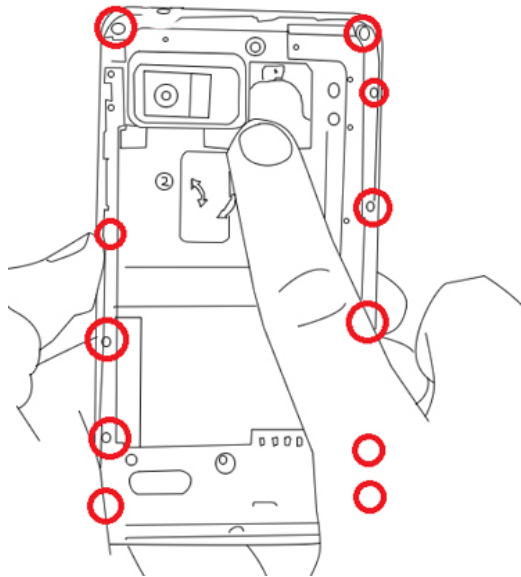


Figure 1

- Carefully pry along the edges of the back housing, releasing the clips and remove the back housing.



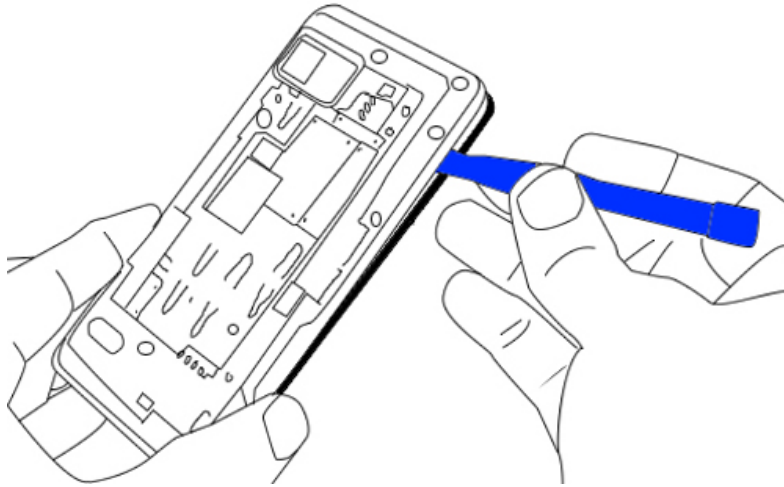


Figure 2

- Release the 3 flex cables.
- Remove the two (2) torx T5 screws holding the top sim board in place. Carefully remove this, along with a black plastic backing.
- Release the final connection for the front camera.

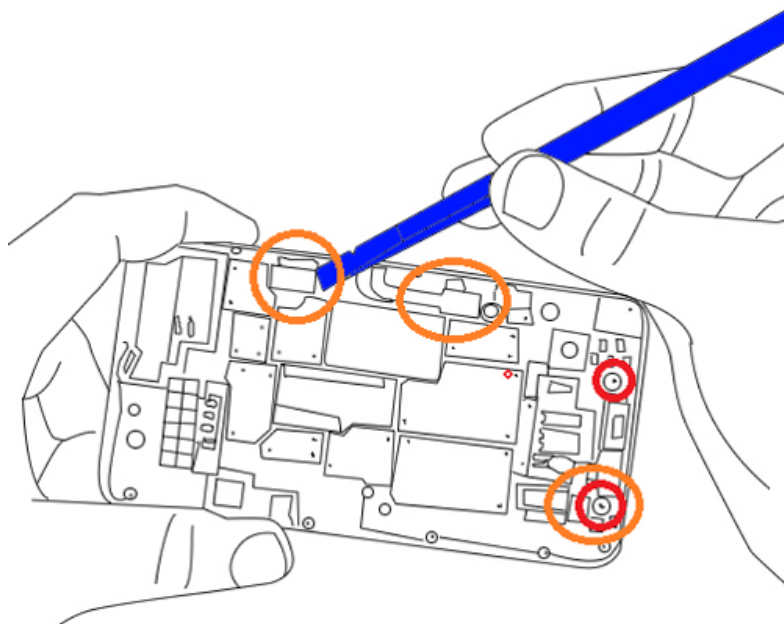


Figure 3

- You can now carefully remove the motherboard from the screen assembly.
- Lift the two touch screen flex cables from the LCD screen. They are very fragile and held in place with adhesive, so use extra caution.
- Use a safe pry tool to remove the LCD screen from the touch screen with front housing.

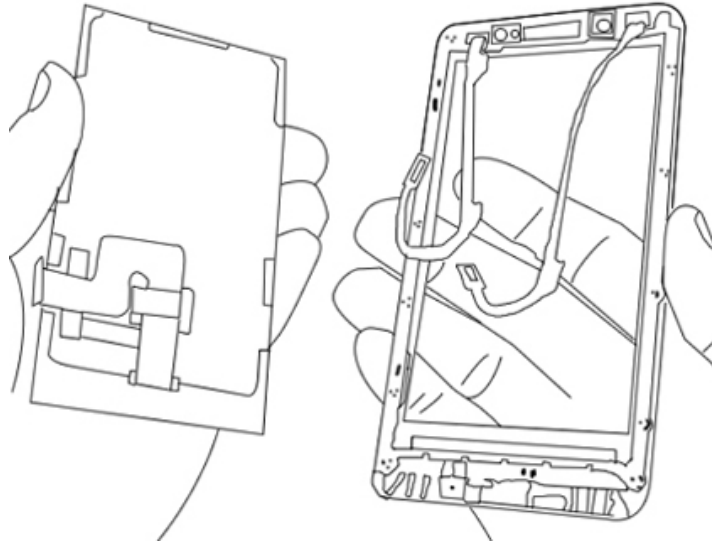


Figure 4

- To remove the touch screen digitizer from the front housing, use a heat gun or hair dryer to warm the front edges of the screen. Use quick movements for about 45 seconds.
- Now use a pry tool to carefully separate the glass from the front housing.
- You can now replace the touch screen digitizer or any other internal part on your Droid Bionic.

Your Motorola Droid Bionic is now disassembled and ready for replacement of part(s). Reverse the instructions above to reassemble your Droid Bionic.

**Notice:**

Repairs Universe's guides are for **informational purposes only**. Please [click here for details](#).

Learn about [restrictions on reproduction and re-use](#) of Repairs Universe's repair/take-apart/installation guides, and about creating hyperlinks to our guides.

