



CDR365-SS Parts List

Drawing #	Part #	Description
1	02-00110	Range Top Assy.
2	02-00006	Control Panel Connection Plate
3	02-00007	Oven Retaining Plate Right
4	02-00008	Oven Retaining Plate Left
5	02-00160	Burner Valve
6	02-00161	Burner Valve
7	02-00162	Burner Valve
8	02-00163	Burner Valve
9	02-00151	Double Ring Burner Head
10	02-00155	Inner Burner Cap
11	02-00156	Outer Ring Burner Cap
12	02-00147	Double Ring Burner
13	02-00154	Front Left Burner Head
14	02-00159	Front Left Burner Cap
15	02-00150	Front Left Burner
16	02-00153	Rear Right Burner Head
17	02-00158	Rear Right Burner Cap
18	02-00149	Rear Right Burner
19	02-00152	Front Right Burner Head
20	02-00157	Front Right Burner Cap
21	02-00148	Front Right Burner
22	02-00135	Burner Orifice #1
23	02-00133	Burner Orifice #2
24	02-00134	Burner Orifice #3
25	02-00132	Burner Orifice #4
26	02-00131	Burner Orifice #5
27	02-00128	Burner Orifice #6
28	02-00130	Burner Orifice #7
29	02-00129	Burner Orifice #8
30	02-00125	Burner Gas Tube #1
31	02-00123	Burner Gas Tube #2
32	02-00126	Burner Gas Tube #3

Drawing #	Part #	Description
33	02-00124	Burner Gas Tube #4
34	02-00127	Burner Gas Tube #5
35	02-00139	Center Burner Electrode
36	02-00140	Front Left Electrode
37	02-00141	Rear Right Electrode
38	02-00120	Rear Right Thermocouple
39	02-00119	Rear Right Thermocouple
40	02-00121	Center Burner Thermocouple
41	02-00112	Top Burner Microswitch
42	02-00117	n/a
43	02-00122	Manifold
44	02-00018	Oven Indicator Light
45	02-00021	Oven Thermostat
46	02-00046	Temperature Probe Clip
47	02-00020	Oven Program Selector
48	02-00022	Top Burner Retaining Plate
49	02-00024	Control Panel Assembly
49.1	02-00025	Control Panel
49.2	02-00026	Oven retaining plate
49.3	02-00027	Display and Clock
49.4	02-00028	Buttons for display/clock
49.5	02-00029	Decorative Circle for Buttons
49.6	02-00030	Display Glass
50	02-00034	Exhaust pipe
51	02-00037	Exhaust pipe shielding plate
52	02-00036	Flue bottom plate
53	02-00035	Flue cover plate
54	02-00113	Spark Module
55	02-00111	High Limit Themostat
56	02-00032	Cooling Fan Thermostat
57	02-00031	Cooling Fan
58	02-00038	Front Oven Panel
59	02-00039	Oven Bottom Plate
60	02-00040	Oven Gasket
61	02-00041	Insulation
62	02-00042	Insulation
63	02-00043	Oven Light Assy. Small

Drawing #	Part #	Description
64	02-00044	Light Assy. Large
65	02-00045	Convection Fan Assy.
66	02-00047	Bake Element
67	02-00049	Convection Element
68	02-00048	Broil Element
69	02-00050	Convection Fan Cover
70	02-00051	Bake Element Housing
71	02-00052	Guide Bracket
72	02-00053	Guide Bracket Roller
73	02-00056	Left and Right Brackets for Oven Liner
74	02-00055	Rear Bracket for Oven Liner
75	02-00054	Oven Bracket
76	02-00092	Left Side Plate
77	02-00093	Right Side Plate
78	02-00118	Rear Plate
79	02-00095	Oven Retaining Plate #2
80	02-00098	Oven Positioning Plate
81	02-00096	Terminal Block
82	02-00097	Oven Retaining Plate #3
83	02-00109	Oven Door Assy
83.01	02-00058	Handle
83.02	02-00059	Handle Washer
83.03	02-00061	Handle Attachment Plate
83.04	02-00060	Handle Bushing
83.05	02-00062	Door Glass
83.06	02-00063	Interior Glass
83.07	02-00064	Oven Glass
83.08	02-00065	Exterior Door
83.09	02-00067	Lower Glass Retainer
83.1	02-00066	Glass Retainer
83.11	02-00068	Interior Glass Retainer
83.12	02-00069	Interior Glass Retainer
83.13	02-00073	Upper Door Bracket
83.14	02-00071	Left Door Frame Bracket
83.15	02-00072	Right Door Frame Bracket
83.16	02-00074	Oven Retaining Plate
83.17	02-00075	Door Hinge

Drawing #	Part #	Description
84	02-00076	Hinged Retaining Plate
85	02-00077	Oven Drawer Assy.
85.1	02-00078	Drawer Front Panel
85.2	02-00079	Drawer Front Attachment Plate
85.3	02-00080	Drawer Bed
85.4	02-00081	Drawer Roof
85.5	02-00082	Drawer Guide Right
85.6	02-00083	Drawer Guide Left
85.7	02-00084	Drawer Guide Rail
85.8	02-00085	Closing Pad
86	02-00086	Kick Plate
87	02-00087	Oven Support
88	02-00088	Oven Support
89	02-00089	Oven Base Panel
90	02-00091	Right Side Support
91	02-00090	Left Side Support
92	02-00099	Oven Bracket
93	02-00100	Oven Bracket
94	02-00101	Oven Bracket
95	02-00146	Burner Grate Assy.
95.1	02-00144	Middle Burner Grate
95.2	02-00143	Left and Right Burner Grates
96	02-00145	Wok Ring
97	02-00142	Oven Program Selector Knob
98	02-00107	Oven/Burner Knob
99	02-00106	Bottom Oven Rack
100	02-00105	Upper Oven Rack
101	02-00104	Drip Tray
102	02-00115	Adjustable Legs
103	02-00102	Backsplash
104	02-00138	Gas Regulator
105	02-00137	Burner Orifice
106	02-00136	Gas Elbow
107	02-00114	Power Cord