



CER365-SS Parts List

Drawing #	Part #	Description
1	02-00001	Range Top Assembly
1.1	02-00002	Range Top
1.2	02-00003	Range Top Bracket
1.3	02-00004	Range Top Bracket #2
1.4	02-00005	Range Top Bracket #3
2	02-00006	Control Panel Connection Plate
3	02-00007	Oven Retaining Plate Right
4	02-00008	Oven Retaining Plate Left
5	02-00009	Glass Top
6	02-00010	Middle Top Burner
7	02-00011	Left Front Top Burner
8	02-00012	Front Right Top Burner
9	02-00013	Top Burner Chassis
10	02-00014	Spring
11	02-00015	Fixed seat for radiant hot plate
12	02-00016	Hot Surface Indicator Light Housing
13	02-00017	Hot Surface Indicator Light
14	02-00018	Oven Indicator Light
15	02-00019	Top Burner Control
16	02-00020	Oven Program Selector
17	02-00021	Oven Thermostat
18	02-00022	Top Burner Retaining Plate
19	02-00023	Oven Control Retaining Plate
20	02-00024	Control Panel Assembly
20.1	02-00025	Control Panel
20.2	02-00026	Oven retaining plate
20.3	02-00027	Display and Clock
20.4	02-00028	Buttons for display/clock
20.5	02-00029	Decorative Circle for Buttons
20.6	02-00030	Display Glass
21	02-00031	Cooling Fan
22	02-00032	Cooling Fan Thermostat

Drawing #	Part #	Description
23	02-00033	Hi-Limit Switch
24	02-00034	Exhaust pipe
25	02-00035	Flue cover plate
26	02-00036	Flue bottom plate
27	02-00037	Exhaust pipe shielding plate
28	02-00038	Front Oven Panel
29	02-00039	Oven Bottom Plate
30	02-00040	Oven Gasket
31	02-00041	Insulation
32	02-00042	Insulation
33	02-00043	Oven Light Assy. Small
34	02-00044	Light Assy. Large
35	02-00045	Convection Fan Assy.
36	02-00046	Temperature Probe Clip
37	02-00047	Bake Element
38	02-00048	Broil Element
39	02-00049	Convection Element
40	02-00050	Convection Fan Cover
41	02-00051	Bake Element Housing
42	02-00052	Guide Bracket
43	02-00053	Guide Bracket Roller
44	02-00054	Oven Bracket
45	02-00055	Rear Bracket for Oven Liner
46	02-00056	Left and Right Brackets for Oven Liner
47	02-00057	Oven Door Assy
47.01	02-00058	Handle
47.02	02-00059	Handle Washer
47.03	02-00060	Handle Bushing
47.04	02-00061	Handle Attachment Plate
47.05	02-00062	Door Glass
47.06	02-00063	Interior Glass
47.07	02-00064	Oven Glass
47.08	02-00065	Exterior Door
47.09	02-00066	Glass Retainer
47.1	02-00067	Lower Glass Retainer
47.11	02-00068	Interior Glass Retainer
47.12	02-00069	Interior Glass Retainer
47.13	02-00070	Interior Glass Retainer #2

Drawing #	Part #	Description
47.14	02-00071	Left Door Frame Bracket
47.15	02-00072	Right Door Frame Bracket
47.16	02-00073	Upper Door Bracket
47.17	02-00074	Oven Retaining Plate
47.18	02-00075	Door Hinge
48	02-00076	Hinged Retaining Plate
49	02-00077	Oven Drawer Assy.
49.1	02-00078	Drawer Front Panel
49.2	02-00079	Drawer Front Attachment Plate
49.3	02-00080	Drawer Bed
49.4	02-00081	Drawer Roof
49.5	02-00082	Drawer Guide Right
49.6	02-00083	Drawer Guide Left
49.7	02-00084	Drawer Guide Rail
49.8	02-00085	Closing Pad
50	02-00086	Kick Plate
51	02-00087	Oven Support
52	02-00088	Oven Support
53	02-00089	Oven Base Panel
54	02-00090	Left Side Support
55	02-00091	Right Side Support
56	02-00092	Left Side Plate
57	02-00093	Right Side Plate
58	02-00094	Rear Plate
59	02-00095	Oven Retaining Plate #2
60	02-00096	Terminal Block
61	02-00097	Oven Retaining Plate #3
62	02-00098	Oven Positioning Plate
63	02-00099	Oven Bracket
64	02-00100	Oven Bracket
65	02-00101	Oven Bracket
66	02-00102	Backsplash
67	02-00103	Adjustable Legs
68	02-00104	Drip Tray
69	02-00105	Upper Oven Rack
70	02-00106	Bottom Oven Rack
71	02-00107	Oven/Burner Knob
72	02-00108	Power Cord