

CPR304-1-SS Parts List 2024.04.16

CPR304-1-SS Drawing #	Part #	Description
1,2	08-00001	Kick Panel + Door
4	08-00069	Burner Knob
5,7	08-00004	Burner/Oven Knob Ring
6	08-00071	Oven Knob
8	08-00006	Control Panel
9	08-00007	Bullnose
10	08-00008	Burner Valve
11	08-00009	Thermostat
12	08-00010	Aluminum Gas Pipe
13	08-00011	Burner Tray
14	08-00012	15K BTU Burner
15	08-00013	Decorative Cover
16	08-00014	Burner Grate
17	08-00015	Middle Grate
18	08-00016	Door Hinge
19	08-00017	Light Switch
20	08-00018	Oven Indicator Light
21	08-00019	Gas Manifold
22	08-00020	Electrode
23	08-00021	9k BTU Burner
24	08-00022	Backguard
25	08-00023	Oven Floorplate
26	08-00024	Oven Burner
27	08-00025	Adjustable Leg
28	08-00026	Sidewall (Left)
29	08-00027	Rack
30	08-00028	Oven Cavity Assy
31	08-00029	Top Burner Assy
32	08-00030	EGO Pulse Igniter
33	08-00031	Oven Light
34	08-00032	Relay
35	08-00033	Oven Rack
36	08-00034	Safety Valve
37	08-00035	Igniter
38	08-00036	Sidewall (Right)
39	08-00037	Power Cord
40	08-00038	Convection Fan Cover
41	08-00039	Convection Fan
42	08-00040	Regulator
43	08-00041	Gas Pipe
44	08-00043	Backplate