



ASSEMBLY INSTRUCTIONS & PARTS LIST

16 FT. Expandable Barrier

EB-FS-YB-160

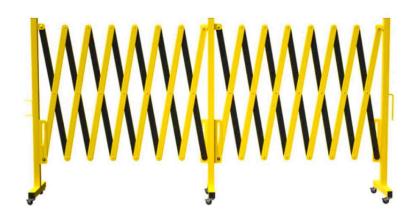

Item	Quantity	Image
Screw M5*40MM	6	
Expandable Screws M8	4	
U-Shaped Connector	2	
L-Shaped Connector	1	

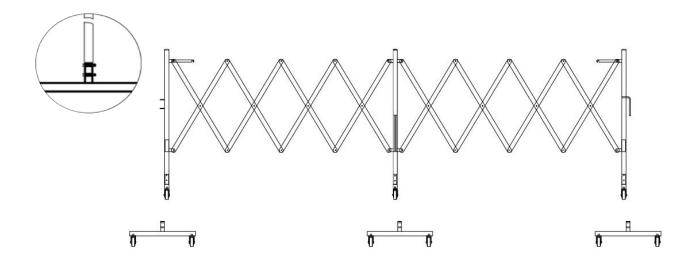

Method 1 - Using alone

Step 1: Unpack and remove the product and the caster base. Place the expandable barricade on a table with a certain height for installation.

Step 2: Secure the T-feet by inserting them into the holes in the base of the vertical bar. Tighten with included screws to ensure they do not come loose.

Method 2 - Mounting to wall for fixed use

Step 1: Repeat as in Method 1

Step 2: Repeat as in Method 1

Step 3: Place the completed barrier in the desired position and remove the U-shaped fittings and connector from the accessory bag.

Step 4: Attach the clips on the side posts to the wall fixings and place them in the desired position, then drill the pilot holes into your wall using a **12mm (21/64 In.) drill bit.** Place the expansion screws into the created pilot holes and affix the connector to the wall. Insert connector into the U-shaped fitting on your barricade.

Step 5: Repeat Step 3-4 for mounting other end of barricade. Affix U-shaped fitting to wall in order to accommodate L-shaped connector on barricade.

Method 3 - Connecting two expanding barricades

Step 1: Repeat as in Method 1

Step 2: Repeat as in Method 1

Step 3: Place the two sets of expanding barricades in the desired position and place the L-connectors into the U-shaped fittings to complete the connection. (*Note: this product can be connected without restriction)

Caution: Keep hands and fingers away moving diamonds of web when handling gate.