



ACCESSORIES



Steel Cables (2)





Length Adjusters (2)



Bolts (2)




Clips (2)



AC Power Cord

INSTRUCTIONS

1) Attach the clips to the fixture.

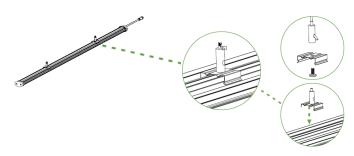


2) Adjust the position of the clips as needed.




3) Wrap the steel cables over the tent pole or mounting surface.



4) Insert the clip and adjusted end through the loop of the cable.

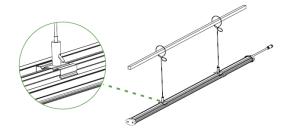

5) Use the length adjuster to adjust the mounting height of the light.

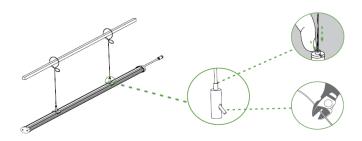

6) Assembly complete.





To connect the power cord, align the terminals of the cord, plug in and twist to secure.



To disconnect the power cord, twist the two halves away from each other first, then pull apart.

