OWNER'S MANUAL

THE GLADIATOR



ELITE TRIMMING TECHNOLOGIES

FOR MORE INFORMATION ON OUR PRODUCT LINE PLEASE VISIT

WWW.CPBOSOLUTIONS.COM



OWNER'S MANUAL

THE GLADIATOR

ELITE TRIMMING TECHNOLOGIES



CONTENTS

English

Machine Assembly	1
Cover Assembly	2
Blower Assembly	3
Hopper Assembly	4
Blade Removal & Cleaning	5
Blower Cleaning	6
Warranty Information	7

ELITE TRIMMING TECHNOLOGIES



GLADIATOR MACHINE ASSEMBLY



STEP 1



STEP 2

Loosen Eight 1/4" Sealing Bolts



Rubber Ring



Drun

Adjustment Assembly



LIFT THE DRUM

Note the longer end of the DRUM when re-installing

Cutting Reel

TOOLS REQUIRED

1 x #2 Phillips Screwdriver 1 x 3/32" T-Handle Allen Wrench 1 x 5/32" T-Handle Allen Wrench 1 x 1/8" T-Handle Allen Wrench 1 x 3/16" T-Handle Allen Wrench 1 x 3/8" Wrench Lower Frame

ELITE TRIMMING TECHNOLOGIES




COVER ASSEMBLY





It is UNSAFE to operate the Gladiator Trimmer without COVERS!

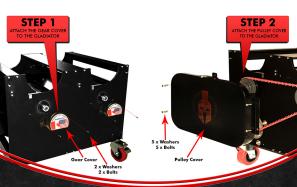

ELITE TRIMMING TECHNOLOGIES



BLOWER ASSEMBLY



Blower Only

STEP 1 ATTACH BLOWER BAG



STEP 2
ATTACH DIVERTER TO



Blower Bag Requires Cleanin (See Page 6)



Requires Cleaning See Page 7)



Diverter

STEP 3



ELITE TRIMMING TECHNOLOGIES



HOPPER ASSEMBLY





Pull each corner of unit away for each other to open u Once fully extended, pull the arm up.







ELITE TRIMMING TECHNOLOGIES

FOR MORE INFORMATION ON OUR PRODUCT LINE PLEASE VISIT WWW.CPBOSOLUTIONS.COM



GLADIATOR BLADE REMOVAL & CLEANING



For optimal performance and life, the BLADE and the BED BAR must be removed then cleaned every few hours of operation.



Remove BLADE then BED BAR carduly!

2.) Remove BED BAR MAGNET

Clean BLADE and BED BAR with utility knife. Wigns clean

MAGNETS with acetane
Installation is reverse order of removal

installation is reverse order or remov

Cleaning: For optimal performance and life, the components must be cleaned every 2 to 3 days of use.

Clean with pressure-washer at 1500-2000 PSI. Hot water, fan spray settings.

Run the Gladiator for 15 minutes after washing. Allowing components to dry.

Clean the length of the Cutting Reel and Shroud of all debris.





WARNING Avoid direct water contact on bearings

ELITE TRIMMING TECHNOLOGIES



BLOWER CLEANING



For Optimal performance and life, the BLOWER components must be cleaned every 3 to 4 days of use

INSTRUCTIONS:

Clean with pressure-washing at 1500 - 2000 PSI, Hot Water, Fan Spray Setting. Run BLOWER for 15 minutes after washing, allowing components to dry. Avoid water contact on bearings.





ELITE TRIMMING TECHNOLOGIES

FOR MORE INFORMATION ON OUR PRODUCT LINE PLEASE VISIT

WWW.CPBOSOLUTIONS.COM



WARRANTY INFORMATION THE GLADIATOR

MOTOR SERIAL NUMBER:	
BLOWER SERIAL NUMBER:	
DATE OF PURCHASE:	
LOCATION OF PURCHASE:	
STORE NAME (IF APPLICABLE):	
EMAIL ADDRESS:	
	Centurion Pro Solutions Inc. will remain strictly confidential

Thank you for your purchase

Please complete this page and email a copy to <u>warranty@cprosolutions.com</u> in order for the warranty to be valid.

If you require assistance, please contact our support line at 1-855-535-0558 or visit our website at www.cprosolutions.com

A 3 year warranty is included when purchasing Centurion Pro Machines. This warranty covers, the motor and any and all parts that are considered defective. The warranty does not cover neglect, abuse, physical damage, water damage, and/or operator error. Please take proper care of your machine.

ELITE TRIMMING TECHNOLOGIES