
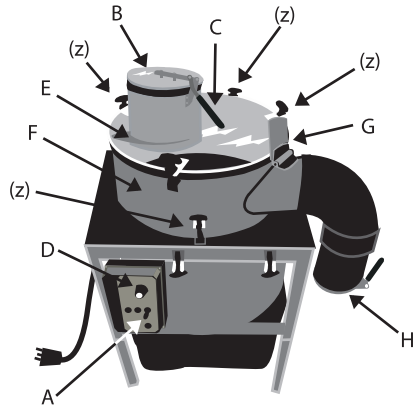




DESIGNED FOR LARGE PRODUCERS

USER INSTRUCTIONS

- 1- Read carefully the security instructions (see Warnings  in rear) before using the machine.
- 2- Plug the machine in an outlet.
- 3- Turn on the machine using the Start/Stop switch (A).
- 4- Open the lid (B) using the handle (C) on the top container. The handle allows the lid to open partially with one hand. Finish opening the lid with the other hand.
- 5- Fill the upper container with freshly harvested and pre-cut plants.
- 6- Close the upper container's lid
- 7- Adjust the motor dimmer (D) at 100%
- 8- Slowly open the door at the base of the upper container (E) to empty it in the main container (F).
- 9- Once empty, close the door (E).
- 10- If necessary, slow down the dimmer speed (D) for the plants to stay more on top of the grate surface.
- 11- Let the plants bounce around into the machine for about 1 minute or until obtaining the desired cut.
- 12- Place the dimmer (D) to 100% to help the plants to go out.
- 13- Open the exit door (G) and keep it open until the main container is empty.
- 14- Open the final door (H) to get the cut plants and then, close the door.




REPEAT: Repeat steps 4 to 14 as needed, depending on the quantity of plants to be arranged.

- 15- Turn off the machine using the Start/Stop switch (A).
- 16- Unplug the machine from the outlet.

MAINTENANCE

In order to facilitate the trimming, spray vegetable oil and clean the grate and blades frequently with soap or isopropyl alcohol. This must be done when the machine is not running. Sharpen the blade when necessary. To sharpen them, never remove the blades from the hub.

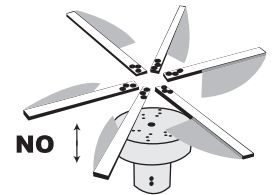

1 
Read all warnings in rear.

THE TRIMPRO XL IS DESIGNED TO BE USED WITH FRESHLY HARVESTED PLANTS.

2 & 3: Plugging the machine into an outlet and turning it on using the Start/Stop switch (A).

4: Opening the lid (B) using the handle (C).

5: Filling the upper container with plants.

6: Closing the upper container's lid.

7: Adjusting the motor dimmer (D) to 100%.

8: Slowly opening the door (E) at the base of the upper container to empty it into the main container (F).

9: Closing the door (E) once empty.

10: Reducing the dimmer speed (D) if necessary.

11: Letting the plants bounce around for 1 minute.

12: Setting the dimmer (D) back to 100%.


13: Opening the exit door (G) to empty the main container.

14: Opening the final door (H) to retrieve the cut plants.

15 & 16: Turning off the machine using the Start/Stop switch (A) and unplugging it from the outlet.




DESIGNED FOR LARGE PRODUCERS

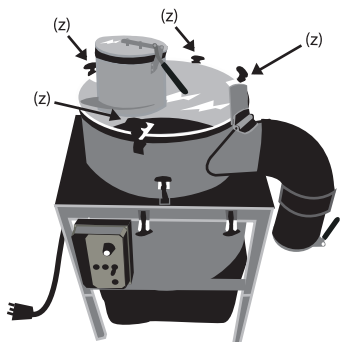

ASSEMBLY

- 1- Remove the machine and its detached components from the transportation box.
- 2- Unfasten the four rubber fasteners (see part identified as "z" on the drawing on top) attaching the transparent plastic and metal structure; turn it upside down and fix it with the same rubber fasteners.
- 3- Install the four legs and tighten them to the structure with the thumb screws supplied.
- 4- Assemble the two black plastic tubes together and install them on the machine.
- 5- Cut the two plastic ties that are holding the electrical box. Place this box outside the machine on the upper left side (see drawing on top of this page for position).
- 6- Fix the box to the structure of the machine using the four screws and the screwdriver supplied.
- 7- Use the velcro strips at the top of the bag to fix it to the ring beneath the machine.
- 8- Place a bucket below the black plastic tube.

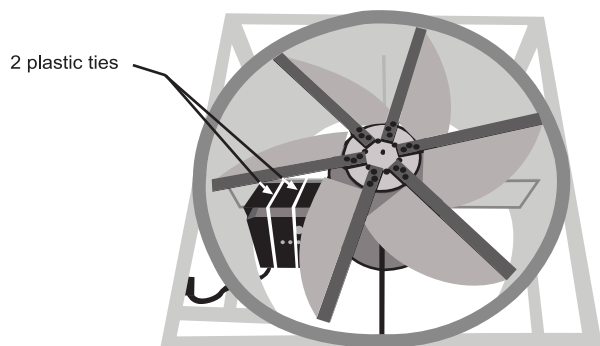

WARNING! WHEN THE MACHINE IS RUNNING:

- Never place your fingers or the gloves or any other body part in contact with the grate or the blade.
- Safety glasses and gloves are required at all time. The gloves have to be tight enough so they don't get inside the grate slots. A loose glove is dangerous, beware!
- Never apply pressure on the grate.
- Do not use scissors, knives or any instrument above the grate.

ADJUSTMENT OF THE BLADES HEIGHT

To adjust the height of the blades, follow these steps:

- 1- Remove both "A" screws (blocking screw), then both "B" screws (tightening screw) (See drawing "Adjustment Screws").
- 2- Turn the "C" screw (height adjustment screw). To raise the blades, turn clockwise. To lower the blades, turn counterclockwise.
- 3- Apply pressure on the blades to ensure they are well located.
- 4- Put both "B" screws back.
- 5- Verify if the height of the blades is OK by closing the grate. If not, return to step 1.
- 6- To finish, put both "A" screws back.


NOTE: The "A" and "B" screws should always be aligned with the flat side of the motor shaft.

SHARPENING


- 1- Remove the 4 set screws located in the 2 holes on the side of the aluminum hub (See drawing "Adjustment Screws").
- 2- Remove the blades and the hub in one piece from the motor shaft.
- 3- Clean the blade with isopropyl alcohol.
- 4- Use a grindstone.
- 5- Put a gentle pressure with the bottom of the blades on the grindstone with the sharpening angle desired.
- 6- Pass the blades on the grindstone with a movement from left to right and from right to left until each blade is properly sharpened.
- 7- Put back the blades and the aluminum hub on the motor shaft.
- 8- Put back in position the 4 set screws in the 2 holes on the side of the aluminum hub. Make sure these set screws are aligned with the flat part of the motor shaft.

In order to facilitate the trimming, spray vegetable oil and clean the grate and blades frequently with soap or isopropyl alcohol. This must be done when the machine is not running. Sharpen the blade when necessary. To sharpen them, never remove the blades from the hub even for sharpening.


ADJUSTMENT SCREWS

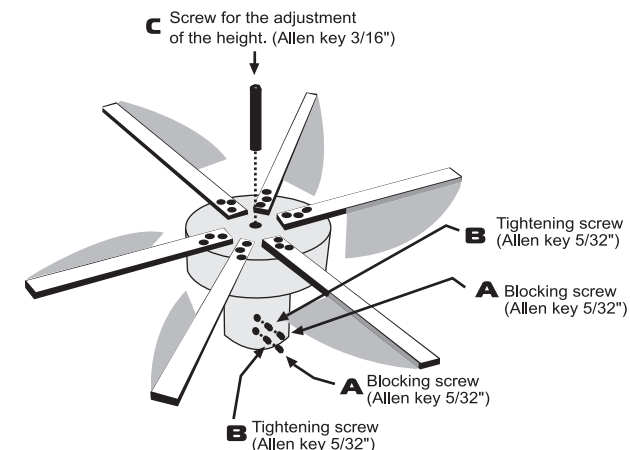

LOWER THE BLADES

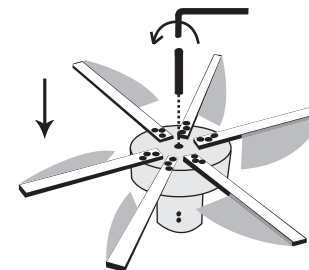


RAISE THE BLADES

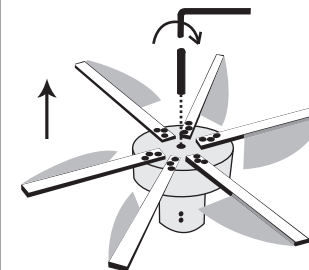

WARNING



For security, we recommend to keep a distance of at least 1/8 of an inch (3mm) between the grate and the blades.

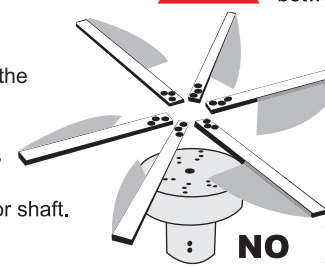

FOR INFORMATION OR TO ORDER

VISIT: WWW.TRIMPRO.CA
Contact: info@trimpro.ca
Call (Canada): +1-450-349-0811

PATENT : CAN : 2.470.370 USA : 7.168.643 AUS: 2004269786
PATENT PENDING : EUR: 04761713.9 CE STANDARD

To be used in accordance with all existing laws and regulations. The manufacturer does not accept any responsibility for damages caused to or by the TRIMPRO XL, resulting from an inadequate use or assembly