



**“Powering communication in your home”**



## **OPERATING MANUAL**

Model - IF-01

### **Features:**

Operates as a Door Bell

Communication between home phone and Front Door/Gate

Up to 2 Doors or Gates can be opened from your home phone



## **Table of Contents**

Introduction – Part Names	3
Safety Instructions	3
Intellifone Warranty	4
Service	4
Operating Instructions	5
Operating Instructions	6
Operating Instructions	7
Codes	8

## **Content**

1 x Control Panel  
1 x Door Station  
1 x Ringer  
1 x 18V Power Supply

## **Part Names**

Door Station –

This part is located on an outside wall of the house at a Front or Rear Door or Gate.

Main Control Unit –

This part is located at the Structured Cabling panel (usually in the garage or inside a cupboard/wardrobe)

Internal Ringer –

This part is generally located on the ceiling - central in the home.

Only authorized service personnel may install, remove or modify any part of the intellifone system.

## **Safety Instructions**

- Before using the system, read the Safety Instructions thoroughly and operate in the correct way.
- Do not install this system if you are not licensed to do so.
- DO NOT expose equipment directly to heat as the Main control unit cannot operate in an ambient temperature greater than 50 degrees Celsius.
- Only Australian Standard approved telephones should be used with this product.
- Do not spray water on or near this product as it is not water proof.
- Be aware of who is at the door / gate before keying the door release code into your handset. Once keyed the door/gate will open.

## **Warranty**

- Cadlink -The Manufacturer warrants that the intellifone product is free from defects in materials and workmanship under normal use and service for 1 year from installation date.
- Misuse, neglect or incorrect installation of the intellifone products will not be covered under this warranty.
- The limited back to base warranty is applicable to the original purchaser only.
- Proof of purchase ie Receipt will be required for warranty claims.
- Incompatible products (telephone handsets etc) will not deem this product faulty and therefore not refundable or covered under warranty.
- Repairs or replacements under this warranty does not give the right to an extension or new warranty period.
- Cadlink is not liable for any other loss other than the unit itself.
- The warranty covers the parts, labour and service to the intellifone products itself. Labour to remove and to reinstall will be charged at the authorized agents discretion.

This product is subject to change without notice from the manufacturer.

## **Service**

**Please contact your Installer in the first instance or the Australian Distributor Intelligent Home on 1300 652 633.**

### **Notes:**

Not all handsets are compatible with the intellifone  
Depending on the handset used, ring tones may vary

## **Operating Instructions**

### **Intellifone: (with out gate release)**

1. A visitor presses the button at the Door Station:  
If the telephones are not being used....  
The Internal Ringer and the telephones will ring.  
Or  
If the telephones are being used....  
The Internal Ringer only will ring.
2. Lift the telephone handset and talk to the visitor at the Door Station.
3. When the call has ended, hang up the telephone handset and attend to the door or gate as required.

### **Intellifone: (with gate release)**

1. A visitor presses the button at the Door Station:  
If the telephones are not being used....  
The Internal Ringer and the telephones will ring.  
Or  
If the telephones are being used....  
The Internal Ringer only will ring.
2. Lift the telephone handset and talk to the visitor at the Door Station.
3. Open the door/gate by keying a "code" into your handset, hang up the handset to terminate the call between the telephone and the Door Station. See code list and explanations on next page.

**Intellifone: (Opening gate when no visitor)**

Example: When visitors are leaving your home.

Lift a telephone handset and key in the code required to open the door/gate.

Note: Because the door station was not activated, you can not use the code \*#.

Examples of this function:

1. may be used when you are walking your visitors to their vehicles after a visit.
2. Discharging of garbage bags into the outside garbage bin.

**Intellifone: (Using an Answering Machine)**

If an answering machine is plugged into your telephone network, you can select one of the following:

1. Don't allow the answering machine to pick up the call
  - a. Set your answering machine to only pick up calls after four rings.
2. Allow answering machine to pick up the call
  - a. Set your answering machine to pick up after two rings.

**Call waiting:**

Should a second call come through while on an initial call, a beeping sound will alert you.

Ignore the signal to remain with the initial call

Or

Dial #0 to place the call on hold, then #0 to return to the initial call.

### **Incoming calls: (Switching between call and Door Station)**

When you're on a call and your visitor rings the door station, the Internal Ringer will Ring and there will be a beeping sound in the background on the phone.

There are two options:

1. To put your call on hold dial #0.
  - a. This will connect you to the visitor at the door station and put the call on hold.
  - b. To let the visitor in, dial #1.
  - c. To return to your call dial #0.
2. Terminate your call.
  - a. Hang up the handset to terminate your call.
  - b. Speak to the visitor at the door station.

**Note:** Switching between the Door Station and a call can only be done if the call you were on was an incoming call. Out going calls will be lost if either of the above are followed.

### **Outgoing Calls: (Switching between call and Door Station)**

If you are on a call that you initiated, a visitor rings the door station, the Internal Ringer will Ring.

There are two options:

1. Terminate your call
  - a. Hang up the handset or Dial #0 - this will connect you to the visitor at the door station.
2. The gate can be opened by dialing #1 while still on the call.



## **Codes**

If your home has multiple door/gate release mechanisms, you will need to dial #7, #8 or #9 depending on which door/gate you wish to open.

Whether you have 1, 2 or 3 door/gate release locations, enter each door/gate release location into the table below for future reference.

<b>Code</b>	<b>Door/Gate Location</b>
#2	Pedestrian Gate (example only)
#3	Garage Entry (example only)
#7	
#8	
#9	
#1	Automatic location

The installer will program each door station with the above code.

The code " #1 " is the Automatic location door/gate release code. By keying in #1, the system has the smarts to know which Door Station was rung and will open the associated door/gate.

Examples: (using the above tabled examples)

1. If a visitor rings the door station at the pedestrian gate and you wish to open that particular gate, key in #1 or #2.
2. If a visitor rings the door station at the pedestrian gate and you wish to let them in via the garage entry, you would key the code designated to the garage entry location #3 (as per the table above)

**Distributor**



**[www.intelligenthome.com.au](http://www.intelligenthome.com.au)**

**1300 652 633**

**Service**

Please contact the company or Installer that installed your intellifone in the first instance or as a last resort, the Distributor Intelligent Home on 1300 652 633.

**Designed and Manufactured by Cadlink**

