



Package Contents



ISO-BEAM-620

Hardware Installation

The IsoBeam is compatible with the RD-5G30-LW, PBE-M5-620, and PBE-5AC-620.


1.



ISO-BEAM-620 Quick Start Guide



3.

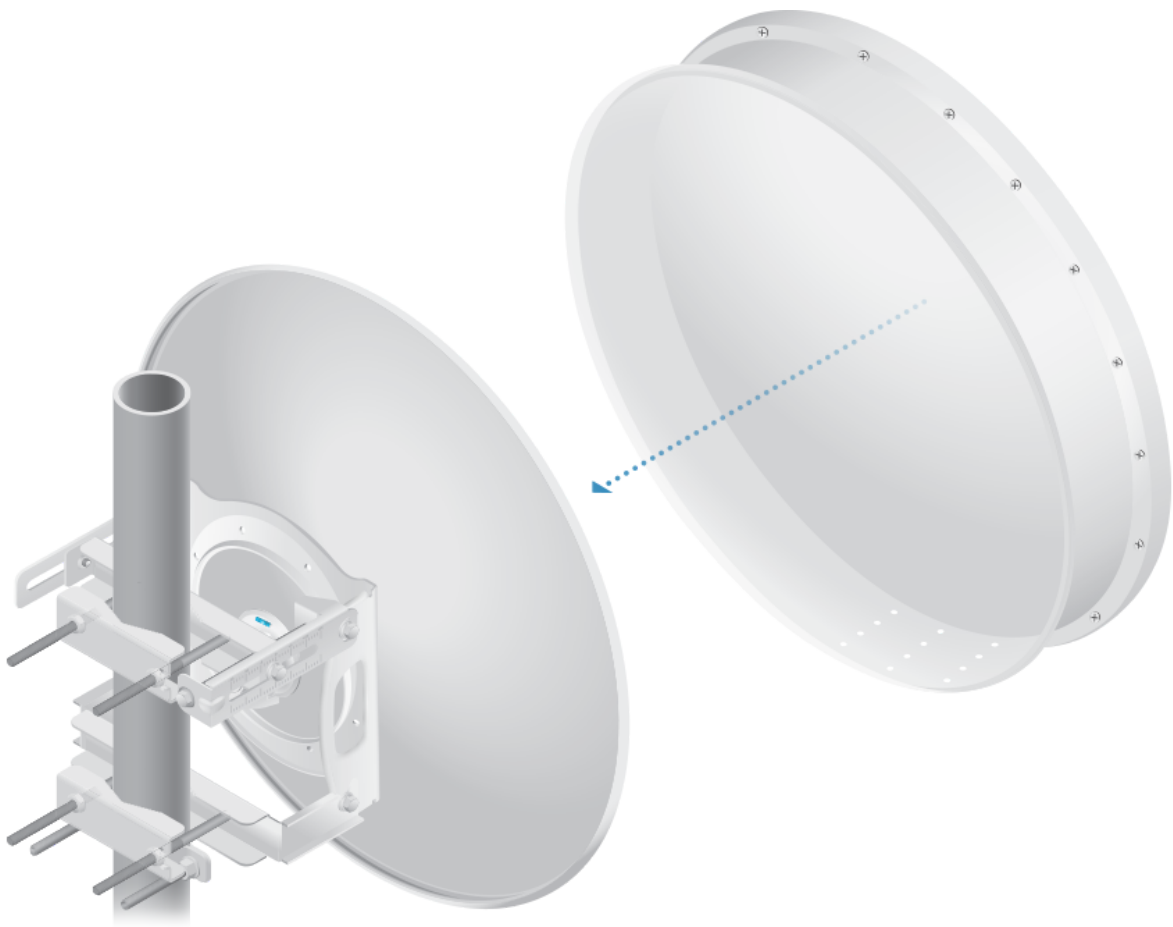


Note: Seat the dish reflector inside of the IsoBeam with the drainage holes facing down to the ground.


4.



ISO-BEAM-620 Quick Start Guide

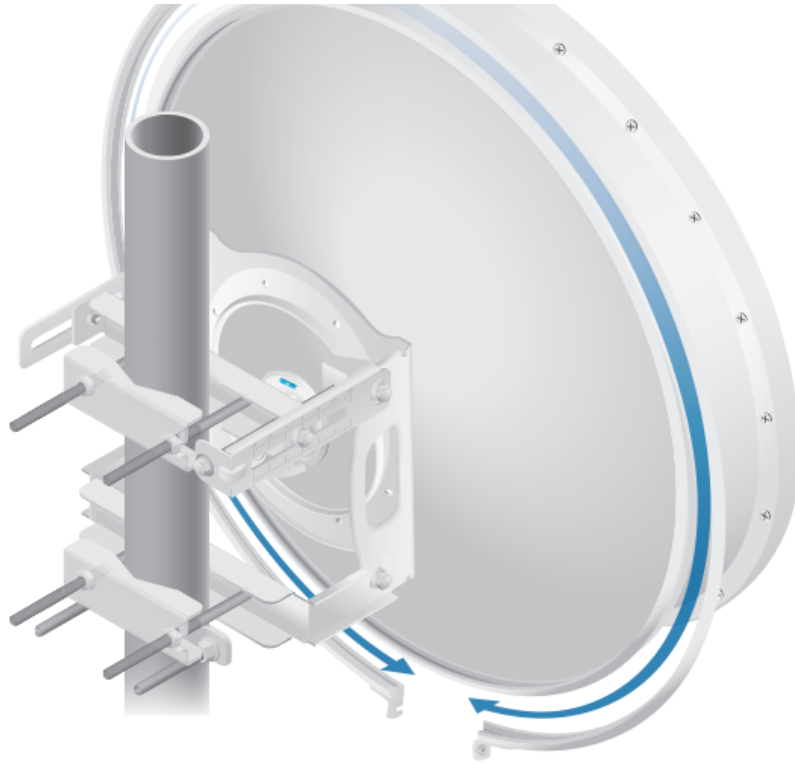


5.

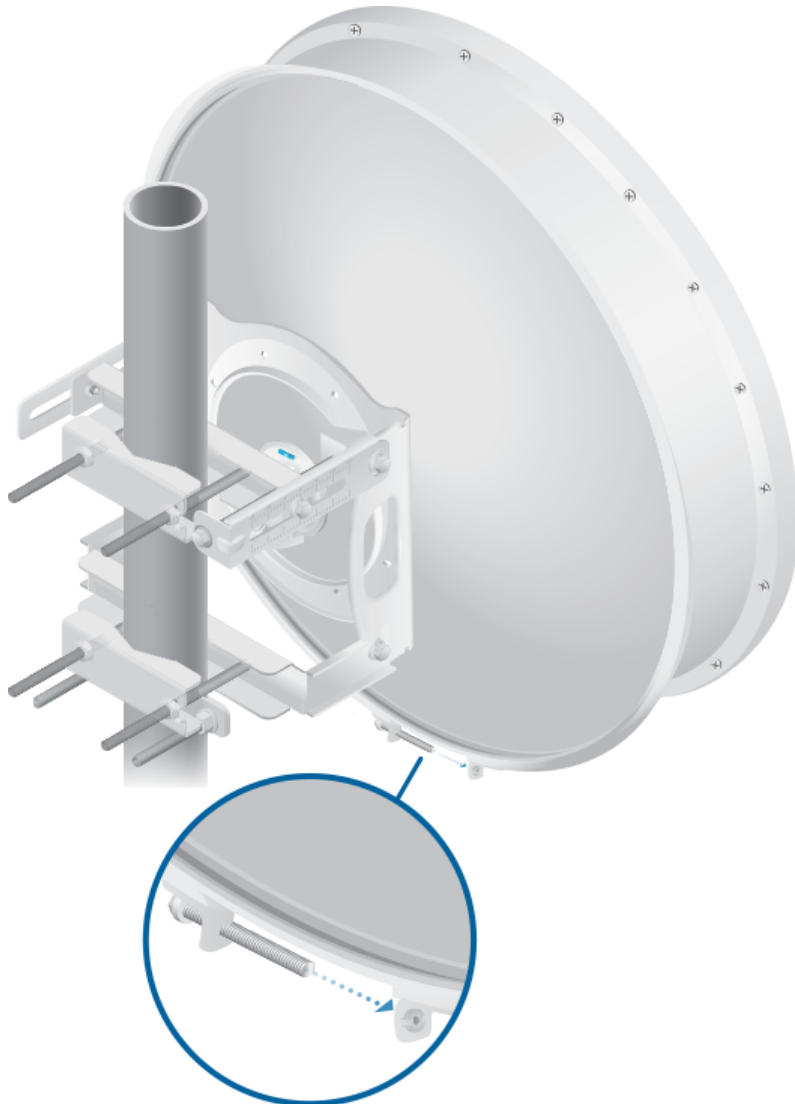

6.



ISO-BEAM-620 Quick Start Guide

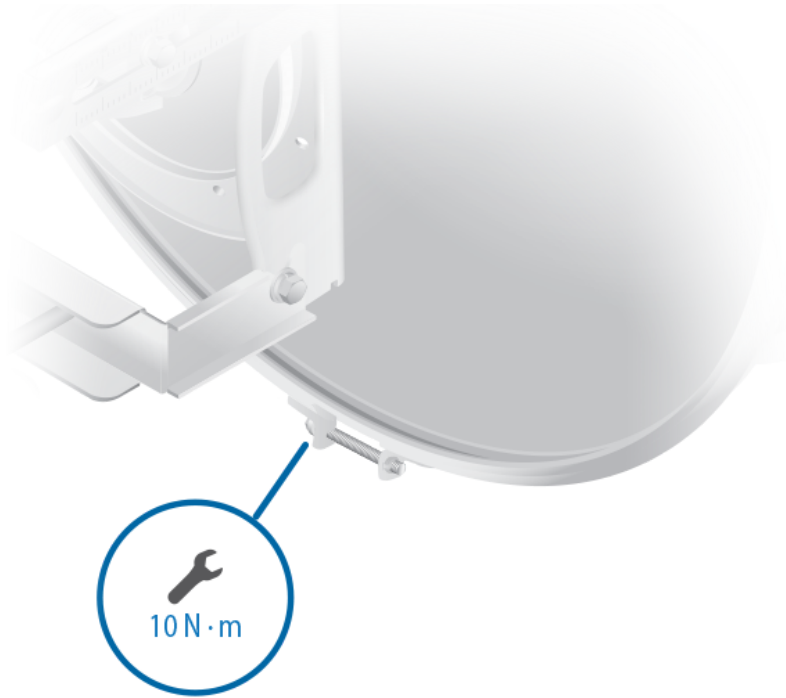

Limited Warranty

ui.com/support/warranty

The limited warranty requires the use of arbitration to resolve disputes on an individual basis, and, where applicable, specify arbitration instead of jury trials or class actions.

Online Resources

