

Floor Easel Parts List

- 1 Wood Tray (1)
- 2 Wood Tray Back (1)
- **3** Wood Lower Legs (3)
- 4 Wood Upper Legs (2)
- 5 Wood Upper Middle Lag (1)
- **A** Top Bolt 2 1/2" x 3/16" (1)
- **B** Tray Bolt 3 1/2" x 3/16" (1)
- **C** Wing Nuts 3/16" (5)
- **D** Leg Bolts 1 3/4" x 3/16" (3)
- **E** Washers (5)
- F Leg Chain (1)
- **G** Cup Hook (1)
- H Leg Bumpers (3)

© 2018 MCC BRANDS, LLC

PO Box 495 3003 Purchase Street Purchase, NY 10577-9998

All rights reserved

Designed in New York Made in China www.kingartco.com



Assembly Instructions

STEP 1

Attach leg bumpers to bottom of legs tapping lightly with a hammer if needed.

STEP 2

Attached upper legs and lower legs together using the 1 3/4" leg bolts, washers and wing nuts.

STEP 3

Position all 3 legs at the top placing middle leg in center and secure with 2 1/2" bolt, washer and wing nut.

STEP 4

Attach wood tray, tray back and chain with 3 1/2" bolt, washer and wing nut.

STEP 5

Secure cup hook to the back leg and attach chain to cup hook.

NOTE

Holes for bolts are drilled to close specifications for stability. Use a screwdriver to tighten bolts through pre-drilled holes.

Check hardware for tightness to assure a sturdy product.

