
Instalation example

To create a walk in closet

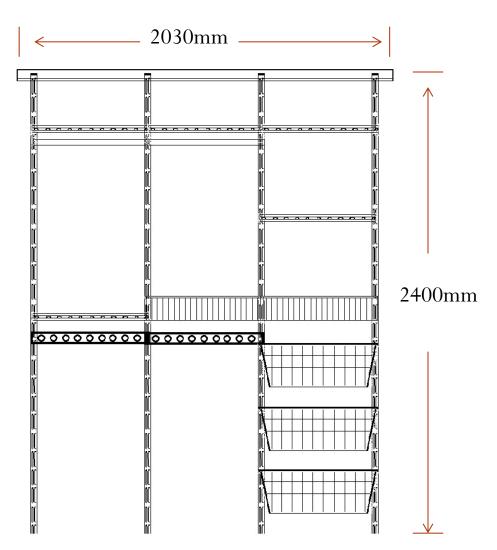

Contents:


Seq	Image	Descriptio n	Spec	Quantity
1		Top Track	2030 x 10 x 46 mm	1
2		Upright	2300 x 25 x 25 mm	4
3		Bracket	420 x 13 x 73 mm	18
4		Wire Shelf	607 x 400 x 14 mm	5
5		U-shape basket	607 x 438 x 96 mm	2

Seq	Image	Description	Spec	Quantity
6		Pant rack	597 x 443 x 25 mm	2
7		Wire basket	597 x 185 x 426 mm	3
8	0	Closet Rod	∮ 25 x 607MM	2
9		End Caps	∮ 25 x 18mm	4
10		Closet Rod Holder	35 x 43 x 77 mm	3


Assembly Instruction

- Tools required
- For top track
- For upright and shelf
- For wire shelf and basket
- For pant rack
- For drawer basket

Tools required

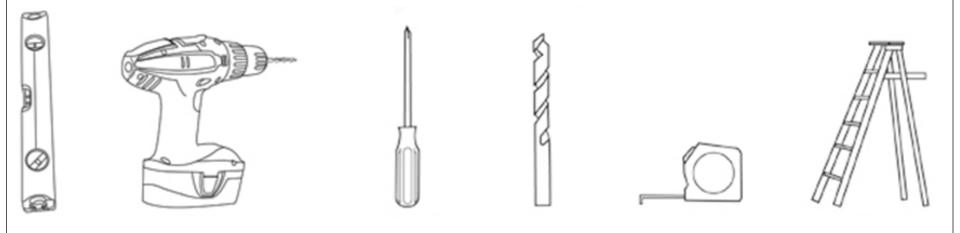


NOTE! Make sure to use the appropriate fixing based on what type of wall you have.

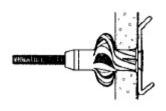


Fixing Examples.


Single plasterboard expanding fixing for single plasterboard. Use the appropriate drill bit to drill the hole. Insert anchor, and tighten to expand the fixing as shown.

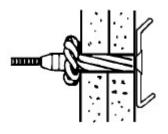

Double plasterboard require a longer expanding fixing. Use the appropriate drill bit to drill the hole. Insert anchor, and tighten to expand the fixing as shown.

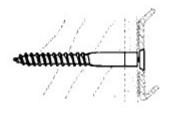

Fixing into timber/studs over drywall or directly into wood. Drill a pilot hole and fix using a wood screw as shown.

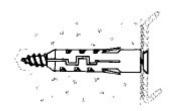

Brick, block or Concrete walls require a plug and screw fixing as shown. Drill the appropriate hole size using a masonry drill, insert the plug and tighten the screw.

To fix the top track



Position the Top Track at desired height, mark one hole in the middle, and take the top track down. It is usually placed at near to ceiling height, but may be placed at any height. (Bear in mind that the standard height of the hanging uprights are 2300mm long, these can be cut to reduce if required)



Begin by drilling the marked hole with an appropriate drill bit for the type of fixing required.

Insert the wall anchor / plug if required.



Put the top track up with one screw and tighten it enough to hold the top track against the wall.

To fix the top track




To keep the top track level while you mark **all of** the holes, place a level on the top of the top track and adjust it as required.




Drill all marked holes and put up the Top Track using the chosen fixings and insert and tighten all the screws.

If you hit the hollow part of the wall, mark those holes with an X, reminding yourself you need to use hollow wall anchors.

To install the uprights and brackets

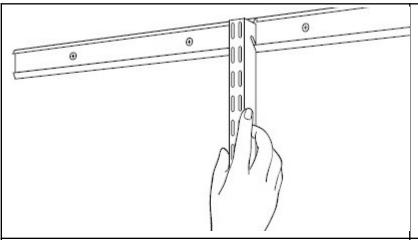


Insert the hanging uprights in the top track notches.

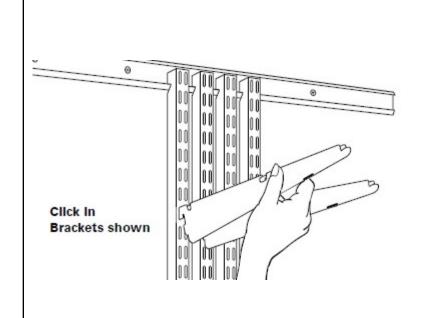

- 1. Hang the uprights together and insert brackets in at the appropriate height based on your space plan.
- 2. Slide the hang standards to their approximate position on the top track. Refer to your custom space plan for placement of the hang standards, if you have one.
- 3. Hang standards should be a minimum of
- 1/2" or 10 mm from the ends of the top track.

To put the wire shelf and basket shelf

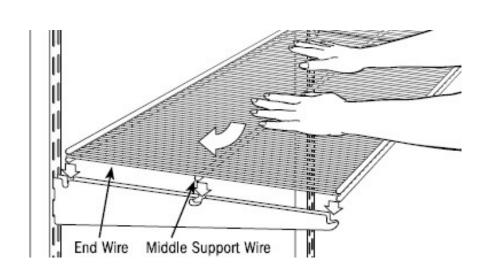

Install the wire shelves by
Placing the shelf wires over
bracket click in notches.
Install the shelf with end wires
inside the brackets.
Lock the shelf into place by
pressing down on the middle of
the shelf and pushing toward the
wall.

To REMOVE a wire shelf from a bracket while on the hang standards hold the hang upright steady with one hand, place the other hand at the back of the shelf and pull up and forward to release.

To put the wire shelf and basket



Install wire baskets shelf with the double wire front lip of the wire basket shelf facing forward, place the wire shelf basket wires over the bracket click in notches. Install the wire shelf basket with the end wires inside the brackets.

Lock the wire shelf basket into place by pressing down on the middle of the wire shelf basket and pushing toward the wall.

Insert and fit wire shelf basket dividers at the ends of the shelf or anywhere along the width as desired.

