



BREAK AWAY VALVES

Banlaw's Break Away Valves are designed to fracture when a specific amount of lateral stress is applied.

This means that should a vehicle drive-away during refuelling, the valve assembly will separate into two Dry Break components.

These Dry Break components will prevent fuel from spilling from either the delivery line, or the hose which is still connected to the vehicle.

Part Number	Product Description	Tech Specs	Shipping Specs
AUS4W-50	Break Away Valve 2" BSPTMM	2" BSPF	29 x 11 x 11cm 3kg
AUS4W-50N	Break Away Valve 2" NPTMM	2" NPTM	29 x 11 x 11cm 3kg
AUS4W-75	Break Away Valve 3" BSPTMM	3" BSPTM	5.5kg
AUS4W-75N	Break Away Valve 3" NPTMM	3" NPTM	5.5kg
BFT4W029	Break Away Valve Adaptor 3" BSPF - 2.5" JICM	3" BSPF, 2-1/2" JICM	
BFT4W030	Break Away Valve Adaptor 2" BSPF - 2-1/2" JICM	2" BSPF, 2-1/2" JICM	
BFT4W031	Break Away Valve Adaptor 3" NPTF - 2-1/2" JICM	3" NPTF, 2-1/2" JICM	
BFT4W032	Break Away Valve Adaptor 2" NPTF - 2-1/2" JICM	2" NPTF, 2-1/2" JICM	
BFT4W033	Break Away Valve Adaptor 2" BSPF - 1-7/8" JICM	2" BSPF, 1-7/8" JICM	
BFT4W034	Break Away Valve Adaptor 2" NPTF - 1-7/8" JICM	2" NPTF, 1-7/8" JICM	

PETRO Contact Information

AFRICA

South Africa

Factory 14 Bentonite Street
Alrode, Alberton, Johannesburg
South Africa
P: +27 (0)11 864 7758
F: +27 (0) 11 864 1649
E: sales@petroindustrial.co.za

UAE

Dubai

Office LB17330, Lobby Building 17
Jebel Ali Free Zone
PO Box 18602
Dubai, United Arab Emirates
P: +971 488 76688
F: +971 488 76932
E: salesuae@petroind.com

AUSTRALIA

Eastern Australia

Factory 2, 106 Potassium Street
PO Box 407
Narangba QLD 4504
P: 07 3204 9558
F: 07 3293 4852
E: sales@petroindustrial.com.au

Western Australia

173 Mulgul Road, Malaga WA 6090 AU
P: +61 (8) 6305 0855
E: saleswa@petroperth.com.au

PETRO INDUSTRIAL



petroind.com