## **11** Fuel Receivers

All FloMAX Fuel receivers have our patented enclosed poppet stem spring for a smooth and higher flowing fuel path. This greatly enhances the life of both the receiver and fuel nozzle due to the decrease in fuel restriction and vibration.

Our FR-RS series of fuel receivers have a patented removable stainless steel wear sleeve. This revolutionary patented concept allows the fuel receiver wear surface to be replaced very quickly and easily without removing the fuel receiver from the tank or the loss of any fuel. It uses the same internal spring concept that has been so successful in our other receivers.

• Patented internal spring reduces vibration and increases flow. • Patented removable wear sleeve allows easy replacement without draining tank (FR-RS Only). • Available in both standard and low pressure models.



FR-P Cap



## FR-P Cap and FRX-P Cap Available. Spring Clip Option Available For All Fuel Receivers.

FR P Cap and FRX P Cap are a Flomax innovation for an easily installed and removed fuel receiver cap. The push to connect design allows easy installation in all weather conditions. The FR P cap fits all standard fuel receivers. The FRX P Cap fits our high flowing 2" FRX Fuel receivers.