



Colibri Quick Reference Guide Tank Monitoring System

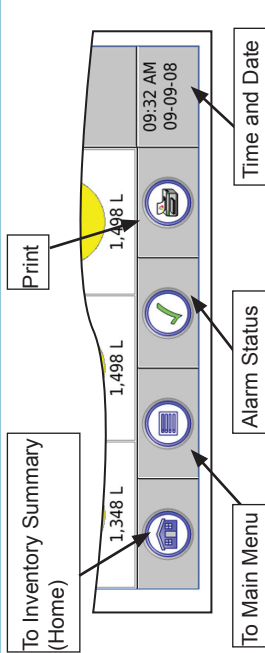

Navigation Icons

- Back:** Moves back one screen.
- Scroll Up:** More options available above.
- Scroll Down:** More options available below.

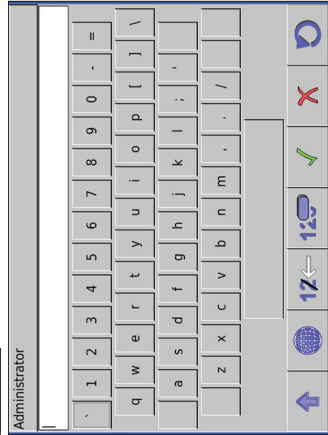

Text Entry Box

- Character Selection:** Selects between upper/lower case letters and numerals/symbols.
- Alternate Characters:** Allows selecting accented or regional characters.
- Backspace:** Deletes last character.
- Clear:** Deletes all characters.
- Enter:** Saves the characters entered.
- Cancel:** Exits without saving.
- Restore Default:** Returns to original settings.


User Role Icon

The User Role icon indicates the current level of access.

- Guest role
- User role
- Administrator role

Note: Pressing the Role icon will return the current access level to Guest, or if at guest level, will ask for password.

Alarm Status LEDs

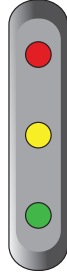

- Red** – Flashes with Tank or Probe Alarms.
- Yellow** – Flashes with Active System Warnings.
- Green** – On when power is applied to the console.

Note: Indicator LEDs will stop flashing when there are no alarms or warnings.

View Active Alarms

Press to view all Active alarms.

Note: Pressing this button will display active alarms only. When the Alarm Condition button is a Checkmark, there are no active alarms or warnings.

Clear Active Alarms

A certified technician can help diagnose alarms. Write your Service Company's information below.

Name	Number
()	-
()	-

Note: Alarms cannot be cleared manually. Alarms will clear automatically when the condition that created the alarm has been corrected.


View Inventory

- Gross Volume
- Gross Level
- Product Temperature
- Net Volume
- Water Volume
- Water Level


By Tank or Manifold



the HOME button. Up to 6 tanks with gross volume are displayed.

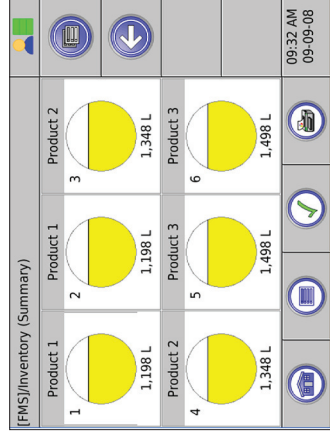


Inventory Summary (Home)

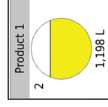

the Tank that you want details on (gross level, product temperature, etc.).

Inventory Details

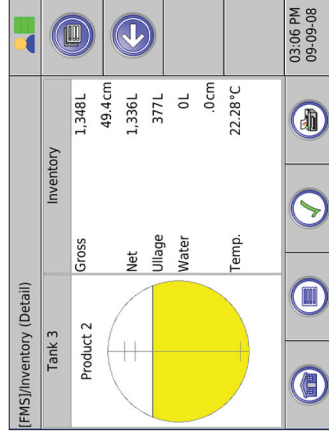

Note: Pressing the Print button while viewing Inventory Summary will print an inventory report for all tanks if an external printer is installed.





Print or E-mail Reports

Printing reports requires an optional external printer. To E-mail reports requires an Ethernet connection and SMTP Server



Press the Main Menu Button.



Press the Reports button.

Select:

- Type of Report
- Desired Tank(s) when applicable
- Print or E-mail
- Date Range of report



Reports

Pressing the reports button displays the list of reports. Other reports including Alarm History, Application Events and Setup are available by pressing the down key.

Enter a Password

Starting an operation that requires a higher access level requires a password. When you're asked for a password, enter it using the buttons shown under the Navigation Icons header. Press the Enter button after you have finished entering in your password.



Start a Static Tank Test

Static tank tests are typically programmed to run automatically. The following steps will allow a static tank test to be started on demand. Review requirements for starting a Static test in the Setup and Operators Guide




Press the Application Menu button.




Press the Control button.



Press the Tanks button.

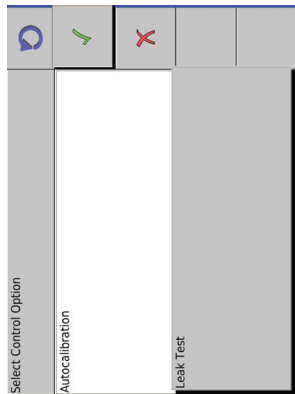


Select

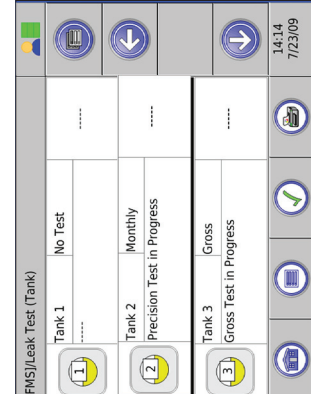

Tanks

Press the Tank to be tested (or the Down button if applicable).

Tank Testing

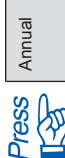

- or -

Note: The parameters of the Monthly and Annual tank tests should be configured during the console setup.


Colibri Quick Reference Guide Tank Monitoring System



View Alarm History



Press the Main Menu button.

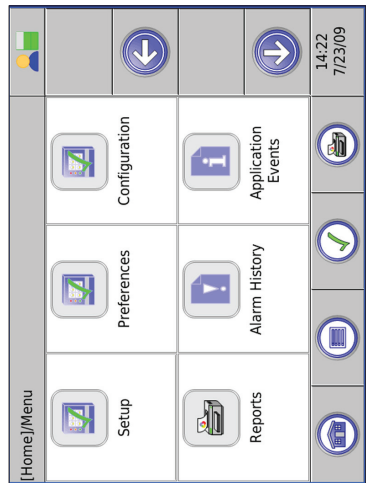

Main Menu



Press the Alarm History button.



Alarm History



Franklin Fueling Systems

www.franklinfueling.com

3760 Marsh Road • Madison, WI 53718, U.S.A.
Tel: +1 608 838 8786 • Fax: +1 608 838 6433
Tel: USA & Canada 1 800 225 9787 • Tel: México 001 800 738 7610

Franklin Fueling Systems GmbH
Rudolf-Diesel-Strasse 20 • 54516 Wittlich • GERMANY