



Chester Facial Steamer

MODEL B88307

User Manual

Please read this user manual carefully before using the product.





www.barneyssalonsupplies.com.au | 1800 676 522

1. About This Manual

This manual should only be used in reference of the operation of this particular model. If the manual is used for the other purposes, or instructions not followed correctly, Barneys Salon Supplies will not undertake any consequences or responsibility. All information in this manual shall be protected by copyright and shall not be copied and/or translated in any part of this specification without consent of the manufacturer.

2. Safety Guidance

To ensure that you use the product correctly, please read the safety guidance carefully before use. This safety guidance can help you use this product correctly to avoid harm to you and your clients and unnecessary property damage. When using this product, basic protective measures must be taken. The safety guidance are as follows.

 
	<p>Warning!</p>	<p>Indicates a dangerous situation that may occur. If not avoided in time, it may lead to serious injury.</p> <p>This product must be used in accordance with the inherent purpose stated in this manual and cannot use the accessories which are not recommended by manufacturer .</p> <p>DO NOT use this device on the following people:</p> <ul style="list-style-type: none"> Women during pregnancy or menstruation, People with allergies, skin diseases, or severe sunburn, People with skin damage, eczema, swelling, etc. People who have just completed surgery and are recovering. <p>When this product is working, do not wind the power cord around the body, and do not use an extended power cord.</p> <p>Keep out of reach of children. Do not allow children to use this product.</p> <p>When using and placing, the power cord must be kept away from high temperature.</p> <p>When this product is powered on, it must not be left unattended.</p> <p>When the power cord and plug of this product are damaged,work abnormally, overturned or dropped in water, you cannot continue to use it. You should send it to the service center for inspection and repair.</p> <p>Do not insert or put any foreign objects into the body and nozzle of this product.</p>
	<p>Attention!</p>	<p>Indicates a dangerous situation that may occur. If it is not avoided in time, it may cause personal injury and property damage in severe cases. When the product is not being used and you need to remove the steamer with hot water, be sure to handle carefully.</p> <p>Please keep it out of reach of children.</p> <p>When using, do not remove the water cup.</p> <p>Do not touch the herbal cap whilst steamer is in use.</p>
	<p>Dangerous (avoid electric shock)</p>	<p>Unplug the power cord immediately after use.</p> <p>Do not use this product while bathing or in a humid environment</p> <p>Do not place or store this product in a location that can easily fall into water.</p> <p>Do not allow water or other liquids to enter the product.</p> <p>If water accidentally falls into the steamer, please do not touch the product and unplug the power cord immediately.</p>
	<p>High temperature attention</p>	<p>When working with this product, please pay attention to high temperature parts such as nozzles and funnel cap to avoid burns.</p>

3. Product Components


Model B88307




Above models currently not available in Australia

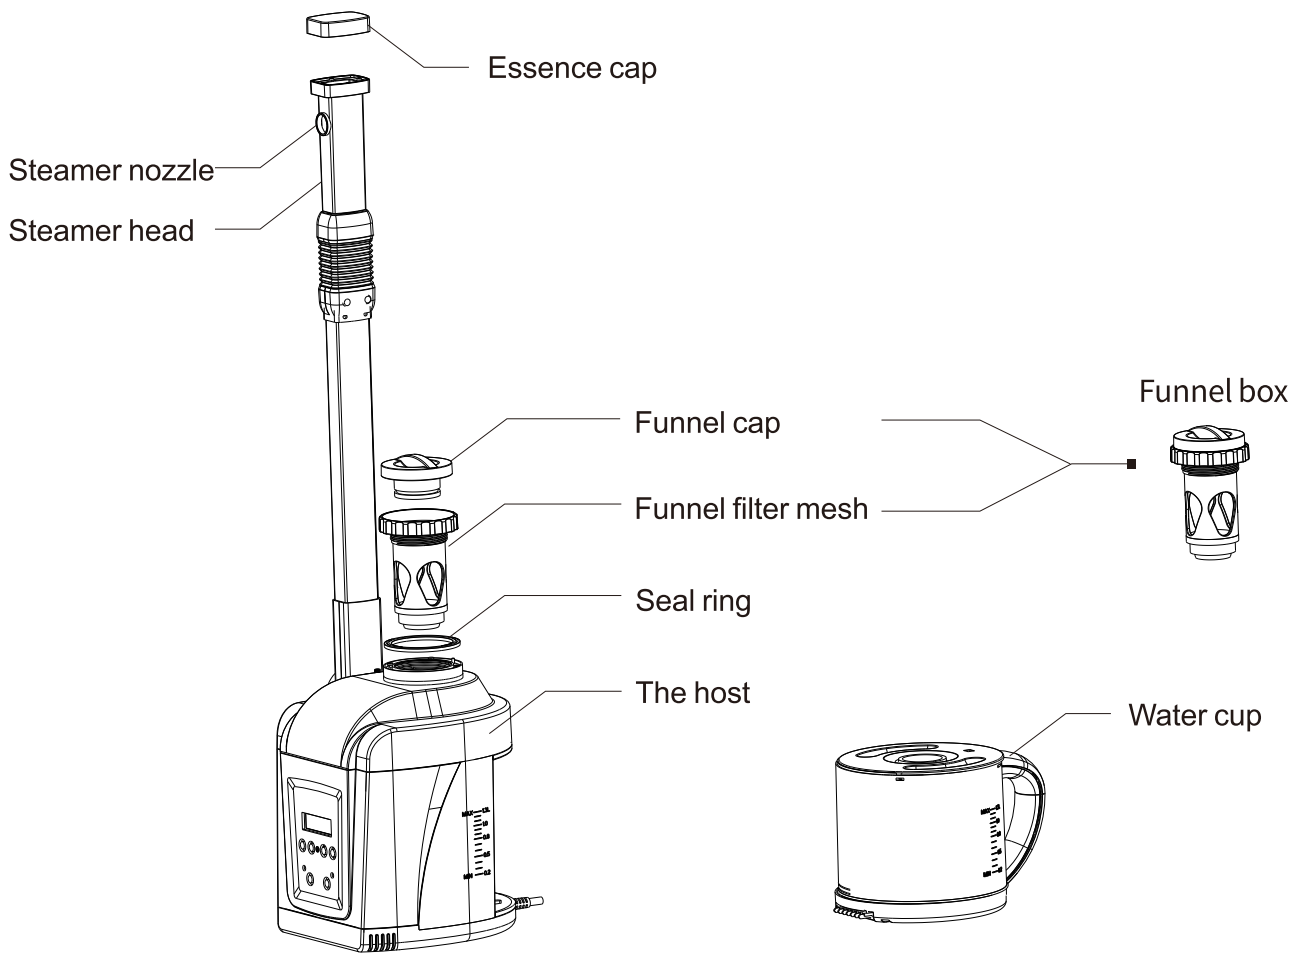


Product Components Continued

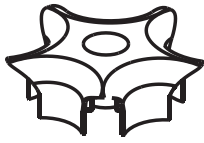 


A Five leg base x 1

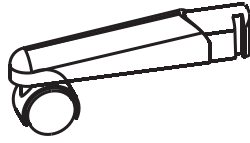 

B Five-wheel leg x 5

 

C Straight post x 1

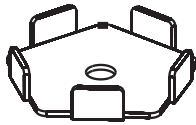 

D Pressing Plate x 1



E 10 Flat Gasket x 1



F 10 Spring Shim x 1



 
G Screw x 1




H Wrench x 1



I Accessories x 1



J Sliding Bar x 1

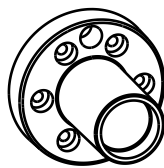 


K Steamer Holder x 1



L Cross screw x 5




 
M Board x 1

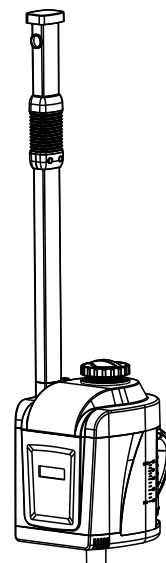

N Facial steamer x 1

  4. Product Assembly

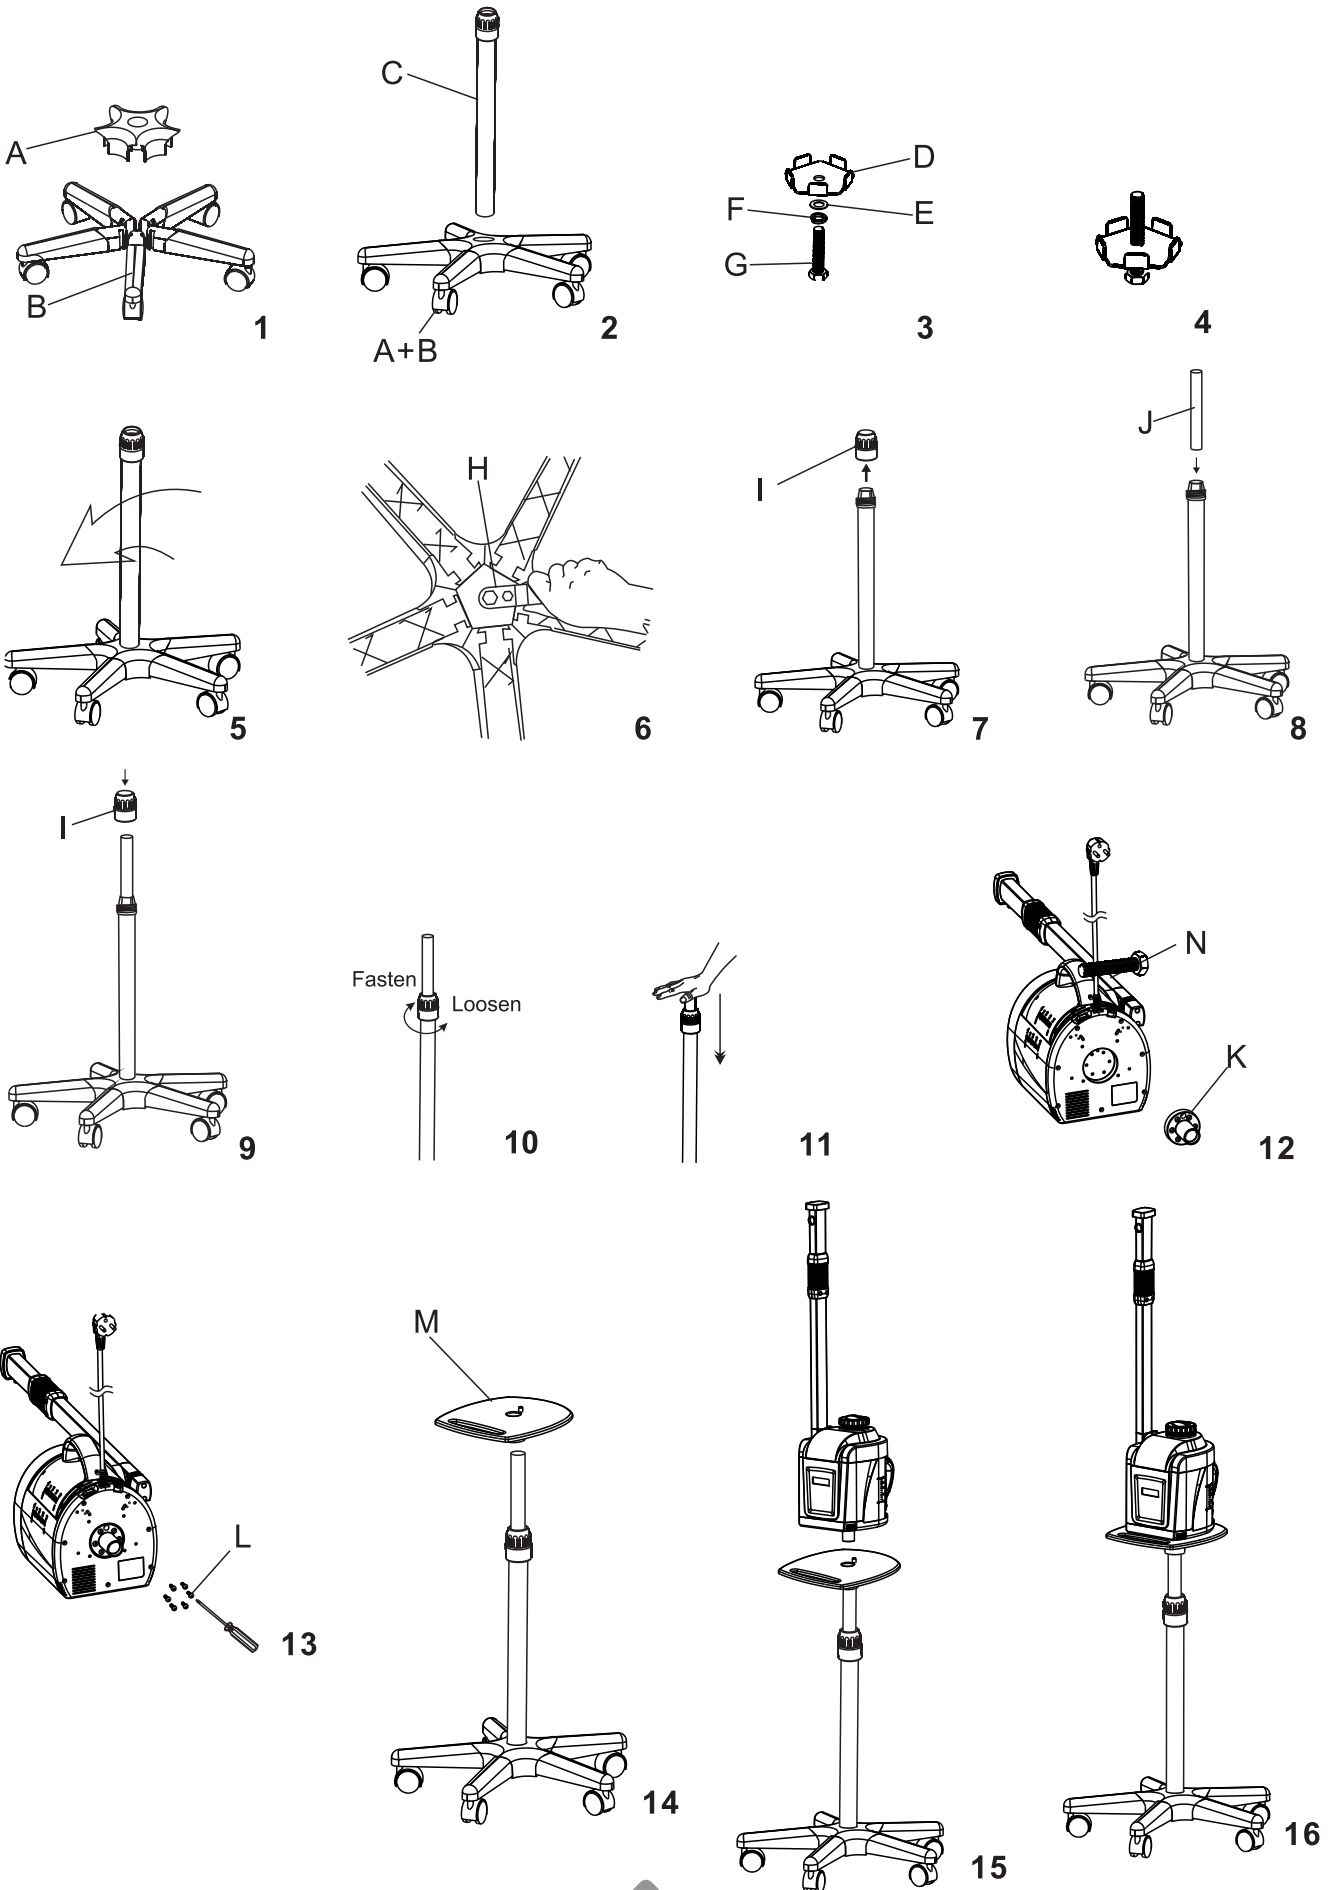

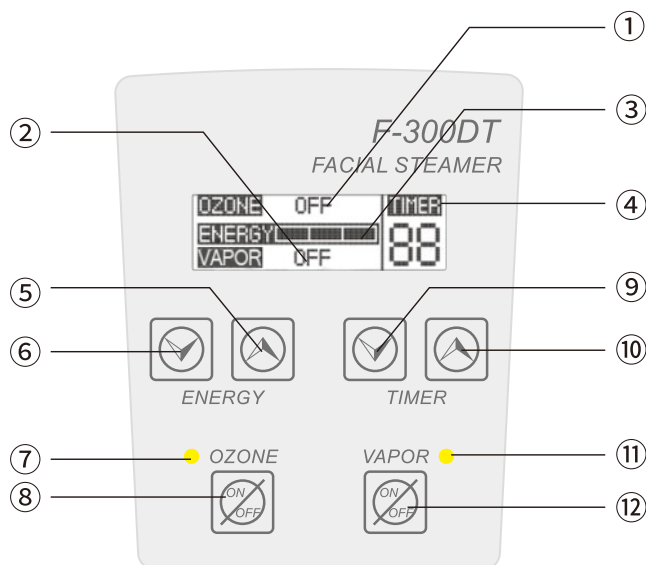

- ① Ozone display ② Spray display
- ③ Energy ④ Timer
- ⑤ Energy increasing button
- ⑥ Energy decreasing button
- ⑦ Ozone indicator light
- ⑧ Ozone switch ON/OFF
- ⑨ Time decreasing button
- ⑩ Time increasing button
- ⑪ Vapor indicator light
- ⑫ Spray switch ON/OFF

When you use this product for the first time, you may find that there is residual water around the water cup. This is the distilled water remaining in the factory used in the aging test, which will not cause any hygiene problems.

4. Product Parameters

Model Type	Model B88307	
Frequency	50/60Hz	
Wattage	650W/800W	
Voltage	AC 100-120V	AC 220-240V

5. Operation Method


Add water Method One

First, unscrew the funnel cap. Then press and hold the gray button on the host, and take out the water cup. Add water to the water cup. After adding water, it needs to be pushed into the pit of the bayonet when it is inserted into the host. After it is inserted, check whether the water cup is installed in place.


Add water Method Two

First, remove the funnel cap and add water. After adding water, please make sure that the funnel cap and funnel filter mesh are tightened.

Please make sure that the water in the water cup is between the safe water level (MIN-MAX) .

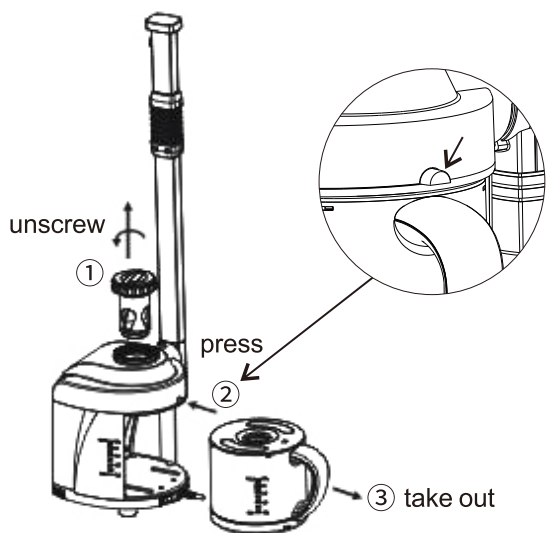

Add water Method One

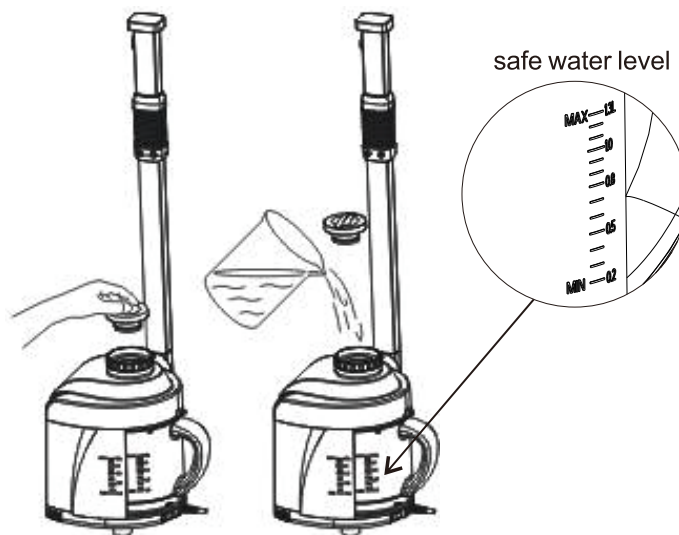


Add water Method Two

Connect power supply

After the host is powered on and self-checked, it enters the standby state. Adjust time and energy. (When the water is at room temperature, the energy should be adjusted to the maximum to shorten the heating time). After the water is boiled, press the ozone switch then the ozone indicator light is on. The steam is obviously converted into a fine mist and sprayed out with smell of ozone. At this time it enters the normal spray state and the beauty operation can be performed.

For the function of aromatherapy spray please open the essence cap on the top of the nozzle and add 2 drops essence. Then close the essence cap (as picture 1)

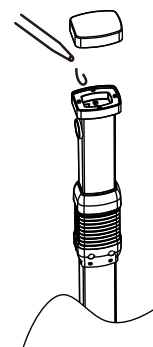

Picture 1



• During operation, do not move water cup and do not tilt, shake or move this product. Otherwise hot water may splash out or a large amount of the steam is ejected from the nozzle.



• When working with this product, please pay attention to high temperature parts such as nozzles and funnel cap to avoid burns.



Warning

Do not open the machine when the water level is lower than the lowest indicator mark
 Do not use this product in direct sunlight or under direct heated light, or this may cause unstable performance
 Do not disassemble the shell or other parts of the product without seeking professional assistance. If required, please contact a professional electrician or your supplier.



Attention

When the water in the water tank is below the lowest water level, the machine will sound a beep tone and stop spraying. At this time, you should add water to reach the correct level and restart the heating function.

Please use purified water. Do not add viscous substances such as flavours or herbal essence to the water cup. This may cause damage to the machine. If this happens and the machine stops working, please turn off the power.


The ozone has a bactericidal effect, therefore, long-term use will cause damage to the skin and destroy the skin's natural composition. Treatment time should be selected according to different skin types.

During operation, do not spray directly on the skin. It may causes burns. You must wait until the nozzle can spray the fine mist stably and evenly before operation.


If there is water leakage whilst using the steamer, first take out the water cup to check whether the seal ring is fitted correctly and then reinstall the water cup. If the situation still does not improve, please contact your supplier or the manufacturer to resolve.

When using this product for the first time, please use tap water, and then use distilled or demineralised water, which will assist to avoid the build up of scale. If the detection function responds incorrectly, it may be that the water quality is too pure. At this time, it can be solved by working with tap water once.


This instrument has a detection circuit. If there is no water in the water cup, the funnel cap is not tightened, etc., the host may not work. At the same time, the machine will also sound "beep" "beep" prompts. The above problems should be eliminated before starting the host.

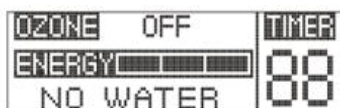

No water

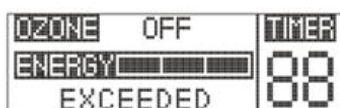

Overfilled

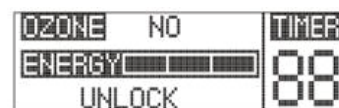

The funnel filter mesh is untightened

Please keep this facial steamer away from the highfrequency instruments. If the circuit board or LCD screen is accidentally interfered , the steamer may stop working suddenly or the quality of performance will be lowered. Normally, please turn off the power,then re-start after 15 seconds. This product can be recovered to the normal working status. If still not improved,please unplug the power immediately and contact the dealer for repair.

If the main body of the funnel cap is not tightened, it will cause steam leakage. But too tight will make the sealing ring of the atomization chamber easy to age, resulting in air leakage. To avoid air leakage caused by the aging of the seal ring of the vapor dispenser,please change the seal ring in every 3 months. Each product has one more seal ring as spare. If it is lost or damaged,please contact the dealer to get a new one for replacement.

Do not add water without the funnel filter mesh. It may easily allow the water to flow to other parts and cause a short circuit.




Do not add water without the funnel filter mesh

Do not pull out the water cup without removing the funnel filter mesh. Otherwise the funnel filter mesh will be broken. Do not remove the host by grabbing the spray arm to avoid loosening and damage to the spray arm.

Please note, take out the water cup after using it every day, and check whether there is any water drops or mist in the place where the water cup is connected to the power supply. If there is water, please clean it immediately with a dry towel and keep the host dry and ventilated. Please turn off the power before cleaning to avoid damage to the product or electric shock.

During operation, you must wait until the fine mist is sprayed stably and evenly before it can be directed at the area that needs to be sprayed. The corresponding distance must be maintained when spraying. The distance can be compared with the following reference table cup (Please refer to Pictures 1 and 2).

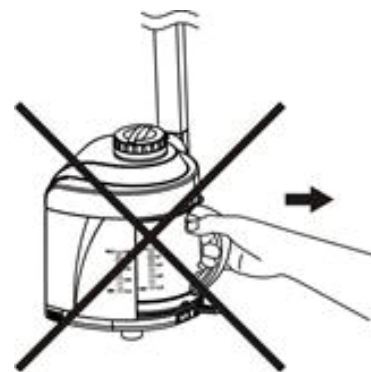

Do not pull out the water cup without removing the funnel filter mesh

Different skin may require different spraying distances. Note the following numbers as a reference guide.

Skin types (remedy suits case)	Distance	Time
Greasy skin, poor blood circulation	35-40cm	About 15 mins
Normal skin	35-40cm	10 mins
Sensitive skin, dry skin	40-50cm	5 mins
Capillary vessel expansion, UV inflammation	40cm	5 mins

6. Instrument Maintenance

When operating, please pay attention to the water level of the water cup.

After operation, please clean the product.

The scale on the water cup and heating plate needs to be cleaned at least once a week or after using funnel twice. Can be scrubbed with a soft metal brush or soaked in vinegar for 5 - 7 minutes. Then rinse it off with tap water. Please note that funnel can not be reused.

Check the seal ring every 2 weeks. If it is deformed or deteriorated, please replace it.

7. Troubleshooting

When an abnormality occurs, stop using it immediately and cut off the power supply. After normal power-on, if the product heats up for no reason before the spray function is turned on. Please cut off the power supply and contact dealer for repair.

Fault Reference	Reason	Solution
The sprayer does not work after pressing the switch button.	1. Power is not connected	1. Turn on the power.
	2. Do not adjust the energy gear	2. Press energy increasing button
The sprayer does not work	1. The switch is not turned on.	1. Turn on switch
	2. Water shortage	2. Add water according to the operation method
	3. Clogged nozzle	3. Clean product according to the maintenance guide

If problems persist after above troubleshooting, please contact maintenance center or supplier.



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

▲ Please check the product specification before use. This manual is for reference only. Specifications are subject to change without prior notice.