

rokono  **BASS+**

PORTABLE SPEAKER
WITH ENHANCED
BASS

USER MANUAL



**WIRELESS
SPEAKER**



1. Introduction

MAKE YOUR MUSIC MOVE WITH YOU

1. This is a single channel Wireless speaker compatible with the Apple iPhone, iPad, iPod, Smart Phone, Laptop, and any other similar devices.
2. The G10 speaker also works with all music devices that use a 3.5mm audio jack.
3. Connect G10 speakers together to create an even bigger sound!



Mobile
Phone
iPhone



PC
Mac
Notebook



iPod
MP3
MP4



Game
Devices

Congratulations on the purchase of your Rokono G10 speaker. With the right care and attention, it will give you many years of trouble free operation. Before using the speaker, please read this manual fully to obtain the best results for using your new speaker.

The lightning flash with arrowhead within equilateral triangles is intended to show the presence of un-insulated dangerous voltage within the speakers enclosure that may constitute a risk of an electric shock.



CAUTION: TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

The exclamation point within an equilateral triangle is intended to alert the presence of important operating and maintenance instructions in this user manual.

SAFETY INSTRUCTIONS

Please read all instruction carefully and retain this user manual for future reference. Please heed all safety warnings and use the speaker in accordance with the manufacturers instructions. Please adjust the volume control to a comfortable level to avoid damaging your hearing and the system.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK:

Do not expose this speaker to rain or moisture. Do not use the speakers near water, and do not immerse them in any liquid or pour any liquid on them.



Warning:

Please do not throw the speaker into fire because it will cause personal injury.

Please do not put the product in any damp or high-temperature areas.

Please do not short the product out to avoid danger.

Please do not disassemble by yourself to avoid electrical shock.

Please do not put the product within easy reach of children.

Please do not insert anything conductive into the sound box body.

2. Speaker Introduction




Closed



Open



Speaker
top

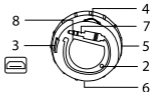

Speaker
bottom

-
1. Speaker
 2. LED power indicating light (the light is RED when charging and turns BLUE when fully charged)
 3. Micro USB Port
 4. Function Key
 5. 3.5mm audio input (connect another G10 speaker)
 6. Power switch
 7. 3.5mm audio cable (connect to non-Wireless devices)
 8. Rubber foot (for grip)

3. Charging the speaker

1. Micro USB lead - connect to the mini speaker
2. USB lead - connect to a computer/laptop USB port, the speaker will begin to charge.
3. 3.5mm audio cable - connect to any device with a 3.5mm audio port (not necessary for charging).



Charging time from empty to full: 2-3 hours

4. How to use







To open: Hold the base and the twist the ridged centre anti-clockwise.




To close: Push the top and the base together; it will close with a click.

1. To turn the speaker on in **Wireless** mode, push the power switch towards the **On** symbol **'ON'**. The speakers LED light will flash red and blue to indicate the speaker is ready for pairing with a device. In the **Wireless** settings on your audio device search for "Rokono G10", when the speaker is paired successfully the LED light will turn blue and stop flashing. You are now ready to start enjoying your music wirelessly!


2. To use your speaker with **non-wireless** devices, push the power switch towards **'LINE'**. Connect your audio device using the built-in 3.5mm audio cable and start enjoying your music! (When connected to the speaker using the **'LINE'** function, the speakers volume is always maximum and can be controlled using your audio devices volume control instead.

3. Press the function key towards  to play previous track, hold function key towards  to turn down the volume. Press the function key towards  to play next track, hold function key towards  to turn up the volume.

4. Press the function key inwards  to pause music and press again to continue playing music.

5. To switch the speaker off, move the power switch in to the **'OFF'** position.

5. Linking speakers

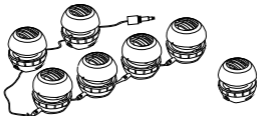

Link speaker together using the built-in 3.5mm audio cable for an even bigger sound!

Power supply:	Lithium battery
Output:	3W
Frequency response:	100HZ-20KHZ
Audio driver:	40mm
SNR:	>85 dbm
Sensitivity:	300 mv
Impedence:	4Ω
Wireless maximum distance:	10M
Charging current:	550mAh
Case material:	ABS
Dimensions:	Closed: (D)64mm * (H)55mm Open: (D)64mm * (H)75mm
Weight:	90g



Please do not force the two halves of the speaker apart as this will damage the product.