

Instruction Manual for Electronic Drum Set


Read through this entire instruction manual BEFORE using the **Electronic Drum Set**.

We're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in workmanship and materials for 1 year from the date of purchase.

For service claims or questions please consult our website ProtocolNY.com.

Battery Installation:

1. Using a Phillips screwdriver, unscrew the battery door from the back of the set.
2. Insert 5 'AA' batteries according to indicated polarity.
3. Close the battery door and screw shut.

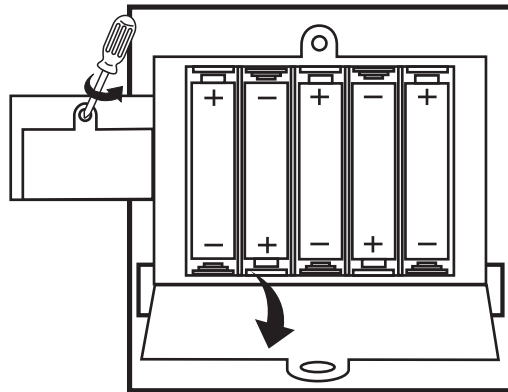

*On the back of this item, there is a switch that says DEMO and PLAY. Leave the switch to PLAY at all times.



Using the Electronic Drum Set

Press the ON button to turn the unit on. Press the OFF button to turn the unit off.


Demo

Press the DEMO button to listen to a sample song. Press the STOP button once to stop the demo.

Drum Pads

Styles

The set features four different drum styles: disco, pop, rock, or r&b. Press the DRUM STYLE button to change between the different styles.

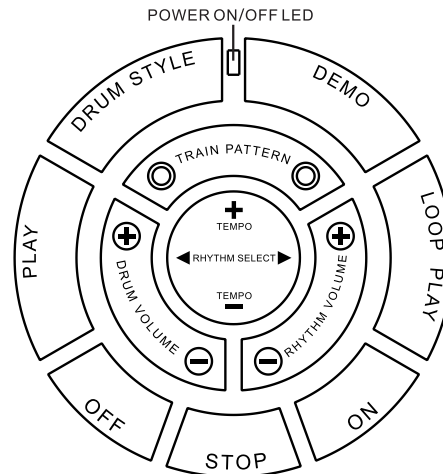

Drum Pad Volume

Press the DRUM VOLUME button up or down to increase or decrease the volume.

Rhythm

Rhythm Selection

The set features 16 different rhythms to choose from. Press the <RHYTHM SELECT> buttons to change between the different rhythms.

Tempo (Speed)

You can alter the tempo of each rhythm by pressing the TEMPO + or the TEMPO - buttons.

Stopping the Rhythm

To stop the rhythm, press the STOP button once. The PLAY button will start the rhythm again.

Rhythm Volume

Press the RHYTHM VOLUME button up or down to increase or decrease the volume.

Looping

For non-stop music, press the LOOP PLAY button. Hit a desired drum pad and the drum sound will be heard followed by non-stop music. Press the STOP button to stop the music and the PLAY button to start it back up. To exit the Looping mode, turn the unit off and then back on.

Looping Volume

Press the DRUM VOLUME button up or down to increase or decrease the volume.

Drum Training

The set features 16 different training patterns to teach the budding drummer how to play. Press the TRAIN PATTERN button to scroll through to a desired pattern. A demo will play two times. After the demo, the drum pads will light up with the pattern and the drummer should follow along. Press the PLAY button if you need to repeat the demo.

Training Volume

Press the DRUM VOLUME button up or down to increase or decrease the volume.