

Instruction Manual

SCREAMIN' COPTERS™

 


Read through this entire instruction manual BEFORE using **Screamin' Copters**. We're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in workmanship and materials. For service claims or questions please consult our website ProtocolDesign.com.

WARNING!

1. Check all parts are included before assembly.
2. Always assemble or disassemble this product under adult supervision.


PARTS IDENTIFICATION:

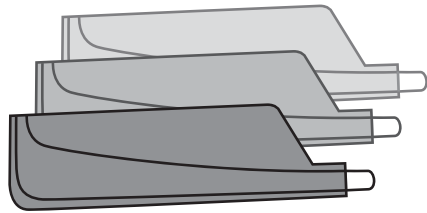

Blades




Rotor

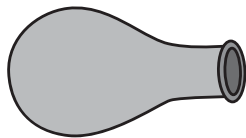

Balloon



Inflation Valve

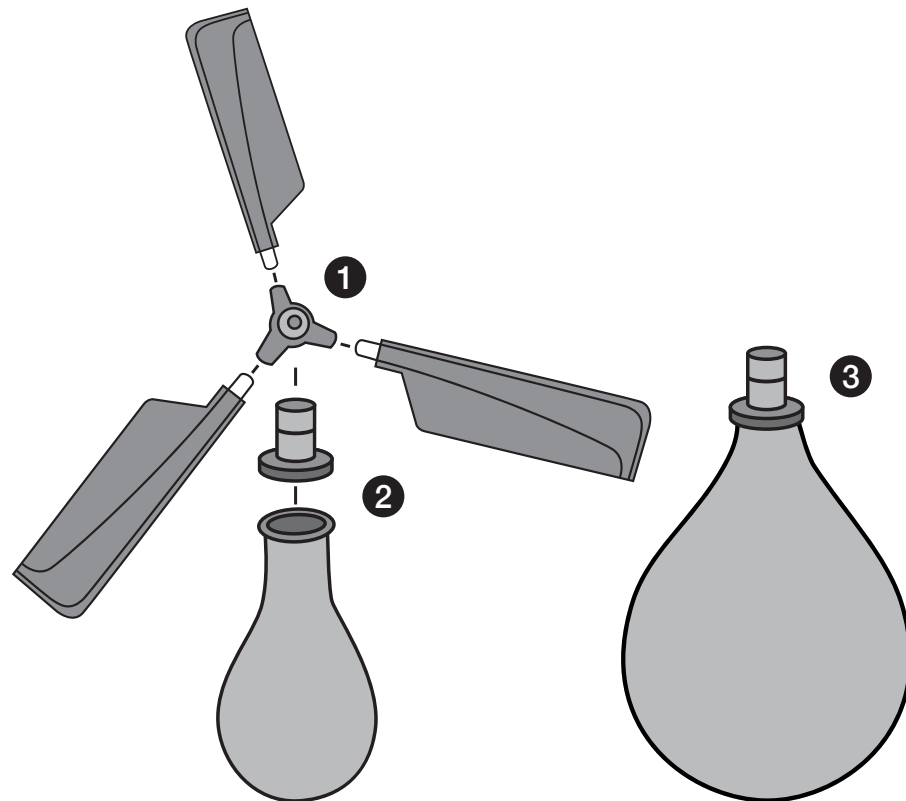

INSTRUCTIONS:

1. Connect blades to the rotor.
2. Wrap balloon around inflation valve.
3. Inflate balloon and hold shut to keep air from leaking.
4. Attach the inflation valve to the rotor.
5. Hold your Screamin' Copter horizontally and release to let it fly!

