

Assembly Instructions for Flat Panel TV Swivel Wall Mount

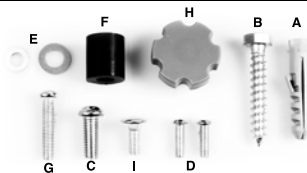 


Fig. 2

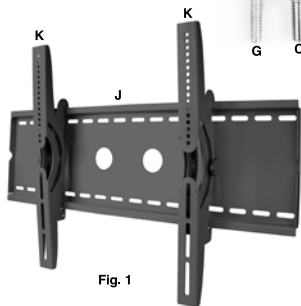 


Fig. 1

Parts Included:

- A) Four plastic anchors
- B) Two two inch heavy duty screws
- C) Four 3/4" bracket screws (optional)
- D) Eight mounting screws (four 3/4" and four 1/2")
- E) Eight washers (4 large and 4 small)
- F) Four spacers (optional to extend distance between wall plate and wall)
- G) Four 1" tightening bolts
- H) Two adjustment knobs
- I) Two adjustment screws
- J) Wall plate
- K) Two arms

Wall Mount Assembly:

Use Figures 1 and 2 for reference when assembling this product.

Make sure to use the studs in your wall before mounting the wall plate. Do not mount this product into the drywall.

1. Drill four holes into the wall taking care to measure the distances to fit the wall plate horizontally (J). Insert the four plastic anchors (A) into the holes and then affix the wall plate to the wall by inserting the four 2 inch heavy duty screws (B) through the slots and into the anchors. Use a drill to secure.
2. Please note the two adjustment screws (I) and adjustment knobs (H) are fixed into each arm (K). The knobs will be used to adjust the angle once the TV is mounted.
3. Take the two arms (K) and install them onto the back of the flat screen TV. Insert mounting screws (D-either size that fits TV) and corresponding washers (E) into the holes on the arms (K) and fit them to the holes on the back of the TV. Use a screwdriver to carefully secure.
4. Take the arms (K) with the TV mounted and fit the grooves onto the top ledge of the wall plate (J). Insert the tightening bolts (G) on the bottom and tighten.
5. Loosen the adjustment knobs slightly (H) and move the arms 15° in a desired direction. Once you have your desired angle, tighten the adjustment knobs.

Warning:

- Use caution when hanging heavy objects.
- Hang only flat screen televisions on wall mount.
- Not for children.