

Thank you for your purchase of **Griller 8-in-1 Grilling Multi Tool.** Backyard BBQs and camping trips just got a lot tastier! This baby features everything needed to make a whole feast on the grill from flipping burgers and measuring meat temperatures to opening icy cold brews. An LED flashlight is also included for nighttime grilling!

The **Griller** is dishwasher safe making clean-up a breeze!

We're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in work-manship and materials for 1 year from the date of purchase.

For service claims or questions please consult our website **ProtocolNY.com.**

Patent Pending



IMPORTANT-PLEASE NOTE: To remove meat thermometer follow these 3 easy steps: Nudge thermometer forward, pop it up gently, and slide out.

Turning on the Thermometer/Timer:

Pull out the plastic tab on the back of the Thermometer/Timer to activate battery. The unit requires 1 'CR1220' 3V battery which is included.

To conserve battery life, the LCD screen will automatically go blank after 5 minutes of inactivity. Press any button to turn it back on.

Setting and Using the Thermometer:

- 1. Press the TEMP | button once to enter the temperature set-up mode.
- 2. Press the ⊕ or ⊝ buttons to reach the desired temperature. To accelerate the numbers, hold the ⊕ or ⊝ down.
- 3. When the temperature reaches the desired level, the alarm will beep. Press any button to silence the alarm.

How to use the Timer with Alarm:

- 1. Press the TIMER So button to enter the timer mode.
- 2. Press the **M** or **S** buttons to set the cook time. The maximum time possible is 99 minutes, 59 seconds. To accelerate the numbers, hold the **M** or **S** down.

 3. Press the TIMER \odot button again to start the countdown.
- 4. The alarm will beep when the timer countdown reaches zero. Press any button to silence the alarm.
- 5. To pause the countdown, press the TIMER 👏 button once and press it again to restart.
- 6. To reset the countdown, press the TIMER 🕲 button and then hold down both
- 7. To enter a new cook time, simply press the \boldsymbol{M} or \boldsymbol{S} buttons.

*Stopwatch setting: Press TIMER \odot button once after resetting countdown to 00. The timer will then count up. To pause the stopwatch, press \odot again. In its paused state, the stopwatch can be reset by holding down both \mathbf{M} and \mathbf{S} buttons. After reset, press \odot to restart stopwatch OR press \mathbf{M} or \mathbf{S} to set Timer with Alarm.

Using the Flashligl

1. Press flashlight power button ♀ once to turn the flashlight on. Press again to turn the flashlight off.

