

PROTOCOL®

# KAPTUR GPS II™

WI-FI DRONE WITH HD CAMERA

INSTRUCTION MANUAL



# THANK YOU.

Thank you for your purchase of Protocol's **Kaptur GPS II Wi-Fi Drone with HD Camera**. You are about to experience the best of what remote control flight has to offer. We strongly recommend that you take the time to read this manual thoroughly. It contains many tips and instructions on how to get the most out of this aircraft and maintain it for a long life.

As with any aircraft, this is a precision flying machine. Treat it well and enjoy all the fun it has to offer, flight after flight.

# TABLE OF CONTENTS

<b>01</b>	Safety & Precautions
<b>02</b>	Parts
<b>04</b>	Remote Battery, Blade Guard, & Phone Installation
<b>05</b>	Charging the Drone
<b>06</b>	Start-Up Procedure
<b>07</b>	Calibrating the Compass
<b>08</b>	Operation
<b>10</b>	Return Home
<b>11</b>	Speed Modes
<b>12</b>	Trim Adjustment
<b>13</b>	Troubleshooting
<b>14</b>	Flying Outdoors
<b>15</b>	Shooting Photo/Video
<b>16</b>	Replacement Parts & Limited Warranty

# SAFETY WARNINGS

## PRECAUTIONARY SAFETY WARNINGS

- Read and follow instructions on how to synchronize electronics before each flight.
- To prevent damage to people or property, always avoid contact with other objects while in flight.
- Focus on flight. Do not participate in other activities such as texting that would distract from flight.
- Do not fly under the influence of alcohol or drugs.
- Inspect aircraft prior to each flight and do not fly if damaged.
- Never expose product or any of its electronic parts to moisture, water, or heat sources.
- Charge device in a cool, dry place and under adult supervision. Never leave the device unattended while charging.
- To prevent overheating, allow battery a cool-down period before recharging.
- To prolong engine life, allow a cool-down period between flights.
- Use only the charger and/or charging cable that is supplied with this item.
- Do not strike, cut, or pierce the internal battery or subject it to hard impacts.
- Do not mix old and new batteries or mix different types of batteries.
- Never attempt to modify function of vehicle or controller or attempt repairs using parts other than those supplied by Protocol. Spare parts are available at [www.protocolny.com](http://www.protocolny.com).
- Do not travel or bring on an airplane with the battery over 5% charged.

**THIS DEVICE USES COMPONENTS THAT OPERATE AT HIGH SPEEDS.  
AS WITH ANY SUCH DEVICE, USE CAUTION TO OPERATE SAFELY.**

 
**FAILURE TO FOLLOW ANY OF THESE GUIDELINES MAY RESULT IN  
BODILY INJURY OR DAMAGE TO PERSONAL OR PUBLIC PROPERTY.**

## WARNINGS

### FAA FLIGHT REGULATIONS

- Observe local FAA rules and regulations for flight.
- Do not fly in unpermitted locations.
- Go to [www.faa.gov/uas](http://www.faa.gov/uas) to learn more about FAA drone regulations.
- This drone weighs under .55lbs and does not require registration.

# PARTS

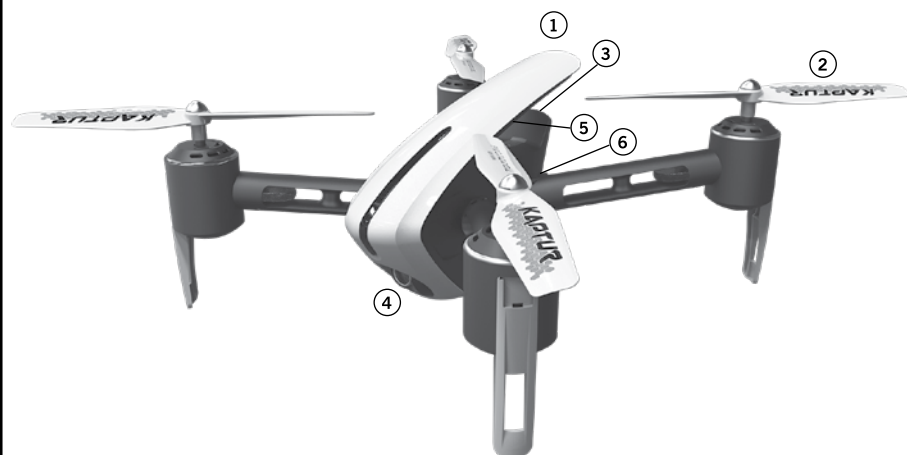

## DRONE

1. Canopy
2. Blade
3. Battery Compartment
4. Camera
5. ON/OFF Switch
6. Memory Card Slot\*

\*Memory card and card reader are not included and may be purchased separately at your local dealer.

 
## ON/OFF SWITCH



## BATTERY COMPARTMENT



# PARTS

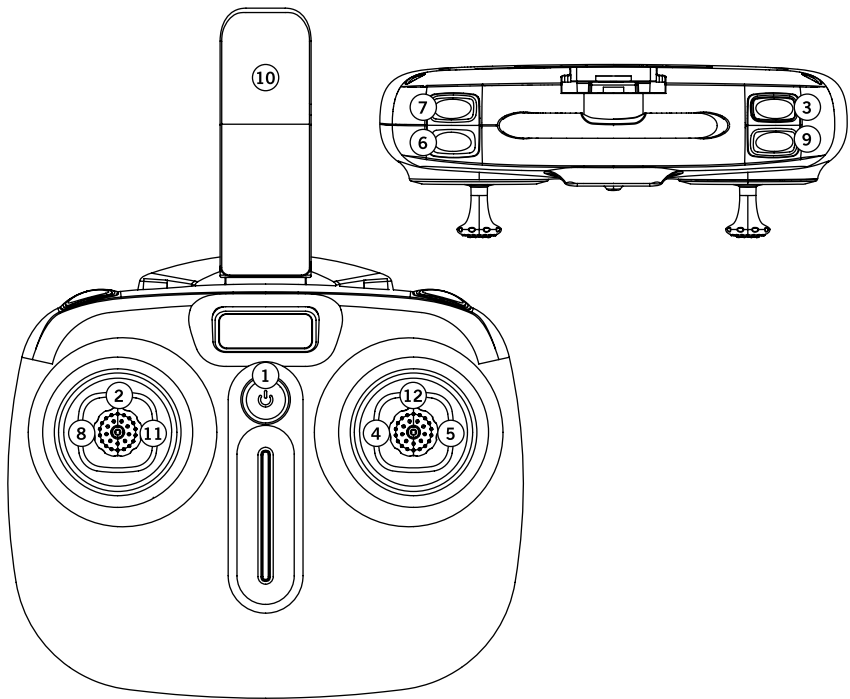


## REMOTE

1. Power Switch
2. Trim (press in)
3. Return Home
4. Forward/Backward
5. Bank Left/Right
6. Video
7. Photo
8. Throttle
9. Auto Take Off/Land
10. Phone Clamp (not installed)
11. Turn Left/Right
12. Speed Mode Selector (press in)

## SPARE PARTS INCLUDED

- Replacement Blades
- Screwdriver
 
# REMOTE BATTERY, BLADE GUARD & PHONE INSTALLATION

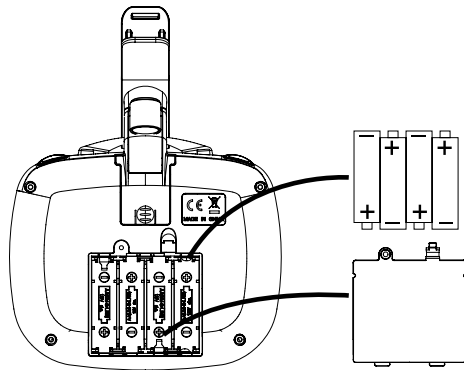

Unscrew and remove battery cover from controller. Insert 4 x 'AA' batteries according to indicated polarities. Replace and screw back in battery cover.


1. Install batteries carefully.
2. Do not mix old and new batteries.
3. Do not mix different types of batteries.

## INSTALLING THE BLADE GUARD

 If not already installed, install the included blade guards by snapping them in. Make sure the blade guards are secure and snug.




NOTE:

Loose blade guards may interfere with propeller movement and cause a crash. If the drone crashes, double check to make sure the blade guard is not loose. If it is, re-tighten before flying.

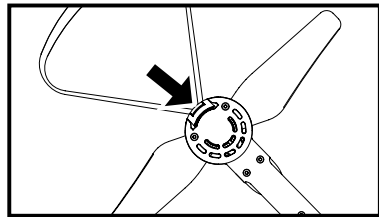

## INSTALLING THE PHONE CLAMP

   1. Remove the clip cover from the remote control.
2. Insert the phone clamp into the now empty slot on the remote.
3. Open the clamp to fit the phone.

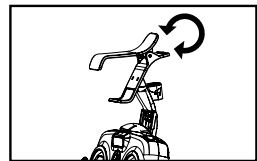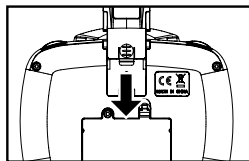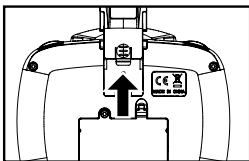




# CHARGING THE DRONE BATTERY

1. Make sure the drone is turned off.
2. Press in on the two tabs and pull out the cartridge battery from the drone.
3. Connect the USB charging cable to the battery.
4. Plug the charger into a USB port. The USB light will flash green while charging and will turn steady once fully charged.
5. Plug the battery back into the drone.  
Charging time: 140 minutes --- Flying time: approximately 12 minutes.

DO NOT CHARGE OVERNIGHT OR BEYOND THE CHARGING TIME STATED. DO NOT LEAVE BATTERY UNATTENDED.

 \*Battery: Li-Po, 7.4V, 700mAh

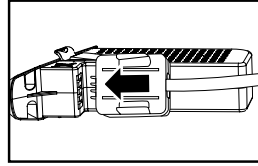

## BATTERY SIGNALS

Lights are steady	Power is over 20%
Lights quickly flash twice every second	Power is under 20% - approximately 3 minutes left of flight time.

If you purchased extra batteries, allow the engines to cool between flights in order to prolong engine life.

 
## CAUTION WHEN CHARGING

1. When charging, place product on a dry, well-ventilated surface and keep away from heat sources.
2. Always use adult supervision while charging.
3. In order to increase battery longevity, avoid repeat charging and excessive discharging.
4. As battery temperature is high immediately after flight, charge after cooling down for higher efficiency.
5. Do not strike or subject battery to hard impacts or sharp surfaces.
6. Do not use any other charger than that which is supplied with this item.
7. Do not use or leave battery near a heat source such as fire or space heater; exposure to heat may result in reduced performance or in some cases dangerous conditions.
8. If battery is left in charging state for an extended period of time after being fully charged, the battery may automatically discharge.
9. Never leave the battery unattended during charging.
10. Do not disassemble battery.
11. Do not submerge battery in water.

# START-UP PROCEDURE

Before flying, the drone and transmitter must be turned on in sequence and synchronized.

1. Turn on the drone and place it on an even surface. The blue lights on the drone are at the front and the yellow are at the back.
2. Turn on the remote control.
3. Both indicators on the drone and the remote will flash while they are syncing.
4. Push the throttle up and then down to sync. You will hear two beeps and the lights will go steady.

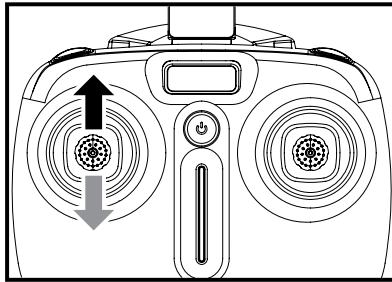

## NOTE:

1. While the drone is in process of synchronizing, the lights will flash quickly. When the process is completed, the lights will go steady. This is your indication that the process is completed.
2. If after 30 seconds, it has not recognized the drone, turn off the controller and repeat Start-Up procedure.

# CALIBRATING THE COMPASS

 
Once the drone and remote have synced, you must calibrate the compass.

1. Push the throttle to the lower right corner and hold. Press the Return Home button once (Fig.1).
2. The indicator lights will begin to flash slowly. Release the throttle and pick up the drone, holding it horizontally and 1 meter from the ground.
3. Slowly rotate 360° horizontally until the indicators begin to flash quickly (Fig. 2). You may have to rotate a few times.
4. Hold the drone vertically and rotate 360° until the indicators are steady (Fig. 3). You may have to rotate a few times.

\*Never calibrate in areas with numerous and large metal objects such as parking lots. Do not have your phone on you while calibrating.

## CONNECTING TO SATELLITE

Once you have calibrated, you may notice the battery's backlight flashing. The drone is searching for satellite signals. Once it has found enough GPS points, the light will turn steady and the drone is ready to fly.

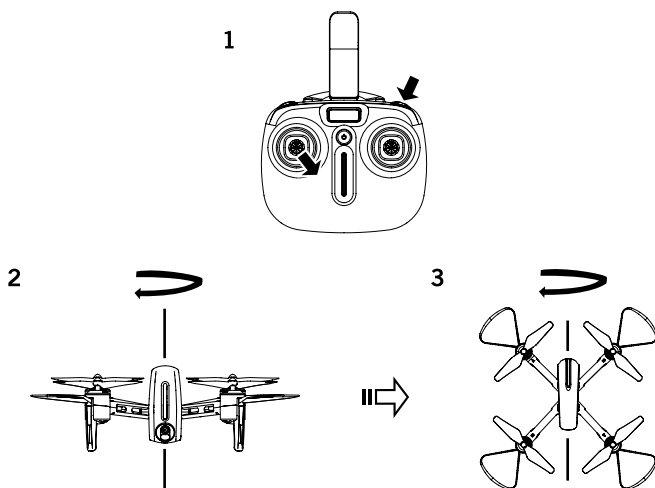



# OPERATION: FLYING THE DRONE

## STARTING THE ENGINE

After synchronizing the drone, move the throttle up and release to go into Idle mode. The blades will rotate but the drone will not lift.

OR

  After synchronizing the drone, pull the throttle and direction stick to the center at the same time and release. The blades will rotate but the drone will not lift.

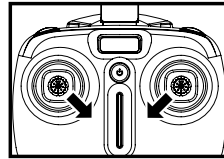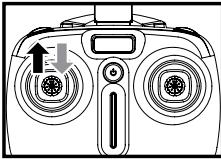


## TAKE-OFF

1. Press the take off button. The remote will beep and the drone will hover a few feet off the ground. Then gently advance the throttle to a desired height and release. The drone will hover at that height.\*

OR

 2. From Idle mode, gently advance the throttle up to a desired height and release. The drone will hover at that height.\*


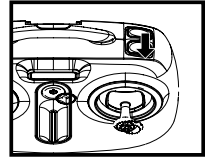


## LANDING

1. Press the landing button to lower the drone to the ground.

OR

  
2. Push down on the throttle until the drone is on the ground.

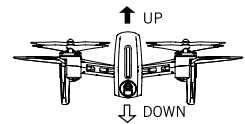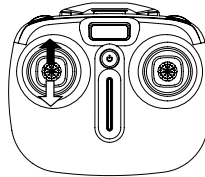

NOTE:

- The engine will shut off if you choose to hold the throttle down for 3 seconds.

 - **Emergency Shut Off: When in flight, pull the throttle and direction stick to the center at the same time and the drone will shut off. Emergency Shut Off only works at altitudes under 10 feet.**


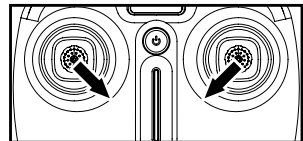


\* The drone may drift a bit, especially in the first 30 seconds until the altitude sensor gets a good fix on the position. Some drift is normal.

# OPERATION: FLYING THE DRONE

 
 
## FIRST TIME FLYERS!!! TAKE YOUR TIME! GO SLOW!

Practice hovering until you are comfortable with flight before attempting any other maneuvers. Make small movements letting the stick return to the center. If you start to lose control, don't panic. Just press land.

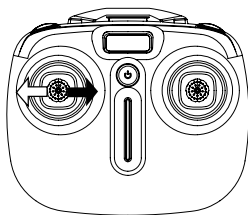



Pull the throttle left or right,  
the drone turns to the left or right.

  ---

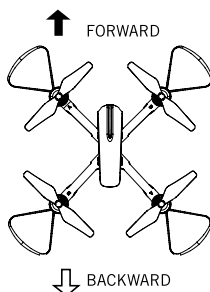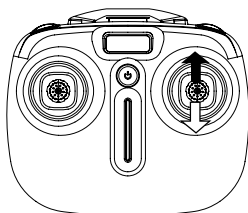

Push the direction lever up or down,  
the drone flies forward or backward.

  ---

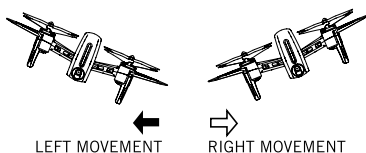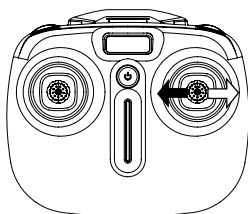

Pull the direction lever to the left or right,  
the drone banks to the left or right.

# RETURN HOME

When in the Return Home mode, the drone may not take a direct path back to the take off location due to satellite signals and other variants. You can make left and right banking adjustments but other directional controls will be disabled.

\*To exit Return Home mode, press and hold the Return Home button for 2 seconds. The remote control will beep twice indicating that it has left Return Home.

**If you feel that you have lost control of the drone, exit Return Home and press land.**

- \* If you wish to exit Return Home mode, press and hold the Return Home button for 2 seconds.
- \*\* If the GPS signal is weak, the return home function will not work and you will need to manually fly the drone back to you.
- \*\*\* Dependent on the GPS signal, the drone may not return to the precise location from where it took off from. Variation of a few feet is to be expected.

 
## **GEO-FENCING**

The drone's GPS will automatically create a virtual boundary to keep the drone within transmission range. The boundary will extend to 150 meters from take-off. When the drone reaches the boundary, it will stay there and not fly further away.



\*Wind can affect the Geo-Fencing function and push the drone out of the boundary. Always exercise caution when flying outdoors.

# SPEED MODES

The Kaptur GPS II features two speed modes. Choose the speed based on flight experience and level of comfort. At high speed the drone will pitch more than at low speed. Kaptur GPS II is quite fast at its high speed and requires more piloting skills to fly competently. For safety take time to develop advanced skills by practicing at low speed first. The drone is preset to low speed. Press the direction stick in to change the speed mode. The remote will beep once for low speed and twice for high speed.

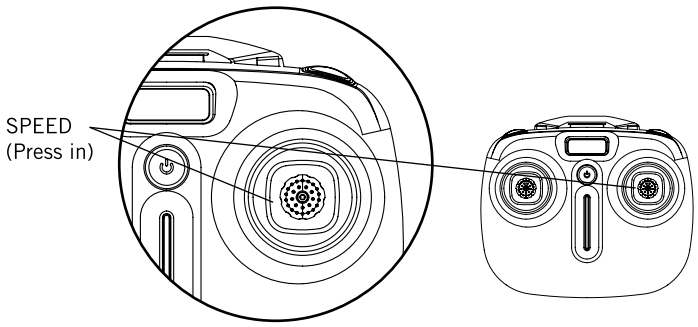



# TRIM ADJUSTMENT

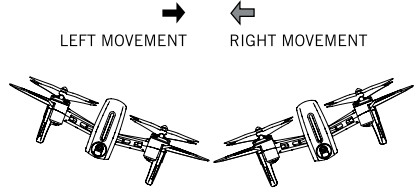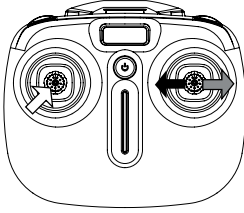  

## SIDWAYS TRIM

When the drone drifts to the left or right side unintentionally, you can correct it by pressing in the throttle and holding while moving the direction stick in the opposite direction until it evens out.

 
 
---

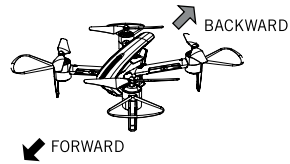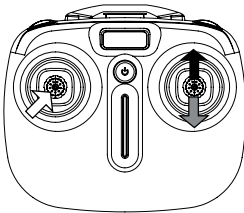

## FORWARD/BACKWARD TRIM

When the drone drifts forward/backward unintentionally, you can correct it by pressing in the throttle and holding while moving the direction stick in the opposite direction until it evens out.

  ---

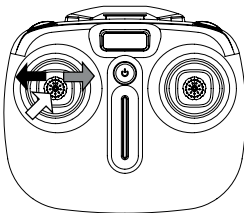

## LEFT/RIGHT TRIM

When the drone drifts left/right unintentionally, you can correct it by pressing in the throttle and holding while moving it in the opposite direction until it evens out.

\*NOTE: Trim adjustments are designed to counter drifts not caused by wind.



# TROUBLESHOOTING

## RE-CALIBRATING THE ALTITUDE SENSOR

If the drone crashes and after re-starting and trimming, it still is unstable, you have the option to re-calibrate the drone.

 
1. Turn on the drone and then the remote and sync.
2. Push and hold the both the throttle and direction stick to the lower right corners for 2-3 seconds.
3. The lights will flash to indicate that the drone has re-calibrated.

\*Allow 15 minutes to pass between full flights as this will give the motors a chance to cool down. Failure to do so could wear out and shorten the life of the motors.

SYMPTOM	POSSIBLE CAUSE	POTENTIAL SOLUTION
Kaptur GPS II does not respond	<ol style="list-style-type: none"><li>1. Communication between controller and aircraft was not synchronized during set up</li><li>2. Battery power depleted on aircraft, controller or both.</li></ol>	<ol style="list-style-type: none"><li>1. To synchronize, turn on aircraft first, place it on level ground, and then turn on controller.</li><li>2. Charge aircraft and/or replace batteries in controller.</li></ol>
Response to control inputs intermittent or erratic	<ol style="list-style-type: none"><li>1. Controller battery power nearly depleted.</li></ol>	<ol style="list-style-type: none"><li>1. Replace batteries in controller.</li></ol>
Kaptur GPS II will not hover or strafe correctly	<ol style="list-style-type: none"><li>1. The aircraft was not on level ground during synchronization.</li><li>2. Trim settings are incorrect.</li></ol>	<ol style="list-style-type: none"><li>1. Re-synchronize aircraft and controller.</li><li>2. Recalibrate the Altitude Sensor.</li><li>3. Reset the trimmer by turning the drone off. Press in on the throttle and hold while turning the drone back on.</li></ol>

## HOW TO CHANGE THE BLADES

- All drones have two rotors that spin clockwise and two rotors that spin counter-clockwise.
- Make sure to place the blades on the correct axis or they will not spin correctly and the drone will not lift.
- Each blade is marked on its top with A or B. There may be a number after the letter but you can ignore the number.
- Make sure to follow the graphic below to see where to place the blades.

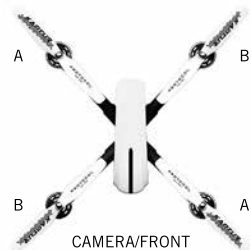

# FLYING OUTDOORS

## HOW TO PREVENT FLY AWAYS

To prevent “fly-away” situations (where drones seem to fly away out of control) it is important to first test and practice within close range before letting the drone fly too far away.

Each drone is designed to turn off the engines if the radio signal is lost. It is important to know and test the range of your drone before flying. We recommend turning on and syncing the drone and walking away while testing the engines. Keep walking and testing until it is obvious when you reach the point where the signal is not controlling the drone. This will be the control limit for the conditions in which you are flying. Distance does vary somewhat based on environmental and weather conditions, so testing the limit is advised. Fly in a range that is good for easy visual operation of the drone.

## IF YOU CAN'T SEE YOUR DRONE, THEN YOU CAN'T CONTROL YOUR DRONE.

\* Fly-aways are not covered by warranty as they are overwhelmingly caused by pilot error.

# SHOOTING PHOTO/VIDEO

Kaptur GPS II has the capability to record photo/video direct from the remote to a storage card (sold separately) inserted into the drone.

1. If you have purchased a memory card, insert it into the slot on the drone until you hear a click.
2. Set the camera in a desired position by pushing it up or down. Touch only the outer rim of the camera. Do not touch the lens.

## SHOOTING PHOTOS AND VIDEO

1. Turn on the drone and sync.
2. Photo: Push the Photo button and the camera will take a photo. The lights on the drone will flash once as it's taking the picture.
3. Video: Push the Video and the camera will begin to record. The lights on the drone will flash continuously while recording. Push the Video button again and the camera will stop recording.
4. Press the memory card to unlock and remove. Plug it into a USB card reader (not provided). Then plug the card reader into the USB port of your computer. If you are using Windows, the USB will come up on the removable drive. If you are using OS, then the USB will come up as "Untitled".
5. Open the drive and then open the Video or Photo folders to access the .AVI or JPEG files.
6. .AVI movies can be played in several different formats including Quicktime, Windows Media Player, and RealPlayer.

**WARNING: Never remove the card from the video camera while the drone is turned on.**

 
## REPLACEMENT PARTS

Thank you for your purchase of Protocol's **Kaptur GPS II Wi-Fi Drone with HD Camera**. We know that accidents can sometimes happen and that is why we offer spare parts kits on our website: [www.ProtocolNY.com](http://www.ProtocolNY.com).

## LIMITED WARRANTY

At Protocol, we're dedicated to bringing you innovative and well-designed products that make living fun and easy. We stand behind all of our products and warrant this to be free from defects in workmanship and materials for 30 days from the date of purchase. The warranty does not cover transportation damage, misuse, accident, or similar events. Specific legal rights pertaining to this warranty may vary by state.

For service claims or questions please consult our website [www.ProtocolNY.com](http://www.ProtocolNY.com).

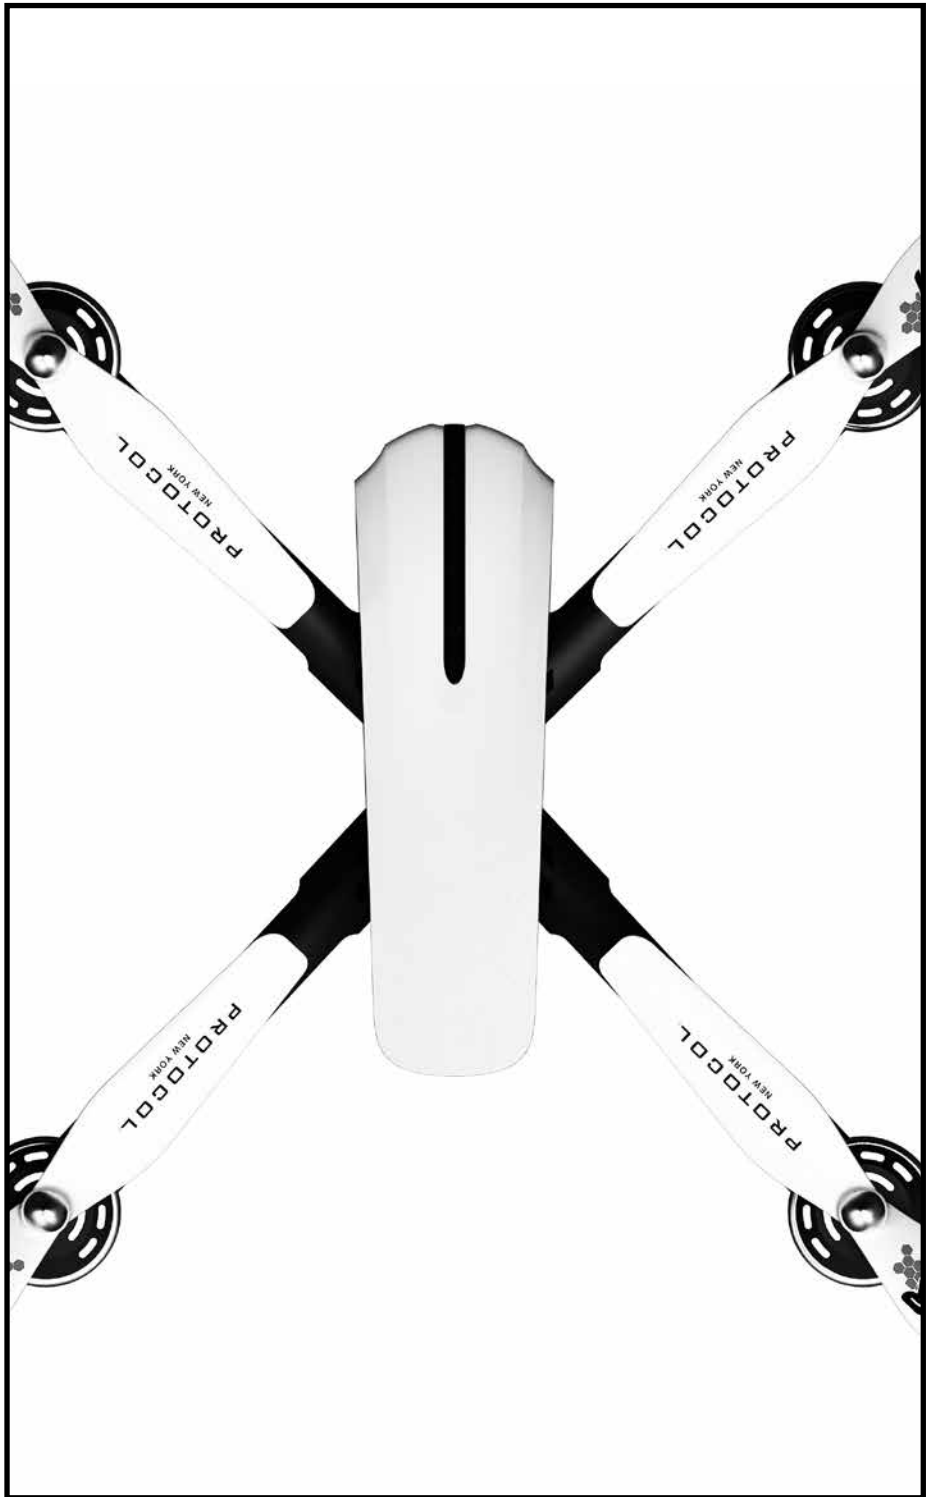



# Wi-Fi AND APP INSTRUCTIONS FOR KAPTUR GPS II Wi-Fi DRONE WITH HD CAMERA

Age  
**14+**



**\*Please check our website ProtocolNY.com for updates and instructions to our Apps.**

**Note: NO CARD** – If you press the Video or Photo Buttons on the remote and there is no memory card inserted into the drone, the app screen will flash “NO CARD”. This means that you are not recording photo or video.

You can either:

A. Purchase a memory card and reader. Insert the card into the drone and follow the instructions on pg. 15 of the main booklet to record and upload photo/video.

OR

B. Follow the below instructions to record, view, and download photos and video through the app.

## Phone Mount

1. Install the phone mount and phone to the remote.

## Install the App:

1. The App is available in both Apple and Android APP stores. Search “Protocol Kaptur GPS II” and download the App to your smartphone.

## Shooting Video/Photo

1. Turn on the Kaptur and the remote control.
2. Once it is turned on, the Kaptur will transmit a Wi-Fi signal, “Kaptur”. Make sure your smartphone is connected to that signal.
3. Open the app and press “START” (Fig. 1).
4. The screen will show and live stream the camera view.
5. To film video, hit the video icon once. To stop filming, hit the icon again (Fig. 2)
6. To snap pictures, press the photo icon once.

## Shooting in VR

1. Insert the phone in a VR viewer.
2. Press the VR icon (Fig. 3). The phone will shoot and live stream in VR mode.
3. Press the VR icon again to leave VR mode.



FIG. 2



FIG. 3



FIG. 1

## Viewing and Saving Recorded Video/Photo

To see recorded video and images, press the folder icon. There are two subfolders, one for photo and one for video (Fig. 4).

1. To download photos and video to your phone, hit select and pick the content you want to save. Then hit the copy icon to save to the phone.
2. All videos can be viewed in VR mode through the App. Press the VR button when viewing the video. You cannot view VR video through the phone’s photo album.



FIG. 4

## GPS Features:

Press the GPS icon to access the GPS features.

\*Kaptur GPS range is accurate within 10 feet dependent on phone and outdoor conditions.

## Return Home:

1. Press the Return Home icon and it will turn green.
2. The words “Returning Home” will flash on the screen for three seconds.
3. Kaptur will return back to the area where it took off from.

## Follow Me:

**IMPORTANT:** Kaptur will automatically maintain a minimum horizontal distance of approximately 32 feet. If Kaptur is closer than 32 feet when Follow Me is pressed, it will not engage.

Pilots can adjust the Follow Me distance beyond the 32 foot minimum.

1. Fly Kaptur to a desired Follow Me distance.
2. Press the Follow Me icon and it will turn green. Kaptur will follow the phone and maintain the distance it was at when Follow Me was pressed.
3. To shut off Follow Me, press the icon again.

## Orbit:

1. Press the Orbit icon and it will turn green. Optional Map and Satellite views are available.
2. Fly to the point that you want Kaptur to circle.
3. Press GO.
4. Kaptur will start to circle that point at a radius of 16 feet. Use the direction stick to widen the orbit. Kaptur will maintain a minimum radius of 16 feet.
5. To shut off Orbit, press GO again.

## Waypoint:

1. Press the Waypoint icon and it will turn green. Optional Map and Satellite views are available.
2. Tap the desired location on the map. Kaptur can fly approximately 400 feet away. Any further and the app will say “Beyond the Scope”.
3. Press GO and Kaptur will fly to the set location.



## Icon Key

- |                 |                   |                        |
|-----------------|-------------------|------------------------|
| 1. GPS          | 8. VR Mode        | 15. Speed (Horizontal) |
| 2. Return Home  | 9. Gallery        | 16. Speed (Vertical)   |
| 3. Follow       | 10. GPS Signal    |                        |
| 4. Orbit        | 11. Wi-Fi Signal  |                        |
| 5. WayPoint     | 12. Battery Level |                        |
| 6. Take Photo   | 13. Distance      |                        |
| 7. Record Video | 14. Altitude      |                        |