INSTRUCTIONS FOR USE

- 1. When opening the box, the shovel and ax heads are loose. The saw is packed in the handle.
- 2. The saw must remain in the handle in order to use the ax or shovel. To install, push the ax or shovel onto the handle making sure it locks into place (Fig. 1).
- 3. For the Ax, there is an additional locking screw to keep it sturdy (Fig. 2).
- 4. To remove, push in the button while pulling the ax or shovel.
- 5. To remove the saw, press the button while pulling the saw out.
- 6. Then push the saw into the handle making sure it locks into place.
- 7. All tools store neatly in the included carry case. Please note the saw must store in the handle in order to fit.





Check out Protocol's other fantastic new tools at ProtocolNY.com!

We're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in workmanship and materials for 1 year from the date of purchase.

For service claims or questions please consult our website ProtocolNY.com.

Patent pending

PROTOCOL.

PROTOCOL®, MULTISMART™ is a trademark of Protocol, New York, NY 10107 Package design, trademarks and all copy © Protocol. All Rights Reserved. For warranty details see www.protocolny.com.





