

Instruction Manual for Smart Screwdriver

Read through this entire instruction manual BEFORE using your Smart Screwdriver.



Installing the Batteries:

1. Your Smart Screwdriver comes with 3 lithium button cell batteries.
Pull plastic tab to activate battery and to use light.
2. It is time to replace batteries once the light becomes weak. Open battery compartment by unscrewing screw located adjacent to level on top of screwdriver.
3. Lift battery compartment cover.
4. Remove spent batteries and dispose of according to manufacturer instructions.
5. Insert batteries by aligning them according to polarity. Batteries should be stacked with positive (+) side down and negative (-) side up. Polarity is noted on surface of battery face.
6. Replace battery compartment cover and screw on securely.

Using Your Screwdriver:

1. Remove bit cover by pulling off bottom of screwdriver (side without light).
2. Select screwdriver bit from among 2 slotted and 2 crosspoint bits.
3. Insert selected bit by inserting opposite end of bit into slot on front end (light end) of screwdriver. Bit will be held in place magnetically.
4. When finished using, remove bit by pulling it out. Replace bits in storage compartment when not in use.
5. To turn on screwdriver light, press round button atop screwdriver body. Press again to extinguish light.
6. Use level by placing screwdriver flush against surface. When bubble is perfectly centered between two parallel lines, surface is level.